

56 Series

Mounting Face: NEMA 56C, 143TC and 145TC

The 56,X00 Series have the following design features:

- Spring-Set Electrically Released
- Static Torque 1.5 through 25 lb-ft
- Adjustable Torque, down to 50% of rated nameplate torque
- Manual Wear Adjustment
- Airgap Adjust Gage
- Splined Hub
- IP 21, 23 & 54 (formerly referred to by Stearns as NEMA type 1, 2 & 4 respectively)
- IP 55, 56, & 57 (formerly referred to by Stearns as NEMA Type 4X (BISSE Certified with epoxy coating and stainless steel hardware on exterior, or with a stainless steel enclosure)
- Universal mounting through 15 lb-ft. The 20 and 25 lb-ft are supplied with springs for vertical modification.

Specifications:

- Lead Wire Length: 24 inches
- Maximum Speed:
Horizontal 5000 rpm
Vertical 3600 rpm
- Coil Insulation: Standard Class B
Optional Class H
(56,800 Series Class H standard)
- Certified: CSA File LR-6254
- ABS Type Approval Certified

Product Overview

56000 Series

Designed for industrial applications requiring high performance in a compact lightweight package.

Construction:

Die cast aluminum endplate with stamped steel housing

Available Enclosures:

IP 23, 54 & 55

Release Type:

External knob manual release with or without automatic reset

Through Shaft Capability: Yes (IP 23 only)



56700 Series

Units designed for industrial applications that fit between a standard C-Face motor and gear reducer. Can also be used to retrofit installed units without braking capability.

Construction: Die cast aluminum endplate and housing

Available Enclosures:

IP 23, 54, 55 & 56

Release Type: External knob release with automatic reset

C-face brake has output shaft



56200 Series

Designed for industrial applications requiring the protection of a heavy duty cast iron enclosure.

Construction:

Cast iron endplate and housing.

Available Enclosures: IP 56 & 57

Release Type:

External side lever release with automatic reset

Through Shaft Capability: Yes



Also Available . . .

56100 Series

Full die cast aluminum endplate and housing with internal release lever

Available Enclosures:

IP 23, 56 & 57



56500 Series

Same as 56000 Series with 182TC / 184TC mounting.

Construction:

Cast iron endplate with stamped steel housing

(Direct mount to 182TC / 184TC)

Available Enclosures:

IP 23, 54 & 55

Release Type:

External knob manual release with or without automatic reset

Through Shaft Capability: Yes (IP 23 only)



56300 Series

Die cast aluminum endplate with stamped steel housing and external maintained release, IP 21



56400 Series

Cast iron endplate with stamped steel housing and external knob release

Available Enclosures:

IP 23 & 54



56900 Series

For use in severe environments found in process industries such as food, pulp and paper mills and chemical plants.

Construction: Stainless steel

Release Type:

Side lever with automatic reset

Available Enclosures: IP 56 & IP 57

Through Shaft Capability: with IP43 rating only



56600 Series

Cast iron endplate and housing with internal release lever

Available Enclosures: IP 23, 56 & 57



Series 56,000; 56,100; 56,200; 56,300; 56,400; 56,500; 56,600; 56,700; and 56,900

Mounting Face: NEMA 56C, 143TC and 145TC

[BACK TO PRODUCT OVERVIEW](#)

Engineering Specifications

Maximum Solenoid Cycle Rate: ① Thermal Capacity: ②
AC 36 cycles/min Horizontal 9 hp-sec/min (112 watts)
DC 10 cycles/min Vertical 6.5 hp-sec/min (80 watts)

- ① Maximum solenoid cycle rate is based on ambient temperature of 72°F (22°C) with 50% duty cycle.
Does not relate to brake cycle rate (see Thermal Capacity).
- ② Thermal capacity rating is based on ambient temperature of 72°F (22°C), stop time of one second or less, with no heat absorbed from motor. Refer to *Selection Procedure* Section.

Series 56,000; 56,100; 56,300; 56,500; and 56,700

Nominal Static Torque	Number of Friction Discs	Coil Size		Inertia (WK ²)
lb-ft (Nm)		AC	DC	lb-ft ² (kgm ² x 10 ⁻⁴)
1.5-3 (2-4)	1	4	4+	.008 (3.36)
6 (8)	1	K4	K4+	.008 (3.36)
10 (14)	2	K4	K4+	.014 (5.88)
15 (20)	2	K4+	M4+	.014 (5.88)
20 (27)	3	K4+	M4+	.020 (8.40)
25 (34)	3	M4+	P4+	.020 (8.40)

Series 56,200; 56,400; 56,600; and 56,900

Nominal Static Torque	No. of Friction discs	Coil Size		Inertia (WK ²)
lb-ft (Nm)		AC	DC	lb-ft ² (kgm ² x 10 ⁻⁴)
3-6 (4-8)	2	4	4+	.014 (5.88)
10 (14)	2	K4	K4+	.014 (5.88)
15 (20)	2	K4+	M4+	.014 (5.88)
20 (27)	3	K4+	M4+	.020 (8.40)
25 (34)	3	M4+	P4+	.020 (8.40)

Current Ratings (amperes)

Solenoid Coil Size*	AC Current	Voltage: 60 Hz					Voltage: 50 Hz			Voltage: DC			
		115	200	230	400	575	110	220	380	24	95	115	230
4	Inrush	3.6	2.1	1.8	1.1	.9	4.1	2.1	.9	13.3	3.6	2.8	1.5
	Holding	.3	.2	.2	.08	.08	.3	.2	.08	.3	.1	.05	.03
4+	Inrush	—	—	—	—	—	—	—	—	12.0	4.7	3.7	2.0
	Holding	—	—	—	—	—	—	—	—	.4	.1	.08	.04
K4	Inrush	4.3	2.5	2.2	1.3	1.1	3.8	1.9	1.1	17.5	4.7	3.7	2.0
	Holding	.3	.2	.2	.1	.08	.4	.2	.08	.4	.1	.08	.04
K4+	Inrush	4.6	2.5	2.3	1.2	1.0	4.9	2.0	1.0	20.5	7.5	5.5	2.0
	Holding	.4	.2	.2	.1	.08	.4	.2	.1	.5	.1	.08	.04
M4	Inrush	3.0	1.7	1.5	.9	.8	—	—	.8	—	—	—	—
	Holding	.6	.3	.3	.2	.1	—	—	.1	—	—	—	—
M4+	Inrush	4.6	2.5	2.3	1.2	1.0	4.1	2.0	1.3	30.3	7.9	5.5	2.0
	Holding	.4	.2	.2	.1	.08	.4	.2	.1	.5	.1	.1	.04
P4+	Inrush	—	—	—	—	—	—	—	—	30.3	11.3	8.4	3.0
	Holding	—	—	—	—	—	—	—	—	.5	.1	.08	.04

Motor Frame Adapters: Series 56,000 through 56,600

WARNING! Before selecting an adapter to mount a brake on a larger motor frame, the torque and thermal capacity required by the application should be determined as shown in the "Selection Procedure" section. A larger motor may indicate a requirement for greater thermal capacity than the brake is designed for. The brake selection must be matched to the motor and application requirements, before use of an adapter is considered.

To Adapt to NEMA Frame Size	AK Dim. in. (mm)	Reg. No.	Brake Enclosure ①	Brake Torque	Adapter Stock Number	Additional Shaft Length Required in. (mm)
182TC 184TC 213TC 215TC 254TC 256TC	8.50 (215.90)	-9	IP 23	1.5-15	5-55-5041-00 List \$700.00	.94 (23.81)
	8.50 (215.90)	-9	IP 54	1.5-6	5-55-5041-00 List \$700.00	.94 (23.81)
	8.50 (215.90)	-9	IP 23	20 & 25	5-55-5043-00 List \$700.00	.94 (23.81)
	8.50 (215.90)	-9	IP 54	10-25	5-55-5043-00 List \$700.00	.94 (23.81)

① 56,300 Series have NEMA 1 enclosure. For adapter dimensions, see *Technical Data*

Brake set and release times in milliseconds, when brake and motor are switched separately (for T1/T2 definitions, see page 98):

Static Torque lb-ft	Coil Size	T1	T2
1.5 - 25	4, K4, K4+, M4+	25	14

Ordering and Identification Information

The following example and tables provide information for selecting the appropriate three-letter suffix when ordering a Stearns Brake.

Example of a complete part number:

1-056-034-00-BFF — Lead wire position (internal and external, left and right) standard
Series — 230 Vac
Torque — 5/8 bore and 3/16 x 3/32 keyway
Enclosure —

Hub Selection

Character	Bore (in.)	Keyway** (in. x in.)
A*	5/8	1/8 x 1/16
B	5/8	3/16 x 3/32
C	3/4	3/16 x 3/32
D	7/8	3/16 x 3/32
E	1-1/8	1/4 x 1/8
F*	1-1/4	1/4 x 1/8
K	1/2	1/8 x 1/16
L*	1	1/4 x 1/8
N*	9/16	1/8 x 1/16
O*	11/16	3/16 x 3/32
P*	1-1/16	1/4 x 1/8
R*	13/16	3/16 x 3/32
S*	15/16	1/4 x 1/8
Z	.460	pilot bore

Minimum bore is .500. Maximum allowable bore is 1.25. For through-shaft applications, .875 is maximum

*These bores are non-standard. Add \$225.00 to list price.

**Keyseats made to ANSI B17.1 Standard.

Standard AC Voltage Ratings

Character	Voltage	Hz
B	115	60
D	110	50
E	200	60
F	230	60
H	190	50
L	220	50
M	460	60
N	380	50
O	415	50
P	575	60
Q	110/220	50
R	208-230/460	60
	190/380	50
	200/400	60

Modifications are available—see SAB Modification Section

Direct Current

Character	Voltage
T	12
U	24
V	36
W	48
X	95
Y	115
Z	230


Consult factory if other DC voltage is needed.

Voltages below 70VDC are polarity sensitive.

Dimensional Drawings are on the pages following.

**Series 56,000 (1-056-0XX-00) &
Series 56,000-80 (1-056-0XX-80)**
**Mounting Face: NEMA 56C,
143TC and 145TC**
4.5" AK, 5.88" AJ

[BACK TO PRODUCT OVERVIEW](#)

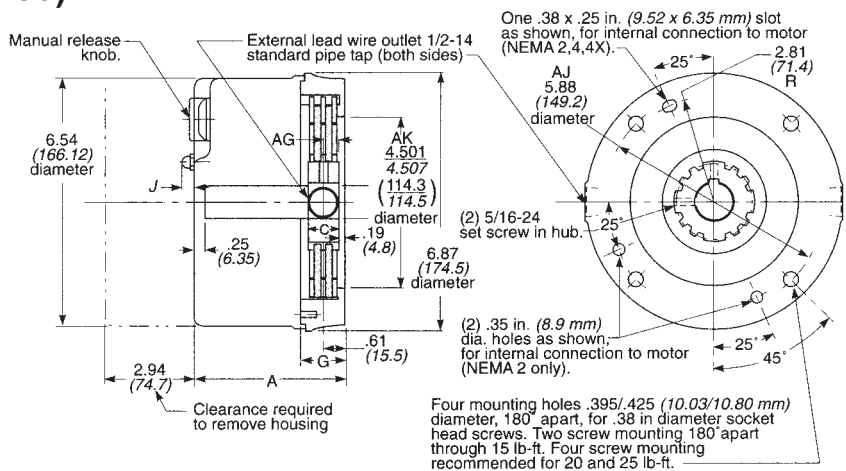

Dimensions for estimating only.
For installation purposes request certified prints.

Series 56,000 Pricing (Discount Symbol B4)

Nominal Static Torque lb-ft (Nm)	Enclosure	Basic Model Number and List Price**			
		AC	AC List Price**	DC	DC List Price**
1.5 (2)	IP 23	1-056-001-00	\$430.00	1-056-005-00	\$730.00
	IP 54	1-056-002-00	565.00	1-056-006-00	865.00
	IP 55	1-056-004-00	640.00	1-056-008-00	940.00
3 (4)	IP 23	1-056-011-00	450.00	1-056-015-00	750.00
	IP 54	1-056-012-00	585.00	1-056-016-00	885.00
	IP 55	1-056-014-00	660.00	1-056-018-00	960.00
6 (8)	IP 23	1-056-021-00	515.00	1-056-025-00	815.00
	IP 54	1-056-022-00	650.00	1-056-026-00	950.00
	IP 55	1-056-024-00	725.00	1-056-028-00	1,025.00
10 (14)	IP 23	1-056-031-00	615.00	1-056-035-00	915.00
	IP 54	1-056-032-00	755.00	1-056-036-00	1,055.00
	IP 55	1-056-034-00	830.00	1-056-038-00	1,130.00
15 (20)	IP 23	1-056-041-00	715.00	1-056-045-00	1,015.00
	IP 54	1-056-042-00	855.00	1-056-046-00	1,155.00
	IP 55	1-056-044-00	930.00	1-056-048-00	1,230.00
20 (27)	IP 23	1-056-051-00	805.00	1-056-055-00	1,105.00
	IP 54	1-056-052-00	940.00	1-056-056-00	1,240.00
	IP 55	1-056-054-00	1,015.00	1-056-058-00	1,315.00
25 (34)	IP 23	1-056-061-00	900.00	1-056-065-00	1,200.00
	IP 54	1-056-062-00	1,035.00	1-056-066-00	1,335.00
	IP 55	1-056-064-00	1,110.00	1-056-068-00	1,410.00

Enclosure: Lightweight Steel Housing, Aluminum Endplate

Enclosure Protection: IP 23, 54 & 55
(formerly referred to by Stearns as NEMA 2, 4 & 4X* respectively)
(*BISCC certified)

Mounting: Fanguard mounted brakes requiring IP 54 or IP 55 protection may require additional sealing measures beyond seals provided with the brake. Refer to Installation & Service Instruction sheets.

Installation and Service: P/N 8-078-905-60

Parts List: P/N 8-078-906-00

Modifications: Pages 51-60

IP 23 Dimensions

Nominal Static Torque lb-ft (Nm)	Dimensions in Inches (Dimensions in Millimeters)					Wt lbs (Kg)
	A	AG	C Hub Width	G	J	
1.5 (2)	4.06 (103.1)	.52 (13.2)	.81 (20.6)	1.23 (31.2)	.31 (7.9)	8 (3.6)
3 (4)						8 (3.6)
6 (8)						8 (3.6)
10 (14)						8 (3.6)
15 (20)						8 (3.6)
20 (27)	4.50 (114.3)	.52 (13.2)	1.18 (30.0)	1.66 (42.2)	.31 (7.9)	9 (4.0)
25 (34)						9 (4.0)

IP 54 / 55 Dimensions

Nominal Static Torque lb-ft (Nm)	Dimensions in Inches (Dimensions in Millimeters)					Wt lbs (Kg)
	A	AG	C Hub Width	G	J	
1.5 (2)	4.06 (103.1)	.47 (11.9)	.81 (20.6)	1.21 (30.7)	.37 (9.4)	8 (3.6)
3 (4)						8 (3.6)
6 (8)						8 (3.6)
10 (14)	4.51 (114.6)	.59 (15.0)	1.18 (30.0)	1.66 (42.2)	.37 (9.4)	9 (4.0)
15 (20)						9 (4.0)
20 (27)						9 (4.0)
25 (34)						9 (4.0)

Series 56,000- 80* Pricing (Discount Symbol B4)

Nominal Static Torque lb-ft (Nm)	Enclosure	Basic Model Number and List Price**			
		AC	AC List Price**	DC	DC List Price**
1.5 (2)	IP 54	1-056-002-80*	\$500.00	1-056-006-80*	\$800.00
3 (4)	IP 54	1-056-012-80*	520.00	1-056-016-80*	820.00
6 (8)	IP 54	1-056-022-80*	585.00	1-056-026-80*	885.00
10 (14)	IP 54	1-056-032-80*	690.00	1-056-036-80*	990.00
15 (20)	IP 54	1-056-042-80*	790.00	1-056-046-80*	1,090.00
20 (27)	IP 54	1-056-052-80*	875.00	1-056-056-80*	1,175.00
25 (34)	IP 54	1-056-062-80*	970.00	1-056-066-80*	1,270.00


* 56,000-80 Series includes a C-face gasket only, no hub seal.

** Subtract \$30.00 for brake ordered less hub.

Series 56,200 (1-056-2XX) Cast Iron & Series 56,900 (1-056-9XX) Stainless Steel Mounting Face: NEMA 56C, 143TC and 145TC 4.5" AK, 5.88" AJ

Installation and Service:
P/N 8-078-905-60

Modifications: Pages 51-60

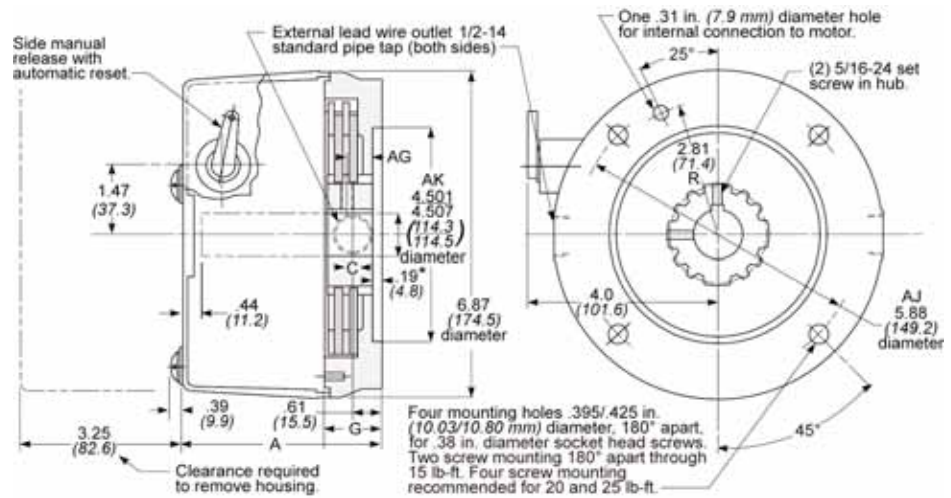

56,200 Series: Heavy Duty Cast Iron Enclosure

Dimensions for estimating only. For installation purposes request certified prints.

Parts List: P/N 8-078-906-02

Enclosure:

IP 56 & 57 (formerly referred to by Stearns as NEMA Type 4X, BISSC Certified)

Mounting: Fanguard-mounted brakes requiring IP 56 or IP 57 protection may require additional sealing measures beyond seals provided with the brake - Refer to Installation & Service Instruction Sheets.



56,900 Series: Stainless Steel Enclosure

Parts List: P/N 8-078-906-09

Enclosure Protection:

IP 56 & 57 (formerly referred to by Stearns as NEMA Type 4X)

Mounting: Fanguard-mounted brakes requiring IP 56 or IP 57 protection may require additional sealing measures beyond seals provided with the brake - Refer to Installation & Service Instruction Sheets.

Series 56,900 Pricing (Discount Symbol B4)

Nominal Static Torque lb-ft (Nm)	Enclosure	Basic Model Number and List Price*			
		AC	AC List Price*	DC	DC List Price*
3 (4)	IP 57	1-056-914-00	\$3,425.00	1-056-916-00	\$3,725.00
6 (8)	IP 57	1-056-924-00	3,490.00	1-056-926-00	3,790.00
10 (14)	IP 57	1-056-934-00	3,595.00	1-056-936-00	3,895.00
15 (20)	IP 57	1-056-944-00	3,695.00	1-056-946-00	3,995.00
20 (27)	IP 57	1-056-954-00	3,780.00	1-056-956-00	4,080.00
25 (34)	IP 57	1-056-964-00	3,875.00	1-056-966-00	4,175.00

* Subtract \$30.00 for brake ordered less hub.

IP 56 / IP 57 Dimensions

Nominal Static Torque lb-ft (Nm)	Dimensions in Inches (Dimensions in Millimeters)				Wt lbs (Kg) 56,200	Wt lbs (Kg) 56,900
	A	AG	C Hub Width	G		
3 (4)					17 (7.7)	17 (7.7)
6 (8)					17 (7.7)	17 (7.7)
10 (14)	4.82 (122.4)	.59 (15.0)	1.18 (30.0)	1.66 (42.2)	18 (8.0)	17 (7.7)
15 (20)					18 (8.0)	17 (7.7)
20 (27)					21 (9.5)	21 (9.5)
25 (34)					21 (9.5)	21 (9.5)

Series 56,200 Pricing (Discount Symbol B4)

Nominal Static Torque lb-ft (Nm)	Enclosure	Basic Model Number and List Price*			
		AC	AC List Price*	DC	DC List Price*
3 (4)	IP 56	1-056-212-00	\$1,350.00	1-056-216-00	\$1,650.00
	IP 57	1-056-214-00	1,425.00	1-056-218-00	1,725.00
6 (8)	IP 56	1-056-222-00	1,415.00	1-056-226-00	1,715.00
	IP 57	1-056-224-00	1,490.00	1-056-228-00	1,790.00
10 (14)	IP 56	1-056-232-00	1,520.00	1-056-236-00	1,820.00
	IP 57	1-056-234-00	1,595.00	1-056-238-00	1,895.00
15 (20)	IP 56	1-056-242-00	1,620.00	1-056-246-00	1,920.00
	IP 57	1-056-244-00	1,695.00	1-056-248-00	1,995.00
20 (27)	IP 56	1-056-252-00	1,705.00	1-056-256-00	2,005.00
	IP 57	1-056-254-00	1,780.00	1-056-258-00	2,080.00
25 (34)	IP 56	1-056-262-00	1,800.00	1-056-266-00	2,100.00
	IP 57	1-056-264-00	1,875.00	1-056-268-00	2,175.00

Series 56,300 (1-056-3XX)

[BACK TO PRODUCT OVERVIEW](#)

Mounting Face: NEMA 56C, 143TC and 145TC , 4.5" AK, 5.88" AJ




56,300 Series Enclosure: IP 21 (formerly referred to by Stearns as NEMA 1), Stamped steel housing, cast aluminum endplate

Release Type: Lever, maintained

Parts List: P/N 8-078-906-03

Installation and Service:

P/N 8-078-905-60

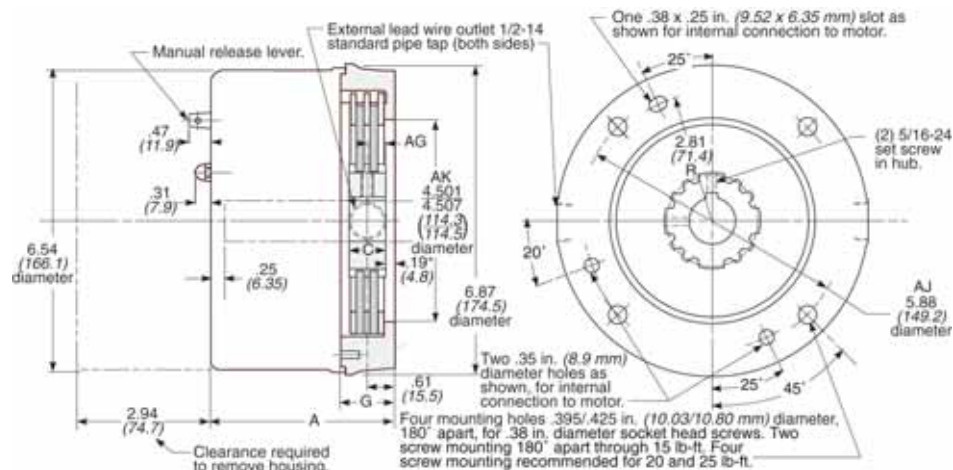

Series 56,300 Pricing (Discount Symbol B4)

Nominal Static Torque lb-ft (Nm)	Basic Model Number and List Price*			
	AC	AC List Price*	DC	DC List Price*
1.5 (2)	1-056-301-00	\$445.00	1-056-305-00	\$745.00
3 (4)	1-056-311-00	465.00	1-056-315-00	765.00
6 (8)	1-056-321-00	530.00	1-056-325-00	830.00
10 (14)	1-056-331-00	630.00	1-056-335-00	930.00
15 (20)	1-056-341-00	730.00	1-056-345-00	1,030.00
20 (27)	1-056-351-00	820.00	1-056-355-00	1,120.00
25 (34)	1-056-361-00	915.00	1-056-365-00	1,215.00

*Subtract \$30.00 for brake ordered less hub.

IP 21 Dimensions

Nominal Static Torque lb-ft (Nm)	Dimensions in Inches (Dimensions in Millimeters)				Wt lbs (Kg)
	A	AG	C Hub Width	G	
1.5 (2)					8 (3.6)
3 (4)					8 (3.6)
6 (8)	4.01 (101.9)	.59 (15.0)	.81 (20.6)	1.21 (30.7)	8 (3.6)
10 (14)					8 (3.6)
15 (20)					8 (3.6)
20 (27)	4.46 (113.3)	.59 (15.0)	1.18 (30.0)	1.66 (42.2)	9 (4.0)
25 (34)					9 (4.0)

Series 56,400 (1-056-4XX)

56,400 Series: Stamped steel housing, cast iron endplate.


Enclosure Protection: IP 23 & 54 (formerly referred to by Stearns as NEMA 2 & 4 respectively)

Release Type: Knob, maintained

Mounting: Fanguard-mounted brakes requiring IP 54 protection may require additional sealing measures beyond seals provided with the brake - Refer to Installation & Service Instruction sheets

Parts List: P/N 8-078-906-04

Installation and Service: P/N 8-078-905-60

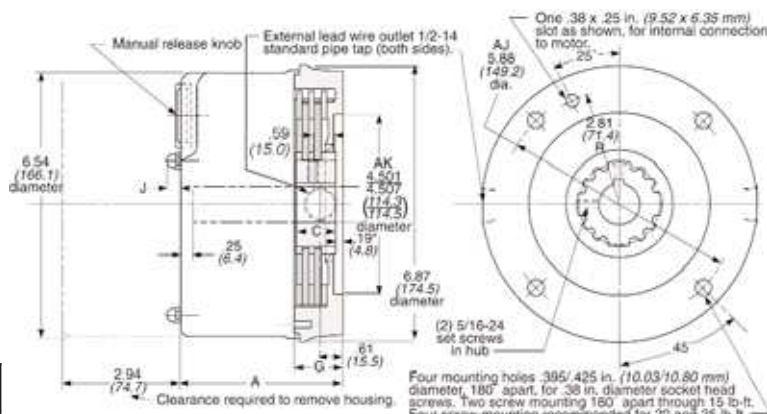

Series 56,400 Pricing (Discount Symbol B4)

Nominal Static Torque lb-ft (Nm)	Enclosure	Basic Model Number and List Price*			
		AC	AC List Price*	DC	DC List Price*
3 (4)	IP 23	1-056-411-00	640.00	1-056-415-00	940.00
	IP 54	1-056-412-00	775.00	1-056-416-00	1,075.00
6 (8)	IP 23	1-056-421-00	705.00	1-056-425-00	1,005.00
	IP 54	1-056-422-00	840.00	1-056-426-00	1,140.00
10 (14)	IP 23	1-056-431-00	805.00	1-056-435-00	1,105.00
	IP 54	1-056-432-00	945.00	1-056-436-00	1,245.00
15 (20)	IP 23	1-056-441-00	905.00	1-056-445-00	1,205.00
	IP 54	1-056-442-00	1,045.00	1-056-446-00	1,345.00
20 (27)	IP 23	1-056-451-00	995.00	1-056-455-00	1,295.00
	IP 54	1-056-452-00	1,130.00	1-056-456-00	1,430.00
25 (34)	IP 23	1-056-461-00	1,090.00	1-056-465-00	1,390.00
	IP 54	1-056-462-00	1,225.00	1-056-466-00	1,525.00

*Subtract \$30.00 for brake ordered less hub.

IP 23 Dimensions

Nominal Static Torque lb-ft (Nm)	Dimensions in Inches (mm)			Wt lbs (Kg)
	A	C Hub Width	G	
3 (4)				11 (5.0)
6 (8)				11 (5.0)
10 (14)	4.46 (113.3)	1.18 (30.0)	1.66 (42.2)	11 (5.0)
15 (20)				12 (5.5)
20 (27)				12 (5.5)
25 (34)				13 (6.0)

IP 54 Dimensions

Nominal Static Torque lb-ft (Nm)	Dimensions in Inches (mm)			Wt lbs (Kg)
	A	C Hub Width	G	
3 (4)				12 (5.5)
6 (8)				12 (5.5)
10 (14)	4.51 (114.6)	1.18 (30.0)	1.66 (42.2)	12 (5.5)
15 (20)				13 (6.0)
20 (27)				13 (6.0)
25 (34)				13 (6.0)

Series 56,100 (1-056-1XX) Die Cast Aluminum & Series 56,600 (1-056-6XX) Cast Iron

[BACK TO PRODUCT OVERVIEW](#)

Mounting Face: NEMA 56C, 143TC and 145TC , 4.5" AK, 5.88" AJ

Release Type: Internal Lever, Non-Maintained

Installation and Service:
P/N 8-078-905-60

Modifications: Pages 51-60


Enclosure Protection: IP 23; 56 & 57 (formerly referred to by Stearns as NEMA 2, 4 & 4X respectively)

Visual Wear Indicator

Mounting: Fanguard-mounted brakes requiring IP 56 or IP 57 protection may require additional sealing measures beyond seals provided with the brake - Refer to Installation & Service Instruction sheets

56,100 Series: Die Cast aluminum enclosure
Parts List: P/N 8-078-906-01

56,600 Series: Cast iron enclosure
Parts List: P/N 8-078-906-06

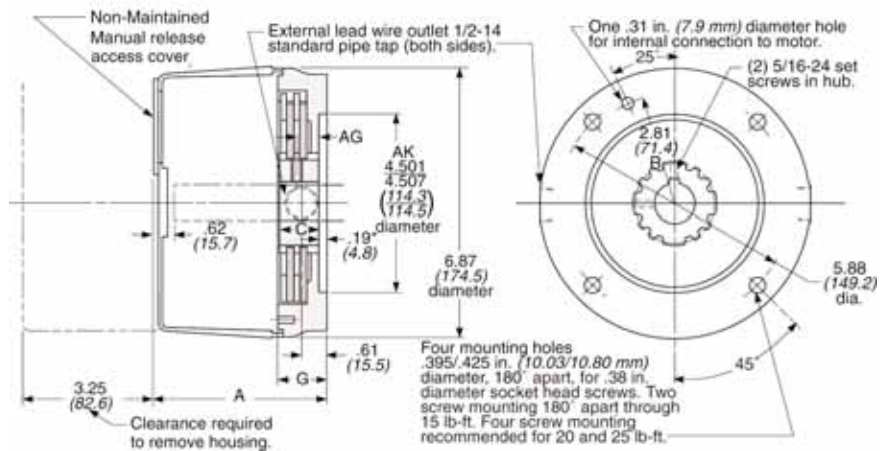

Series 56,100 Dimensions

Nominal Static Torque lb-ft (Nm)	Enclosure	Dimensions in Inches (mm)				Wt lbs (Kg)
		A	AG	C Hub Width	G	
1.5-15 (2-20)	IP 23	4.41 (112.0)	.59 (15.0)	.81 (20.6)	1.21 (30.7)	8 (3.6)
20-25 (27-34)		4.86 (123.4)		1.18 (30.0)	1.66 (42.2)	10 (4.5)
1.5-6 (2-8)	IP 56/57	4.50 (114.3)	.47 (11.9)	.81 (20.6)	1.21 (30.7)	8 (3.6)
10-25 (14-34)		4.95 (125.7)	.59 (15.0)	1.18 (30.0)	1.66 (42.2)	10 (4.5)

Series 56,600 Dimensions

Nominal Static Torque lb-ft (Nm)	Enclosure	Dimensions in Inches (mm)				Wt lbs (Kg)
		A	AG	C Hub Width	G	
3-25 (4-34)	IP 23	4.95 (125.7)	.59 (15.0)	1.18 (30.0)	1.66 (42.2)	21 (9.5)
3-25 (4-34)	IP 56/57	5.05 (128.3)				

Series 56,100 Pricing (Discount Symbol B4)

Nominal Static Torque lb-ft (Nm)	Enclosure	Basic Model Number and List Price*			
		AC	AC List Price*	DC	DC List Price*
1.5 (2)	IP 23	1-056-101-00	\$505.00	1-056-105-00	\$805.00
	IP 56	1-056-102-00	640.00	1-056-106-00	940.00
	IP 57	1-056-104-00	715.00	1-056-108-00	1,015.00
3 (4)	IP 23	1-056-111-00	525.00	1-056-115-00	825.00
	IP 56	1-056-112-00	660.00	1-056-116-00	960.00
	IP 57	1-056-114-00	735.00	1-056-118-00	1,035.00
6 (8)	IP 23	1-056-121-00	590.00	1-056-125-00	890.00
	IP 56	1-056-122-00	725.00	1-056-126-00	1,025.00
	IP 57	1-056-124-00	800.00	1-056-128-00	1,100.00
10 (14)	IP 23	1-056-131-00	690.00	1-056-135-00	990.00
	IP 56	1-056-132-00	830.00	1-056-136-00	1,130.00
	IP 57	1-056-134-00	905.00	1-056-138-00	1,205.00
15 (20)	IP 23	1-056-141-00	790.00	1-056-145-00	1,090.00
	IP 56	1-056-142-00	930.00	1-056-146-00	1,230.00
	IP 57	1-056-144-00	1,005.00	1-056-148-00	1,305.00
20 (27)	IP 23	1-056-151-00	880.00	1-056-155-00	1,180.00
	IP 56	1-056-152-00	1,015.00	1-056-156-00	1,315.00
	IP 57	1-056-154-00	1,090.00	1-056-158-00	1,390.00
25 (34)	IP 23	1-056-161-00	975.00	1-056-165-00	1,275.00
	IP 56	1-056-162-00	1,110.00	1-056-166-00	1,410.00
	IP 57	1-056-164-00	1,185.00	1-056-168-00	1,485.00

Series 56,600 Pricing (Discount Symbol B4)

Nominal Static Torque lb-ft (Nm)	Enclosure	Basic Model Number and List Price*			
		AC	AC List Price*	DC	DC List Price*
3 (4)	IP 23	1-056-611-00	1,200.00	1-056-615-00	1,500.00
	IP 56	1-056-612-00	1,335.00	1-056-616-00	1,635.00
	IP 57	1-056-614-00	1,410.00	1-056-618-00	1,710.00
6 (8)	IP 23	1-056-621-00	1,265.00	1-056-625-00	1,565.00
	IP 56	1-056-622-00	1,400.00	1-056-626-00	1,700.00
	IP 57	1-056-624-00	1,475.00	1-056-628-00	1,775.00
10 (14)	IP 23	1-056-631-00	1,365.00	1-056-635-00	1,665.00
	IP 56	1-056-632-00	1,505.00	1-056-636-00	1,805.00
	IP 57	1-056-634-00	1,580.00	1-056-638-00	1,880.00
15 (20)	IP 23	1-056-641-00	1,465.00	1-056-645-00	1,765.00
	IP 56	1-056-642-00	1,605.00	1-056-646-00	1,905.00
	IP 57	1-056-644-00	1,680.00	1-056-648-00	1,980.00
20 (27)	IP 23	1-056-651-00	1,555.00	1-056-655-00	1,855.00
	IP 56	1-056-652-00	1,690.00	1-056-656-00	1,990.00
	IP 57	1-056-654-00	1,765.00	1-056-658-00	2,065.00
25 (34)	IP 23	1-056-661-00	1,650.00	1-056-665-00	1,950.00
	IP 56	1-056-662-00	1,785.00	1-056-666-00	2,085.00
	IP 57	1-056-664-00	1,860.00	1-056-668-00	2,160.00

* Subtract \$30.00 for brake ordered less hub.

Series 56,500 (1-056-5XX)

[BACK TO PRODUCT OVERVIEW](#)

Mounting Face: NEMA 182TC and 184TC

8.5" AK, 7.25" AJ



Enclosure Material: Stamped Steel Housing, Cast Iron Endplate

Enclosure Protection: IP 23, 54 & 55 (formerly referred to by Stearns as NEMA 2, 4 & 4X*) * BISSC Certified

Release Type: Knob, Maintained with Automatic Reset


Mounting: Fanguard-mounted brakes requiring IP 54 or IP 55 protection may require additional sealing measures beyond seals provided with the brake - Refer to Installation & Service Instruction sheets.

Installation and Service:

P/N 8-078-905-60

Parts List: P/N 8-078-906-05

Modifications: Pages 51-60

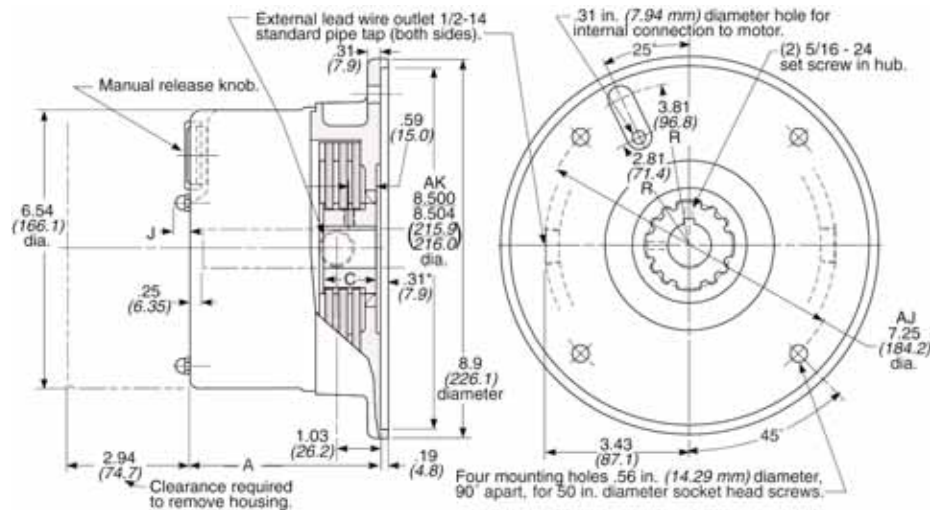

* Hub location.

Dimensions for estimating only. For installation purposes request certified prints.

IP 23 Dimensions

Nominal Static Torque lb-ft (Nm)	Dimensions in Inches (Dimensions in Millimeters)			Wt lbs (Kg)
	A	C Hub Width	J	
10 (14)				14 (6.4)
15 (20)	4.46 (113.3)	.81 (20.6)	.31 (7.9)	14 (6.4)
20 (27)				14 (6.4)
25 (34)				15 (6.8)

IP 54 / 55 Dimensions

Nominal Static Torque lb-ft (Nm)	Dimensions in Inches (Dimensions in Millimeters)			Wt lbs (Kg)
	A	C Hub Width	J	
10 (14)				14 (6.4)
15 (20)	4.51 (114.6)	1.18 (30.0)	.37 (9.4)	14 (6.4)
20 (27)				15 (6.8)
25 (34)				15 (6.8)

Unit Pricing (Discount Symbol B4)

Nominal Static Torque lb-ft (Nm)	Enclosure	Basic Model Number and List Price*			
		AC	AC List Price*	DC	DC List Price*
10 (14)	IP 23	1-056-531-00	\$840.00	1-056-535-00	\$1,140.00
	IP 54	1-056-532-00	980.00	1-056-536-00	1,280.00
	IP 55	1-056-534-00	1,055.00	1-056-538-00	1,355.00
15 (20)	IP 23	1-056-541-00	940.00	1-056-545-00	1,240.00
	IP 54	1-056-542-00	1,080.00	1-056-546-00	1,380.00
	IP 55	1-056-544-00	1,155.00	1-056-548-00	1,455.00
20 (27)	IP 23	1-056-551-00	1,030.00	1-056-555-00	1,330.00
	IP 54	1-056-552-00	1,165.00	1-056-556-00	1,465.00
	IP 55	1-056-554-00	1,240.00	1-056-558-00	1,540.00
25 (34)	IP 23	1-056-561-00	1,125.00	1-056-565-00	1,425.00
	IP 54	1-056-562-00	1,260.00	1-056-566-00	1,560.00
	IP 55	1-056-564-00	1,335.00	1-056-568-00	1,635.00

* Subtract \$30.00 for brake ordered less hub.

Series 56,700 (1-056-7XX) Die Cast Aluminum (1-056-7XS) Stainless Steel

[BACK TO PRODUCT OVERVIEW](#)

Mounting Face: NEMA 56C, 143TC and 145TC

4.5" AK, 5.88" AJ



Static Torque: 1.5 through 25 lb-ft

Enclosure Material: IP 23, 54 & 55 Die Cast Aluminum;
IP 56 Stainless Steel

Release Type: Knob, Maintained with automatic reset

Enclosure Protection: IP 23 & 54 (formerly referred to by Stearns as NEMA Type 2 & 4 respectively).

IP 55 & 56 (formerly referred to by Stearns as NEMA Type 4X BISSC Certified & Type 4X stainless steel enclosure, respectively).

- ABS Type Approval Certified
- Spring-Set Electrically Released
- Adjustable Torque
- Manual Release Knob, Maintained with Automatic Reset
- Manual Wear Adjustment

- Maximum Speed: 5000 rpm Horizontal
3600 rpm Vertical

Note: 56,700 Series mounts between C-Face motor and reducer. Do not apply overhung load to brake output shaft.

Installation and Service:
P/N 8-078-905-67


Parts List: P/N 8-078-906-07

Modifications: Pages 51-60

Universal Mounting: Through 15 lb-ft.
20 and 25 lb-ft. supplied with springs for vertical modification.

Brake set and release times in milliseconds, when brake and motor are switched separately (for T1/T2 definitions, see page 98)

Static Torque lb-ft	Coil Size	T1	T2
1½ - 25	4, K4, K4+, M4+	25	14

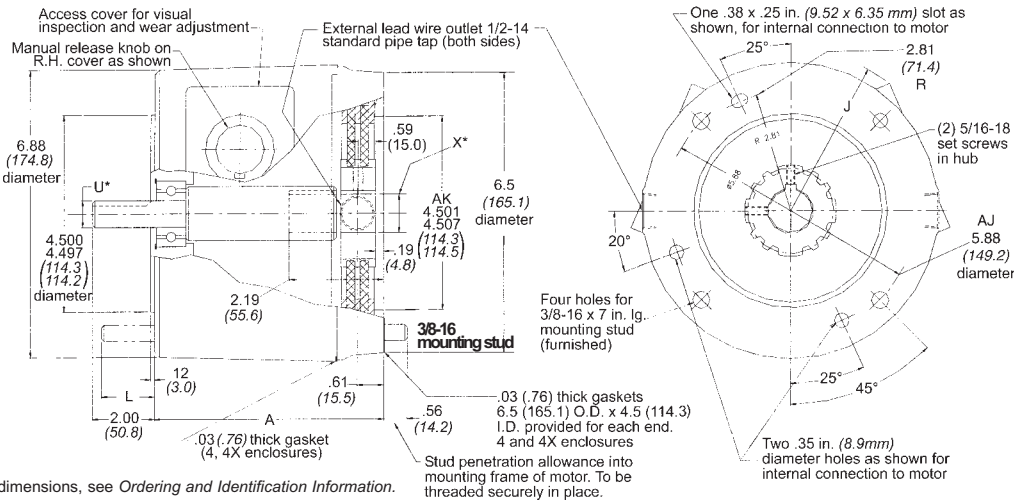

* For X and U dimensions, see Ordering and Identification Information.

Dimensions for estimating only. For installation purposes request certified prints.

Dimensions /Unit Pricing (Discount Symbol E3)

Nominal Static Torque (lb-ft) (Nm)	Enclosure	Type	Basic Model Number and List Price	Dimensions in Inches (mm)			Wt. lbs (kg)
				A	J	L	
1.5 (2)	IP 23	AC	1-056-701-0X \$480.00	4.91 (124.7)	3.81 (96.8)	1.53 (38.9)	12 (5.4)
		DC	1-056-705-0X \$780.00				
	IP 54	AC	1-056-702-0X \$615.00	4.94 (125.5)	3.88 (98.6)	1.53 (38.9)	13 (5.9)
		DC	1-056-706-0X \$915.00				
	IP 55	AC	1-056-704-0X \$690.00	4.94 (125.5)	3.88 (98.6)	1.53 (38.9)	13 (5.9)
		DC	1-056-708-0X \$990.00				
3 (4)	IP 23	AC	1-056-711-0X \$500.00	4.91 (124.7)	3.81 (96.8)	1.53 (38.9)	12 (5.4)
		DC	1-056-715-0X \$800.00				
	IP 54	AC	1-056-712-0X \$635.00	4.94 (125.5)	3.88 (98.6)	1.53 (38.9)	13 (5.9)
		DC	1-056-716-0X \$935.00				
	IP 55	AC	1-056-714-0X \$710.00	4.94 (125.5)	3.88 (98.6)	1.53 (38.9)	13 (5.9)
		DC	1-056-718-0X \$1,010.00				
6 (8)	IP 23	AC	1-056-721-0X \$565.00	4.91 (124.7)	3.81 (96.8)	1.53 (38.9)	12 (5.4)
		DC	1-056-725-0X \$865.00				
	IP 54	AC	1-056-722-0X \$700.00	4.94 (125.5)	3.88 (98.6)	1.53 (38.9)	13 (5.9)
		DC	1-056-726-0X \$1,000.00				
	IP 55	AC	1-056-724-0X \$775.00	4.94 (125.5)	3.88 (98.6)	1.53 (38.9)	13 (5.9)
		DC	1-056-728-0X \$1,075.00				
10 (14)	IP 23	AC	1-056-731-0X \$665.00	4.91 (124.7)	3.81 (96.8)	1.53 (38.9)	12 (5.4)
		DC	1-056-735-0X \$965.00				
	IP 54	AC	1-056-732-0X \$805.00	4.94 (125.5)	3.88 (98.6)	1.53 (38.9)	13 (5.9)
		DC	1-056-736-0X \$1,105.00				
	IP 55	AC	1-056-734-0X \$880.00	4.94 (125.5)	3.88 (98.6)	1.53 (38.9)	13 (5.9)
		DC	1-056-738-0X \$1,180.00				
20 (27)	IP 56	AC	1-056-729-0X \$2,539.00	4.94 (125.5)	3.88 (98.6)	1.53 (38.9)	22 (10)
		DC					

Dimensions /Unit Pricing (Discount Symbol E3)

Nominal Static Torque (lb-ft) (Nm)	Enclosure	Type	Basic Model Number and List Price	Dimensions in Inches (mm)			Wt. lbs (kg)
				A	J	L	
15 (20)	IP 23	AC	1-056-741-0X \$765.00	4.91 (124.7)	3.81 (96.8)	1.53 (38.9)	12 (5.4)
		DC	1-056-745-0X \$1,065.00				
	IP 54	AC	1-056-742-0X \$905.00	4.94 (125.5)	3.88 (98.6)	1.08 (27.4)	13 (5.9)
		DC	1-056-746-0X \$1,205.00				
	IP 55	AC	1-056-744-0X \$980.00	4.94 (125.5)	3.88 (98.6)	1.08 (27.4)	13 (5.9)
		DC	1-056-748-0X \$1,280.00				
20 (27)	IP 56	AC	1-056-74S-0X 2,739.00	4.94 (125.5)	3.88 (98.6)	1.53 (38.9)	22 (10)
		DC					
	IP 23	AC	1-056-751-07 \$855.00	5.36 (136.1)	3.81 (96.8)	1.08 (27.4)	12 (5.4)
		DC	1-056-755-07 \$1,155.00				
	IP 54	AC	1-056-752-07 \$990.00	5.39 (136.9)	3.88 (98.6)	1.08 (27.4)	14 (6.3)
		DC	1-056-756-07 \$1,290.00				
25 (34)	IP 55	AC	1-056-754-07 \$1,065.00	5.39 (136.9)	3.88 (98.6)	1.08 (27.4)	14 (6.3)
		DC	1-056-758-07 \$1,365.00				
	IP 56	AC	1-056-75S-0X 2,824.00	5.39 (136.9)	3.88 (98.6)	1.08 (27.4)	22 (10)
		DC					
	IP 23	AC	1-056-761-07 \$950.00	5.36 (136.1)	3.81 (96.8)	1.08 (27.4)	13 (5.9)
		DC	1-056-765-07 \$1,250.00				
25 (34)	IP 54	AC	1-056-762-07 \$1,085.00	5.39 (136.9)	3.88 (98.6)	1.08 (27.4)	14 (6.3)
		DC	1-056-766-07 \$1,385.00				
	IP 55	AC	1-056-764-07 \$1,160.00	5.39 (136.9)	3.88 (98.6)	1.08 (27.4)	14 (6.3)
		DC	1-056-768-07 \$1,460.00				
	IP 56	AC	1-056-76S-0X 2,919.00	5.39 (136.9)	3.88 (98.6)	1.08 (27.4)	22 (10)
		DC					

* X in 9th digit designates hub bore and shaft size.

Engineering Specifications

Nominal Static Torque	No. of Friction Discs	Coil Size		Maximum Solenoid Cycle Rate ^①		Thermal Capacity ^②		Inertia (Wk ²)
lb-ft (Nm)		AC	DC	cycles/min		hp-sec/min (watts)		lb - ft ² (kgm ² x 10 ⁻⁴)
				AC	DC	Horizontal	Vertical	
1.5 (2)	1	4	4+	36	20	9 (112)	6.5 (80)	.008 (3.36)
3 (4)	1	4	4+	36	20	9 (112)	6.5 (80)	.008 (3.36)
6 (8)	1	K4	K4-	36	20	9 (112)	6.5 (80)	.008 (3.36)
10 (14)	2	K4	K4+	36	20	9 (112)	6.5 (80)	.014 (5.88)
15 (20)	2	K4+	M4+	36	20	9 (112)	6.5 (80)	.014 (5.88)
20 (27)	3	K4+	M4+	36	20	9 (112)	6.5 (80)	.020 (8.40)
25 (34)	3	M4+	P4+	36	20	9 (112)	6.5 (80)	.020 (8.40)

① Maximum solenoid cycle rate is based on ambient temperature of 72°F (22°C) with 50% duty cycle. Does not relate to brake cycle rate (see Thermal Capacity).

② Thermal capacity rating is based on ambient temperature of 72°F (22°C), stop time of one second or less, with no heat absorbed from motor. Refer to *Selection Procedure* Section.

Current Ratings (amperes)

Solenoid Coil Size	AC Current	Voltage: 60 Hz						Voltage: 50 Hz			Voltage: DC			
		115	200	230	400	460	575	110	220	380	24	95	115	230
4	inrush holding	3.6 .3	2.1 .2	1.8 .2	1.1 .08	.9 .08	.7 .06	4.1 .3	2.1 .2	.9 .08	13.3 .3	3.6 .1	2.8 .05	1.5 .03
4+	inrush holding	—	—	—	—	—	—	—	—	—	12.0 .4	4.7 .1	3.7 .08	2.0 .04
K4	inrush holding	4.3 .3	2.5 .2	2.2 .2	1.3 .1	1.1 .08	.9 .07	3.8 .4	1.9 .2	1.1 .08	17.5 .4	4.7 .1	3.7 .08	2.0 .04
K4+	inrush holding	4.6 .4	2.5 .2	2.3 .2	1.2 .1	1.0 .1	.9 .08	4.9 .4	2.0 .2	1.0 .1	20.5 .5	7.5 .1	5.5 .08	2.0 .04
M4	inrush holding	3.0 .6	1.7 .3	1.5 .3	.9 .2	.8 .1	.6 .1	—	—	.8 .1	—	—	—	—
M4+	inrush holding	4.6 .4	2.5 .2	2.3 .2	1.2 .1	1.0 .1	.9 .08	4.1 .4	2.0 .2	1.3 .1	30.3 .5	7.9 .1	5.5 .08	2.0 .04
P4+	inrush holding	—	—	—	—	—	—	—	—	—	30.3 .5	11.3 .1	8.4 .08	3.0 .04

Ordering and Identification Information

The following example and tables provide information for selecting the appropriate three-letter suffix when ordering a Stearns Brake.

Example of a complete part number:

1-056-731-05--FF — Lead wire position (internal and external, left and right)

Series — 230 Vac
Torque — Does not apply
Enclosure — 5/8 hub bore and shaft

Hub Bore, Shaft and Keyway Sizes

9th Digit of Model No.	Bore Dia. (X)	Keyway**	Shaft Dia. (U)	Keyway**
5	.625	.19 x .09	.625	.19 x .09
7	.875	.19 x .09	.875	.19 x .09
8*	.875 with sleeve to convert to .625	.19 x .09	.625 with sleeve to convert to .875	.19 x .09

*One sleeve provided in each brake.

**Keyseats made to ANSI B17.1 standard.

Standard AC Voltage Ratings

Character	Voltage	Hz
B	115	60
D	110	50
E	200	60
F	230	60
	190	50
H	220	50
L	460	60
	380	50
M	415	50
N	575	60
O	110/220	50
P	115/208	60
	230	
Q	208	60
	230/460	50
R	200/400	60

Direct Current

Character	Voltage
T	12
U	24
V	36
W	48
X	95
Y	115
Z	230

Consult factory if other DC voltage is needed.

Modifications are available- see SAB Modification Section

SELECTION - Solenoid Actuated Brakes

[BACK TO PRODUCT OVERVIEW](#)

NOTE: For overhauling/high inertia loads, to stop in a specified time/distance, or for brakes combined with variable frequency drives, please refer to [Application Engineering Section](#).

Stearns Solenoid Actuated Brakes can be easily selected from Table 1 and 2.

Given motor data:

1. Horsepower (hp)
2. Speed (RPM)
3. NEMA C-face frame size

Determine:

1. Static torque rating of the brake (lb-ft)
2. Brake series

Step 1 – Given the motor horsepower and speed, select the brake torque from Table 1. Torque in table 1 is calculated using formula:

$$T_s = \frac{5,252 \times P}{N} \times SF$$

Where, T_s = Static torque, lb-ft

P = Motor horsepower, hp

N = Motor full load speed, rpm

SF = Service Factor

5,252 = constant

Example: Given a 5 hp, 1800 RPM motor, the selected brake is 20 or 25 lb-ft.

Step 2 – Given the NEMA C-face motor frame size, select the brake series from Table 2.

Example: Given the 5 hp, 1800 RPM motor in Step 1 with a NEMA 184TC frame, Series 87,000; 87,300 or 87,700 Brakes can be selected to mount directly to the motor.

Table 1 – Torque Selection

In this table, brake torque ratings are no less than 140% of the motor full load torque.

Motor hp	Brakemotor Shaft Speed (RPM)						
	700	900	1200	1500	1800	3000	3600
	Static Torque Rating of Brake (lb-ft)						
1/6	3	1.5	1.5	1.5	0.75	0.5	0.5
1/4	3	3	3	1.5	1.5	0.75	0.5
1/3	6	3	3	3	1.5	1.5	0.75
1/2	6	6	3	3	3	1.5	1.5
3/4	10	6	6	6	6	3	3
1	15	10	6	6	6	3	3
1-1/2	20	15	10	10	10	6	3
2	25	20	15	10	10	6	6
3	35	25	20	15	15	10	6
5	75	50	35	25	20 or 25	15	10
7-1/2	105	75	50	50	35	25	15
10	105	105	75	50	50	25	25
15	175	125	105	75	75	50	35
20	230	175	125	105	105	50	50
25	330	230	175	125	105	75	50
30	330	330	230	175	125	75	75
40	440	330	330	230	175	105	105
50	550	440	330	330	230	*	*
60	750	500	440	330	330	*	*
75	1000	750	500	440	330	*	*
100	—	1000	750	500	440	*	*
125	—	1000	1000	750	500	*	*
150	—	—	1000	750	750	*	*
200	—	—	—	1000	1000	*	*
250	—	—	—	—	1000	*	*

*See catalog pages for maximum rpm by series. Thermal capacity must be considered in load stops over 1800 rpm.

Table 2 – Brake Series Selection by NEMA Frame Size

Torque Range (lb-ft)	Brake Series	C-Face Motor Frame Size											
		48C	56C	143TC 145TC	182TC 184TC	213TC 215TC	254TC 254UC 256TC 256UC	284TC 284UC 286TC 286UC	324TC 324UC 326TC 326UC	364TC 364UC 365TC 365UC	404TC 404UC 405TC 405UC	444TC 444UC 445TC 445UC	504UC 504SC 505C 505SC
Manually-Adjusted Brakes (require periodic adjustment to compensate for friction disc wear)													
1.5-6 1.5-25 10-25	48,100 56,X00 56,500	①	①	①	② ①	②	②						
Self-Adjusting Brakes (automatically compensate for friction disc wear)													
6-105 50-105 125-230 125-440 500-1000 500-1000	87,X00 87,100 81,000 82,000 86,000 86,100		③	③	① ② ②	① ② ②	① ② ②	② ① ② ②	② ① ②	② ① ②	② ① ②	 ② ② ①	①
Division I Hazardous Location Brakes (for atmospheres containing explosive gases or ignitable dusts) / Motor Mounted													
1.5-15 10-105 125-330	65,300 87,300 82,300		①	①	② ① ②	② ① ②	② ① ②	② ②	② ①	② ① ①	② ② ①	②	
Division I Hazardous Location Brakes (for atmospheres containing explosive gases or ignitable dusts) / Foot Mounted													
10-105 125-330	87,300 82,300				④	④	④		④	④	④		
Division 2 Hazardous Location Brakes													
1.5-25 6-105	56,800 87,800		① ③	① ③	② ①	② ①	② ①	②	②	②	②		
Double C-Face Brake Couplers (for direct coupling a C-face motor to a C-face gear reducer)													
1.5-25 10-105	56,700 87,700		①	①	①	①	①						

① Brake mounts directly to motor C-face.

② Adapter required to mount brake to motor C-face. Refer to brake specifications for adapter information.


③ Brake endplate modified for direct mounting to motor C-face without an adapter.

④ Brake is foot mounted for coupling to a hazardous-location motor.


Installation and Service Instructions for 1-056-X00* Series (all revisions) Manual Adjust Brakes

*This sheet includes Series 1-056,000; 1-056,100; 1-056,200;
1-056,300; 1-056,400; 1-056,500; 1-056,600 and 1-056,900.

For other series consult factory.

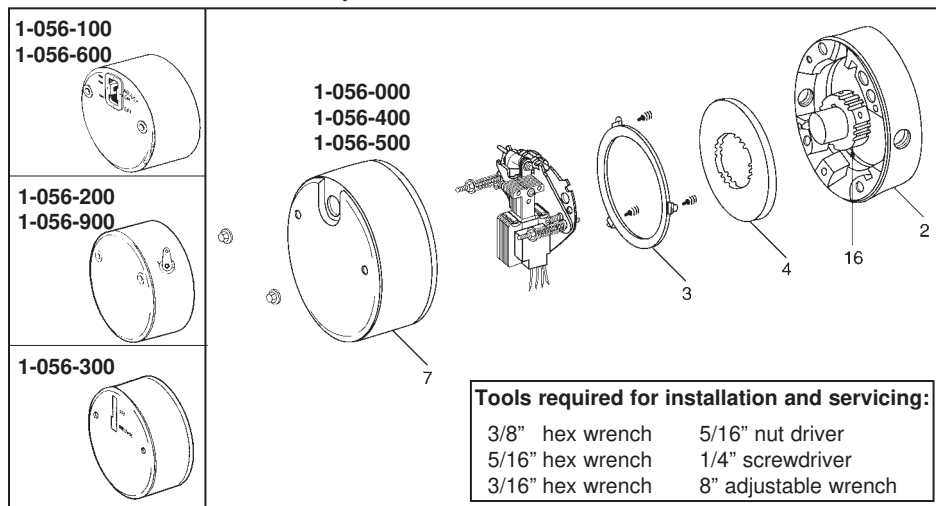

Typical Nameplate

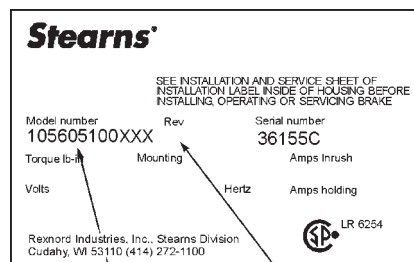

Note:

MODEL NUMBER
Refer to actual nameplate on
brake for additional information

REVISION CONTROL
(if applicable) and
brake serial number

Important

Please read these instructions carefully before installing, operating, or servicing your Stearns Brake. Failure to comply with these instructions could cause injury to personnel and/or damage to property if the brake is installed or operated incorrectly. For definition of limited warranty/liability, contact Rexnord Industries, LLC, Stearns Division, 5150 S. International Dr., Cudahy, WI 53110, (414) 272-1100.

Caution

1. Installation and servicing must be made in compliance with all local safety codes including Occupational Safety and Health Act (OSHA). All wiring and electrical connections must comply with the National Electric Code (NEC) and local electric codes in effect.
2. Use of this brake in atmospheres containing explosive gases and dusts must be in accordance with NEC article 501. This brake is not suitable for use in certain atmospheres containing explosive gases and dusts. **HazLoc** inspection authorities are responsible for verifying and authorizing

the use of suitably designed and installed **HazLoc** equipment. When questions arise consult local **Authority Having Jurisdiction (AHJ)**.

3. To prevent an electrical hazard, disconnect power source before working on the brake. If power disconnect point is out of sight, lock disconnect in the *off* position and tag to prevent accidental application of power.
4. Make certain power source conforms to the requirements specified on the brake nameplate.
5. Be careful when touching the exterior of an operating brake. Allow sufficient time for brake to cool before disassembly. Surfaces may be hot enough to be painful or cause injury.
6. Do not operate brake with housing removed. All moving parts should be guarded.
7. Installation and servicing should be performed only by qualified personnel familiar with the construction and operation of the brake.
8. For proper performance and operation, only genuine Stearns parts should be used for repairs and replacements.
9. After usage, the brake interior will contain burnt and degraded friction material dust. This dust must be removed before servicing or adjusting the brake.

DO NOT BLOW OFF DUST using an air hose. It is important to avoid dispersing dust into the air or inhaling it, as this may be dangerous to your health.

- a) Wear a filtered mask or a respirator while removing dust from the inside of a brake.
- b) Use a vacuum cleaner or a soft brush to remove dust from the brake. When brush-

For replacement parts refer to sheets:

Series	Sheet Part No.
1-056-000	8-078-906-00
1-056-100	8-078-906-01
1-056-200	8-078-906-02
1-056-300	8-078-906-03
1-056-400	8-078-906-04
1-056-500	8-078-906-05
1-056-600	8-078-906-06
1-056-900	8-078-906-09

Also available at www.stearns.rexnord.com

ing, avoid causing the dust to become airborne. Collect the dust in a container, such as a bag, which can be sealed off.

10. **Caution!** While the brake is equipped with a manual release to allow manual shaft rotation, the motor should not be run with the manual release engaged, to avoid overheating the friction disc(s).

General Description

These series of brakes are spring-set, electrically released. They contain one or more rotating friction discs (4) driven by a hub (16) mounted on the motor or other shaft.

Note: Fan-guard mounted brakes requiring IP54 & IP55 protection may require additional sealing measures beyond seals provided with this brake. Pressurized sprays aimed at the fan and brake hub surfaces can result in fluid migration along the motor shaft and keyway, and into the brake. The use of an appropriate sealant such as *RTV* or a *forsheda* seal is advised.

Operating Principle

These series contain one or more friction discs (4) assembled alternately between the endplate (2) friction surface, stationary disc(s) (3) and pressure plate (also called stationary disc) (3). The stationary disc(s) are restrained from rotating by being keyed into the endplate. With the brake released, all disc pack components are free to slide axially and the friction disc(s) to rotate.


Brake release occurs when the solenoid coil is electrically energized, causing the solenoid plunger to travel a specified distance and through a lever system, overcoming the pressure spring force. This action releases the clamping force on the disc pack, thereby allowing the friction disc(s) and brake hub to rotate.

Brake *sets* and torque is produced when electric current to the solenoid coil is interrupted, thereby collapsing the solenoid magnetic field. The solenoid plunger returns to its original de-energized position allowing the lever arm to move forward by virtue of the compressed torque springs. This action compresses the disc pack components which applies a retarding torque to the brake hub and ultimately restores the brake to a spring-set static condition.


BRAKE MOUNTING (Manual Adjust) 1-056-X00

[BACK TO PRODUCT PAGE](#)


- 1** Place hub on motor shaft.

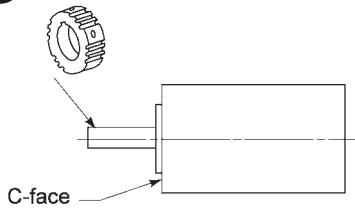


- 2** Position hub on shaft as shown.

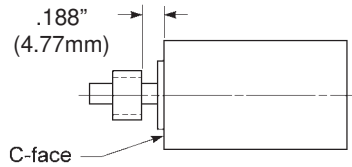


- 3** Tighten set screws to motor shaft.

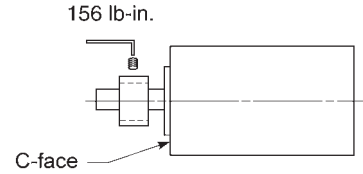

- 4** Remove brake housing.
Housings vary by series number.
See page 1.

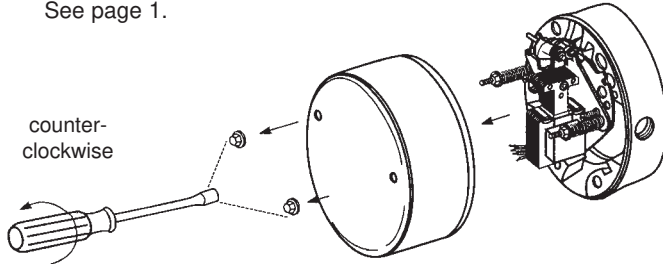


- 5** Slide endplate over hub noting position of stabilizer clips, if used.
(Refer to Friction Disc Replacement, view 3 and 3A.)
Tighten mounting screws.

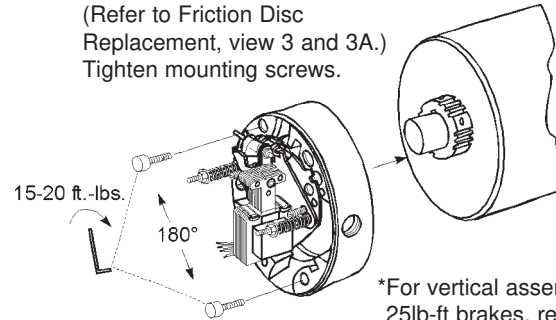


- 6** AC coils are 50/60 Hz, single phase rated. Power supply to coil must not have current or frequency limiting output that is less than the coil requirement.
- Connect leadwires to power source. Verify voltage rating* per nametag on coil.
 - Keep wiring away from pinch points and moving components.
- * For DC voltages see sheet 8-078-950-00.

Coil Wiring

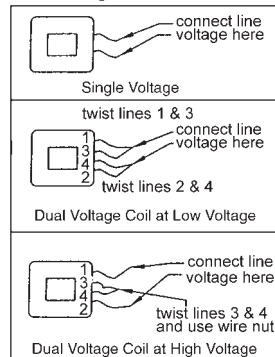


- 7** Replace brake housing and tighten to torque specified below:

Brake series	Torque
1-056-000 1-056-300	8 lb-in
1-056-400 1-056-500	12 lb-in
1-056-100 1-056-200	
1-056-600 1-056-900	

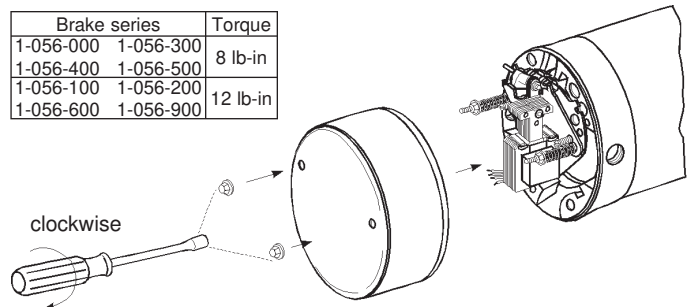


FRICTION DISC REPLACEMENT SERIES 1-056-X00


- 1** Remove support plate screws and lift support from brake

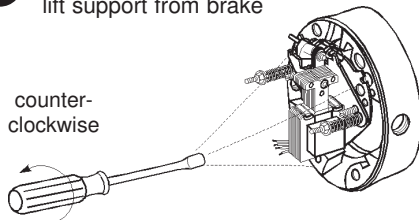

- 2** Remove and discard old friction disc.

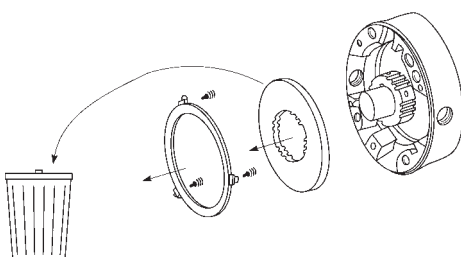

- 3** Install new friction disc(s) and stationary disc(s) as shown.

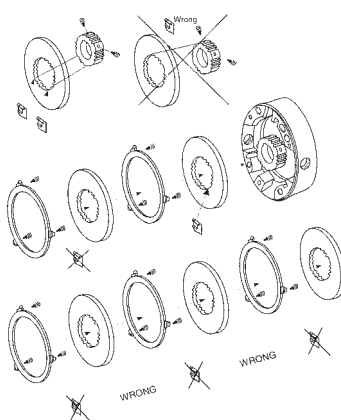

Note: Stabilizer clips should never be located over the set screws of the hub.

Single disc brakes always use two stabilizer clips, locate at 90° from each other.


Double disc brakes typically will not require stabilizer clips, however there are some special modifications that will use them.

Rev A & B may have these clips may have these clips located 1 per disc, and should never be positioned in line with each other.

Rev C will have only one clip, used on the inner-most disc. No clip will be used on the outer-most disc.

Three disc brakes will never use stabilizer clips on friction discs.

- 4** Reposition support plate on endplate and tighten mounting screws to 55 lb-in.

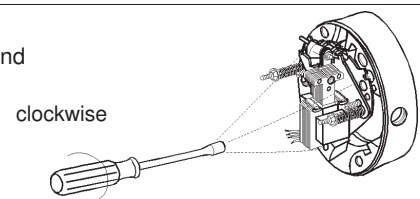

Note: Friction discs can wear to 1/2 their original thickness, or .093"

As friction disc wear the air gap will increase. When plunger gets to the reset position, the air gap must be adjusted.


- 1 To **increase** air gap, turn both adjusting screws (10) counterclockwise. Use 3/16 hex wrench, or flat screwdriver on older models.

56,X00 Series Air Gap (REV A & B)


Disc	Torque	Min/Max
1	1.5, 3 & 6	.38" - .69"
2	10 & 15	.45" - .69"
3	20 & 25	.50" - .69"

56,X00 Series Air Gap (REV C)

Disc	Torque	Min/Max
2	3, 6, 10 & 15	.45" - .69"
3	20 & 25	.50" - .69"

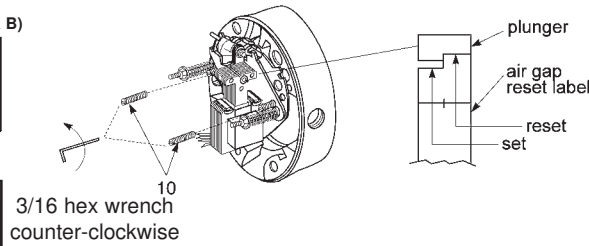

- 2 To **decrease** air gap, turn both adjusting screws (10) clockwise.

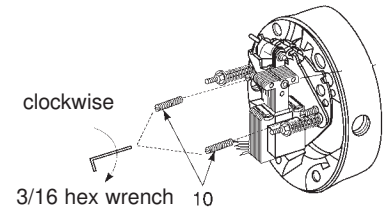


Maximum gap should not exceed .69"


COIL REPLACEMENT SERIES 1-056-X00

Remove housing and disconnect power and wiring to coil.


- 1 Insert screwdriver between support plate and lever arm and pry forward.

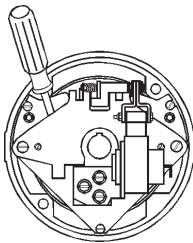


- 2 Lift plunger/solenoid lever assembly out of coil.

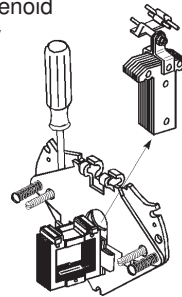


- 3 Remove plunger guide.

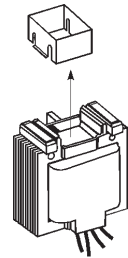


- 4 Discard coil.

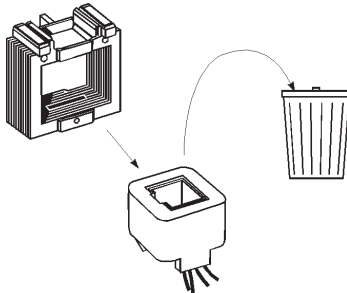

- 5 A) Insert new coil. (Lead wires in same position as old coil.)
B) Insert plunger guide.

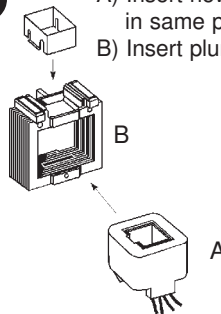

- 6 A) Re-insert plunger into coil; drop pivot pin into cradle of support plate.
B) Remove screwdriver.

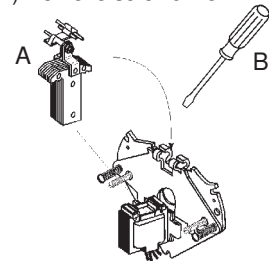

Reconnect coil and replace housing per installation instructions, page 2.

VERTICAL SPRING ASSEMBLY 1-056-X00

Vertical Brake Assembly

Single disc brakes are universal mount and do not require separator springs. Double disc brakes are universal mount but require separator springs which are preassembled to the stationary disc. These discs are inserted spring first into the brake. Refer to figure 5A below.

2 Friction Disc

Vertical Above
Vertical Below

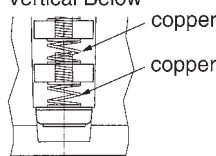


Figure 5A

Installation Procedure for 20 and 25 lb-ft brakes if mounted vertical to motor shaft (These brakes are factory assembled for horizontal operation.)

Remove support plate by loosening the three mounting screws. Remove stationary discs and friction discs. Using the spring kit provided with this brake, insert three springs of identical color into each stationary disc hole. Springs are inserted from the side opposite the indent mark (see Figure 5B). Stationary disc should be placed on a clean flat surface with a clearance hole to allow the tip of the spring to extend through the bottom side of the stationary plate. Using the 1/8" pin provided and a hammer, drive the spring until the large coil diameter bottoms out against the disc. Reassemble the disc pack with the stationary discs in the proper arrangement shown in Figure 5C.

Mount support plate and torque screws evenly to 55 lb-in.

20, 25 lb-ft Horizontal

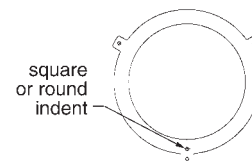


Figure 5B

3 Friction Disc

Vertical Above

Vertical Below

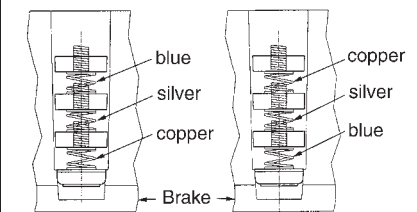


Figure 5C

Torque Adjustment

Brake is factory set for nominal rated static torque which is maximum torque. Torque may be decreased up to 50% for increased stopping times up to 2 second stop time.

The torque on the 1-1/2 lb-ft brake may not be reduced.

Turn both spring adjustment screws (11), Figure 6, equal amounts counterclockwise to decrease torque. See Table A for torque reduction permissible amounts.

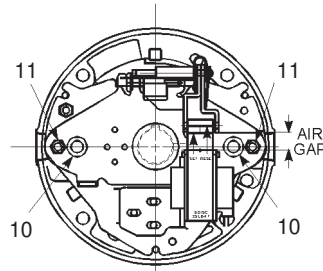


Figure 6

TABLE A

Nominal Static Torque (lb-ft)	Original Spring Height (inches)	Maximum Counter-clockwise Turns	% Torque Reduction per Turn
1-1/2	1.69"	-	-
3	1.47"	5-1/2	9%
6	1.47"		
10	1.53"		
15	1.53"		
20	1.53"		
25	1.47"		

TROUBLESHOOTING

COIL FAILURE

SUPPLY VOLTAGE CAUSE	SUPPLY VOLTAGE CORRECTION
Line voltage >110% of coil rating	Reduce voltage or replace with proper rated coil
AC input on a DC coil	Replace rectifier or replace with proper rated coil.
Excessive voltage drop during inrush time	Increase current rating of power supply.
WIRING CAUSE	WIRING CORRECTION
Leadwires interfering with plunger pull-in	Reroute wiring away from plunger and other moving components.
Excessive voltage drop during inrush time	Increase leadwires size from power supply
Coil leadwire shorted to ground	Replace coil or leadwire and protect with wire sleeving
SOLENOID ASSEMBLY CAUSE	SOLENOID ASSEMBLY CORRECTION
Plunger not seating flush against solenoid frame	Loosen solenoid mounting screws and reposition frame to allow full face contact
Plunger cocked in coil preventing pull-in	Realign solenoid frame
Excessive solenoid/plunger wear at mating surface	Replace solenoid assembly
Broken shading coils	Replace solenoid assembly
WORN PARTS CAUSE	WORN PARTS CORRECTION
Excessive wear of solenoid link arm and/or shoulder bolt	Replace link arm and link bolt; also inspect plunger thru-hole for elongation
Plunger guides worn down and interfering with plunger movement	Replace guides
APPLICATION CAUSE	APPLICATION CORRECTION
Machinery cycle rate is exceeding brake rating	Reduce brake cycle rate or use alternate control method
High ambient temperature (>110%) and thermal load exceeding coil insulation rating	Use Class H rated coil and /or find alternate method of cooling brake
Brake coil wired with windings of an Inverter motor or other voltage/current limiting device	Wire coil to dedicated power source with instantaneous coil rated voltage
MISCELLANEOUS CAUSE	MISCELLANEOUS CORRECTION
Wrong or over tightened torque	Replace with proper spring or refer to Installation section for proper spring height
Excessive air gap	Reset, refer to Installation Section 4

EXCESSIVE WEAR / OVERHEATING

AIR GAP CAUSE	AIR GAP CORRECTION
Low solenoid air gap	Reset air gap (refer to Air Gap Adjustment)
Disc pack dragging	Inspect endplate, hub and discs for dirt, burrs, wiring and other sources of interference preventing disc "float"
CYCLE RATE CAUSE	CYCLE RATE CORRECTION
Brake "jogging" exceeding coil cycle rate	Reduce cycle rate or consider alternate control method
Thermal capacity is being exceeded	Reduce cycle rate, use alternate control method or increase brake size
ALIGNMENT CAUSE	ALIGNMENT CORRECTION
Broke endplate not concentric to motor C-Face	Motor register must be within .004" on concentricity.
Motor shaft runout is excessive	Must be within .002"; runout; consult motor manufacturer
Brake is being operated on a incline greater than 15° above or below horizontal	Vertical separator springs must be used to prevent discs from becoming cocked
WORN PARTS CAUSE	WORN PARTS CORRECTION
Friction disc excessively worn (disc can wear to 1/2 original thickness or .093")	Replace friction discs.
Endplate, stationary disc or pressure plate warped	Replace warped or worn component
Linkages and/or pivot pins worn	Replace all worn components
Motor shaft endfloat excessive	Endfloat must not exceed .020"; consult motor manufacturer
HUB CAUSE	HUB CORRECTION
Burr on hub interfering with disc "float"	File off burr
Set screw backed out and interfering with disc	Retighten set screw; use Loctite® 242 to help secure
MISCELLANEOUS	MISCELLANEOUS
Solenoid plunger not pulling completely	Check line voltage (±10% of nameplate rating) or replace worn solenoid assembly
Wiring is restricting disc pack movement	Reroute wiring
Excessive stop time (2 seconds or greater)	Increase brake size/torque or use alternate control method
High Ambient temperature (in excess of 110°F)	Reduce cycle rate or use alternate method of cooling

Installation and Service Instructions for 1-056-700 Series (rev. A & B) Double C-Face Coupler

For replacement parts refer to sheet part number 8-078-906-07. Instructions and parts list also available at www.stearns.rexnord.com.


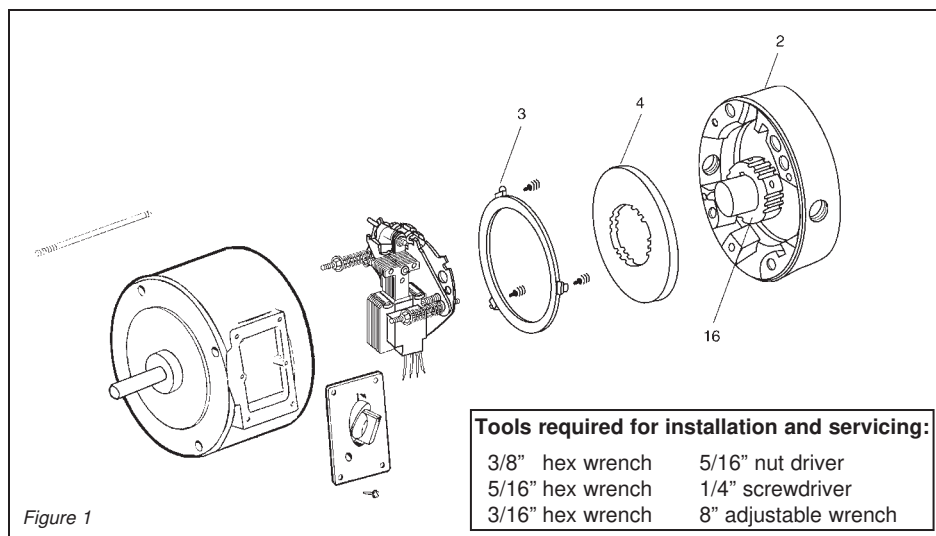


Figure 1

Tools required for installation and servicing:

3/8" hex wrench	5/16" nut driver
5/16" hex wrench	1/4" screwdriver
3/16" hex wrench	8" adjustable wrench

Typical Nameplate

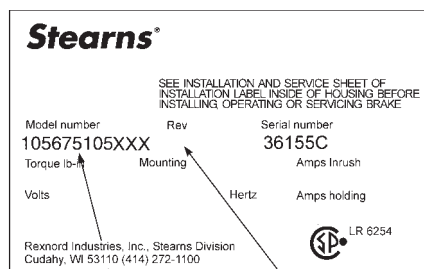

MODEL NUMBER
Refer to actual nameplate on
brake for additional information

REVISION CONTROL

Important

Please read these instructions carefully before installing, operating, or servicing your Stearns Brake. Failure to comply with these instructions could cause injury to personnel and/or damage to property if the brake is installed or operated incorrectly. For definition of limited warranty/liability, contact Rexnord Industries, LLC, Stearns Division, 5150 S. International Dr., Cudahy, WI 53110, (414) 272-1100.

Caution

1. Installation and servicing must be made in compliance with all local safety codes including Occupational Safety and Health Act (OSHA). All wiring and electrical connections must comply with the National Electric Code (NEC) and local electric codes in effect.
2. Use of this brake in atmospheres containing explosive gases and dusts must be in accordance with NEC article 501. This brake is not suitable for use in certain atmospheres containing explosive gases and dusts. **HazLoc** inspection authorities are responsible for verifying and authorizing the use of suitably designed and

installed **HazLoc** equipment. When questions arise consult local **Authority Having Jurisdiction (AHJ)**.

3. To prevent an electrical hazard, disconnect power source before working on the brake. If power disconnect point is out of sight, lock disconnect in the *off* position and tag to prevent accidental application of power.
4. Make certain power source conforms to the requirements specified on the brake nameplate.
5. Be careful when touching the exterior of an operating brake. Allow sufficient time for brake to cool before disassembly. Surfaces may be hot enough to be painful or cause injury.
6. Do not operate brake with housing removed. All moving parts should be guarded.
7. Installation and servicing should be performed only by qualified personnel familiar with the construction and operation of the brake.
8. For proper performance and operation, only genuine Stearns parts should be used for repairs and replacements.
9. After usage, the brake interior will contain burnt and degraded friction material dust. This dust must be removed before servicing or adjusting the brake.

DO NOT BLOW OFF DUST using an air hose. It is important to avoid dispersing dust into the air or inhaling it, as this may be dangerous to your health.

a) Wear a filtered mask or a respirator while removing dust from the inside of a brake.

b) Use a vacuum cleaner or a soft brush to remove dust from the brake. When brush-

ing, avoid causing the dust to become airborne. Collect the dust in a container, such as a bag, which can be sealed off.

10. **Caution!** While the brake is equipped with a manual release to allow manual shaft rotation, the motor should not be run with the manual release engaged, to avoid overheating the friction disc(s).
11. Do not apply overhung or side load to brake output shaft.

General Description

The 56,700 Series coupler is a spring-set, electronically released brake, containing either one or more rotating friction discs (4) driven by a hub (16) mounted on the motor shaft. The double C-face allows the brake to directly couple a C-face motor to a C-face gear reducer.

Note: Fan-guard mounted brakes requiring IP54 & IP55 protection may require additional sealing measures beyond seals provided with this brake. Pressurized sprays aimed at the fan and brake hub surfaces can result in fluid migration along the motor shaft and keyway, and into the brake. The use of an appropriate sealant such as *RTV* or a *forsheda* seal is advised.

Operating Principle


Warning! Do not apply overhung or die load to brake output shaft.

These series contain one or more friction discs (4) assembled alternately between the endplate (2) friction surface, stationary disc(s) (3) and pressure plate (also called stationary disc) (3). The stationary disc(s) are restrained from rotating by being keyed into the endplate. With the brake released, all disc pack components are free to slide axially and the friction disc(s) to rotate.


Brake release occurs when the solenoid coil is electrically energized, causing the solenoid plunger to travel a specified distance and through a lever system, overcoming the pressure spring force. This action releases the clamping force on the disc pack, thereby allowing the friction disc(s) and brake hub to rotate.

Brake sets and torque is produced when electric current to the solenoid coil is interrupted, thereby collapsing the solenoid magnetic field. The solenoid plunger returns to its original de-energized position allowing the lever arm to move forward by virtue of the compressed torque springs. This action compresses the disc pack components which applies a retarding torque to the brake hub and ultimately restores the brake to a spring-set static condition.


- 1** Place hub on motor shaft.

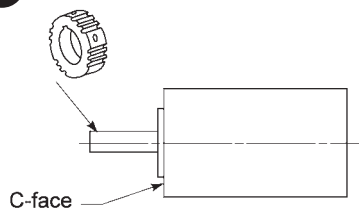


- 2** Position hub on shaft as shown.

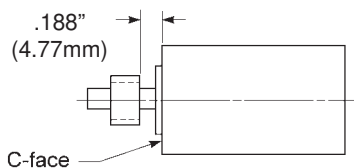


- 3** Tighten set screws to motor shaft.

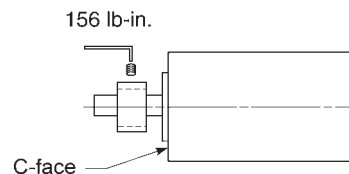

- 4** A. Remove housing nuts and slide tie bolt out of brake.
B. Remove housing from endplate.

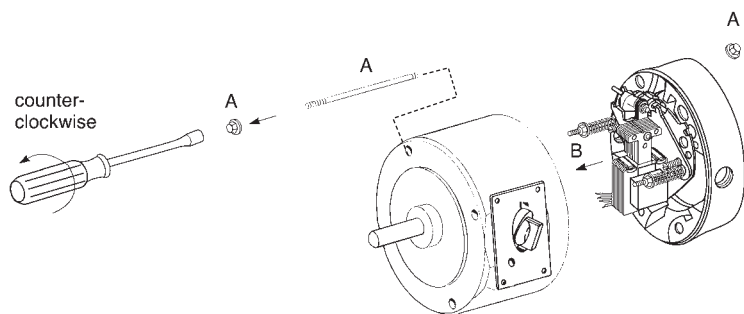


- 5** Slide endplate over hub noting position of stabilizer clips, if used. (Refer to Friction Disc Replacement view 3 and 3A). Mount brake endplate to motor C-face using the four tie bolts. Insert minimum 4 turns.

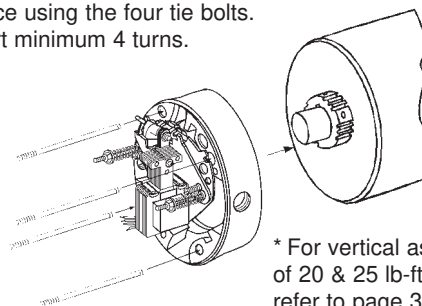

* For vertical assembly of 20 & 25 lb-ft brakes refer to page 3.


- 6** Connect coil lead-wires to power supply. Refer to nameplate for voltage rating.*
Caution: Keep wiring away from pinch points and moving components.

Coil Wiring

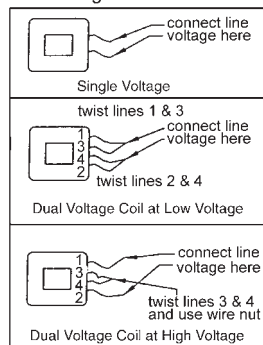


* For DC voltages see sheet 8-078-950-00.

- 7** A. Slide housing and shaft assembly onto mounting studs, rotating shaft until keyway is aligned. Be sure housing is assembled with access windows in same position as shown in Figure 1, page 1.
B. Mount and secure brake/motor assembly to C-face mounting register of reducer. Using four 3/8 - 16 nuts and lockwashers, tighten to 30-35 ft-lb.

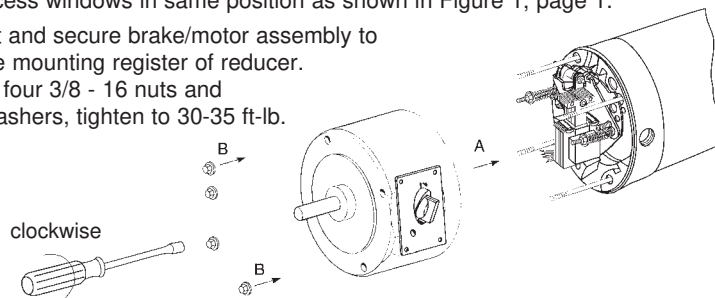


FRICTION DISC REPLACEMENT SERIES 1-056-700

- 1** Remove support plate screws and lift support from brake

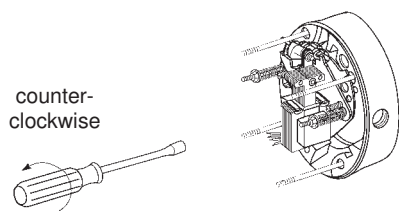


- 2** Remove and discard old friction disc.

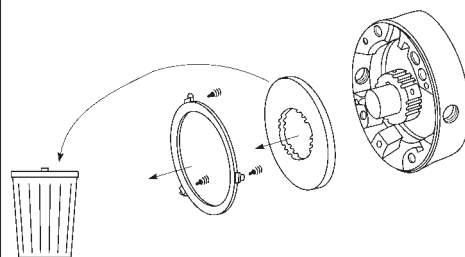


- 3** Install new friction disc(s) and stationary disc(s) as shown.


For brakes with vertical springs see Figure 5A or 5C.

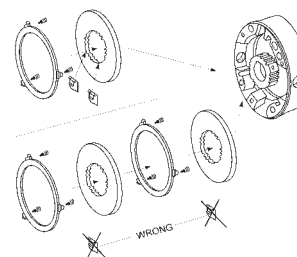

- 3A** * Stabilizer clips are for use on single disc units only. Position clips opposite set screw holes.

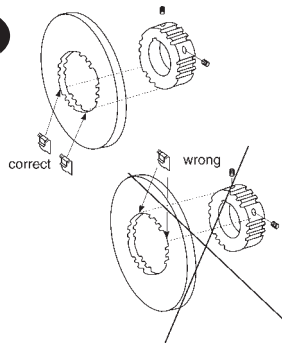

- 4** Reposition support plate on endplate and tighten mounting screws to 55 lb-in.

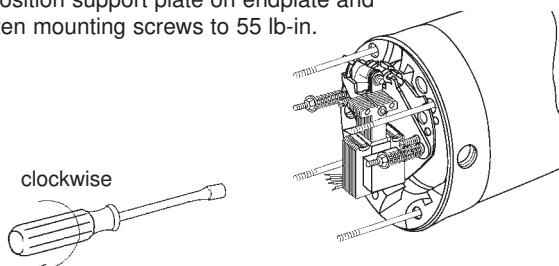

Note: Friction discs can wear to 1/2 their original thickness, or .093"


As friction disc wear the air gap will increase. When plunger gets to the reset position, the air gap must be adjusted.

- 1 To **increase** air gap, turn both adjusting screws (10) counterclockwise.


Air Gap Settings*

Torque (lb-ft)	56,X00 Series
1.5, 3 & 6	.38" - .69"
10 & 15	.45" - .69"
20 & 25	.50" - .69"


*For reference only

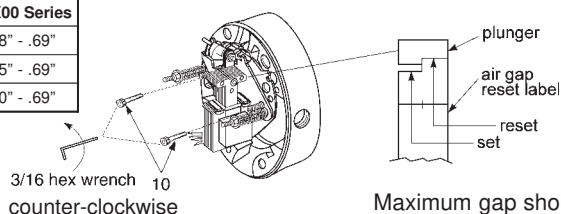

- 2 To **decrease** air gap, turn both adjusting screws (10) clockwise.

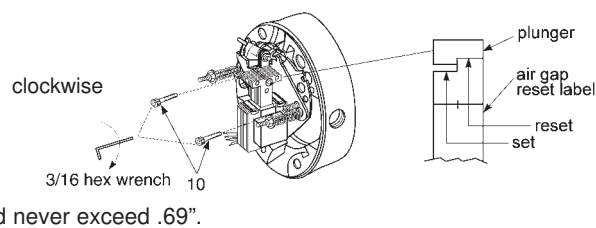


Note: Air gap can be adjusted without disassembly. Remove plate (7A) and manual release plate (7B) and adjust as shown above.

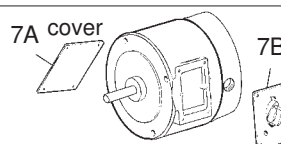


COIL REPLACEMENT SERIES 1-056-700

Remove housing and disconnect power and wiring to coil.


- 1 Insert screwdriver between support plate and lever arm and pry forward.

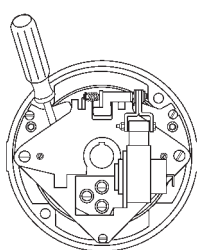


- 2 Lift plunger/solenoid lever assembly out of coil.

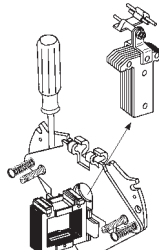


- 3 Remove plunger guide.




- 4 Discard coil.

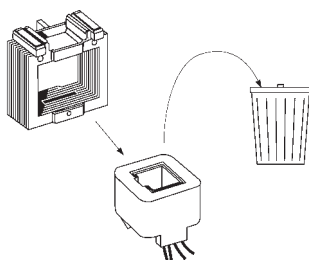

- 5 A) Insert new coil.
(Lead wires in same position as old coil.)
B) Insert plunger guide.

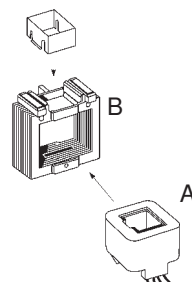

- 6 A) Re-insert plunger into coil; drop pivot pin into cradle of support plate.
B) Remove screwdriver.

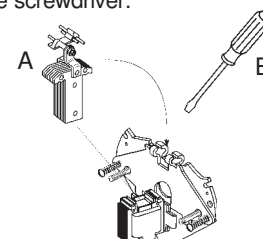

Reconnect coil and replace housing per installation instructions, page 2.

VERTICAL SPRING ASSEMBLY 1-056-700

Vertical Brake Assembly

Single disc brakes (1.5, 3 & 6 lb-ft) are universal mount and do not require separator springs. Double disc brakes (10-15 lb-ft.) are universal mount but require separator springs which are preassembled to the stationary disc. These discs are inserted spring first into the brake. Refer to figure 2A below.

2 Friction Disc

Vertical Above
Vertical Below

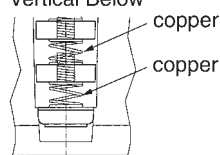


Figure 2A

Installation Procedure for 20 and 25 lb-ft brakes if mounted vertical to motor shaft

(These brakes are factory assembled for horizontal operation.)

Remove support plate by loosening the three mounting screws.

Remove stationary discs and friction discs.

Using the spring kit provided with this brake, insert three springs of identical color into each stationary disc hole. Springs are inserted from the side opposite the indent mark (see Figure 2B). Stationary disc should be placed on a clean flat surface with a clearance hole to allow the tip of the spring to extend through the bottom side of the stationary plate. Using the 1/8" pin provided and a hammer, drive the spring until the large coil diameter bottoms out against the disc.

Reassemble the disc pack with the stationary discs in the proper arrangement shown in Figure 2C.

Mount support plate and torque screws evenly to 55 lb-in.

1-1/2, 3, 6 lb-ft Universal 20, 25 lb-ft Horizontal

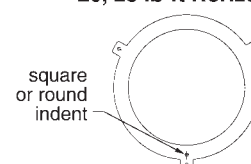


Figure 2B

3 Friction Disc

Vertical Above

Vertical Below

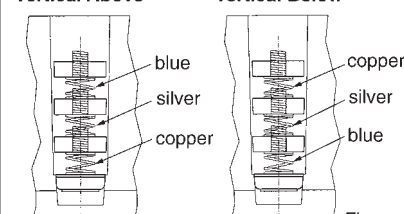


Figure 2C

Torque Adjustment

Brake is factory set for nominal rated static torque which is maximum torque. Torque may be decreased up to 50% for increased stopping times up to 2 second stop time.

The torque on the 1-1/2 lb-ft brake may not be reduced.

Turn both spring adjustment screws (11), Figure 3, equal amounts counterclockwise to decrease torque. See Table A for torque reduction permissible amounts.

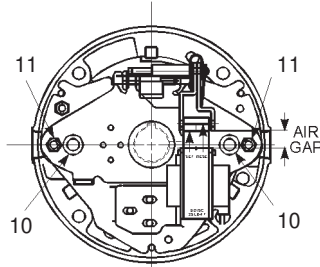


Figure 3

TABLE A

Nominal Static Torque (lb-ft)	Original Spring Height (inches)	Maximum Counter-clockwise Turns	% Torque Reduction per Turn
1-1/2	1.69"	-	-
3	1.47"	5-1/2	9%
6	1.47"		
10	1.53"		
15	1.53"		
20	1.53"		
25	1.47"		

TROUBLESHOOTING

COIL FAILURE

SUPPLY VOLTAGE CAUSE	SUPPLY VOLTAGE CORRECTION
Line voltage >110% of coil rating	Reduce voltage or replace with proper rated coil
AC input on a DC coil	Replace rectifier or replace with proper rated coil.
Excessive voltage drop during inrush time	Increase current rating of power supply.
WIRING CAUSE	WIRING CORRECTION
Leadwires interfering with plunger pull-in	Reroute wiring away from plunger and other moving components.
Excessive voltage drop during inrush time	Increase leadwires size from power supply
Coil leadwire shorted to ground	Replace coil or leadwire and protect with wire sleeving
SOLENOID ASSEMBLY CAUSE	SOLENOID ASSEMBLY CORRECTION
Plunger not seating flush against solenoid frame	Loosen solenoid mounting screws and reposition frame to allow full face contact
Plunger cocked in coil preventing pull-in	Realign solenoid frame
Excessive solenoid/plunger wear at mating surface	Replace solenoid assembly
Broken shading coils	Replace solenoid assembly
WORN PARTS CAUSE	WORN PARTS CORRECTION
Excessive wear of solenoid link arm and/or shoulder bolt	Replace link arm and link bolt; also inspect plunger thru-hole for elongation
Plunger guides worn down and interfering with plunger movement	Replace guides
APPLICATION CAUSE	APPLICATION CORRECTION
Machinery cycle rate is exceeding brake rating	Reduce brake cycle rate or use alternate control method
High ambient temperature (>110%) and thermal load exceeding coil insulation rating	Use Class H rated coil and /or find alternate method of cooling brake
Brake coil wired with windings of an Inverter motor or other voltage/current limiting device	Wire coil to dedicated power source with instantaneous coil rated voltage
MISCELLANEOUS CAUSE	MISCELLANEOUS CORRECTION
Wrong or over tightened torque	Replace with proper spring or refer to Installation section for proper spring height
Excessive air gap	Reset, refer to Installation Section 4


EXCESSIVE WEAR / OVERHEATING

AIR GAP CAUSE	AIR GAP CORRECTION
Low solenoid air gap	Reset air gap (refer to Air Gap Adjustment)
Disc pack dragging	Inspect endplate, hub and discs for dirt, burrs, wiring and other sources of interference preventing disc "float"
CYCLE RATE CAUSE	CYCLE RATE CORRECTION
Brake "jogging" exceeding coil cycle rate	Reduce cycle rate or consider alternate control method
Thermal capacity is being exceeded	Reduce cycle rate, use alternate control method or increase brake size
ALIGNMENT CAUSE	ALIGNMENT CORRECTION
Broke endplate not concentric to motor C-Face	Motor register must be within .004" on concentricity;
Motor shaft runout is excessive	Must be within .002"; runout; consult motor manufacturer
Brake is being operated on a incline greater than 15° above or below horizontal	Vertical separator springs must be used to prevent discs from becoming cocked
WORN PARTS CAUSE	WORN PARTS CORRECTION
Friction disc excessively worn (disc can wear to 1/2 original thickness or .093")	Replace friction discs.
Endplate, stationary disc or pressure plate warped	Replace warped or worn component
Linkages and/or pivot pins worn	Replace all worn components
Motor shaft endfloat excessive	Endfloat must not exceed .020"; consult motor manufacturer
HUB CAUSE	HUB CORRECTION
Burr on hub interfering with disc "float"	File off burr
Set screw backed out and interfering with disc	Retighten set screw; use Loctite® 242 to help secure
MISCELLANEOUS	MISCELLANEOUS
Solenoid plunger not pulling completely	Check line voltage (±10% of nameplate rating) or replace worn solenoid assembly
Wiring is restricting disc pack movement	Reroute wiring
Excessive stop time (2 seconds or greater)	Increase brake size/torque or use alternate control method
High Ambient temperature (in excess of 110°F)	Reduce cycle rate or use alternate method of cooling


Stearns® Spring-Set Disc Brakes

Parts List for 1-056-000 Series (rev. A & B) Manual Adjust Brakes

For Installation and Service
Instructions refer to sheet part
number 8-078-905-60.
Instructions and parts list also
available at www.rexnord.com.

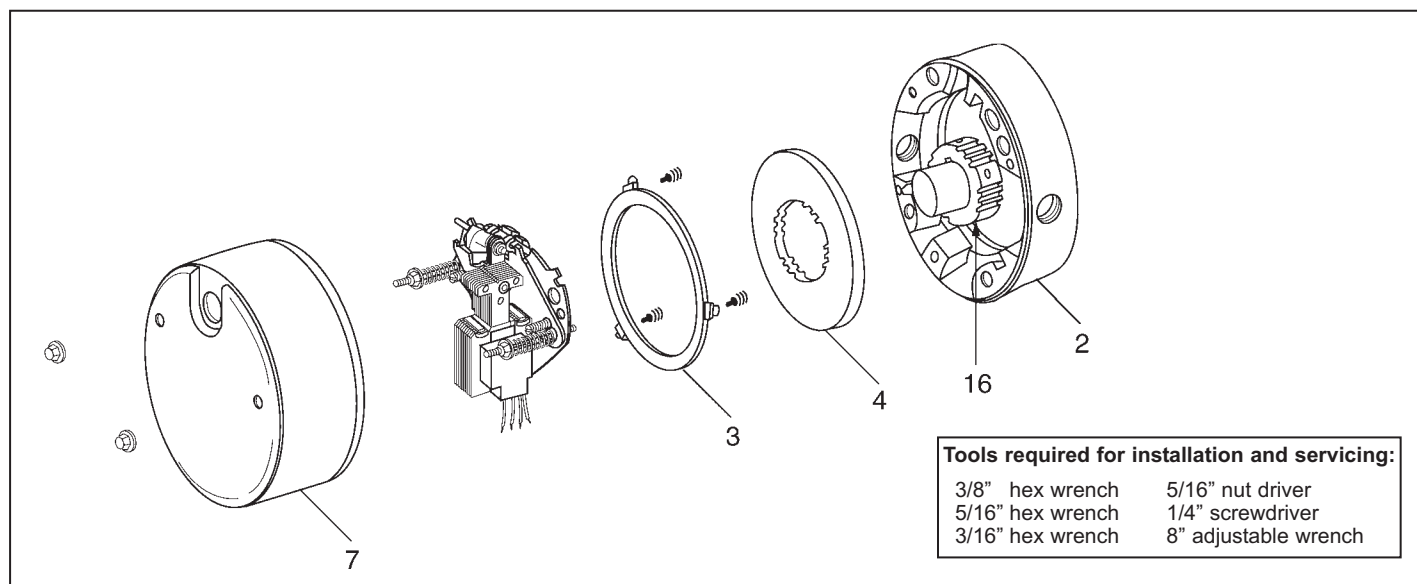

Typical Nameplate

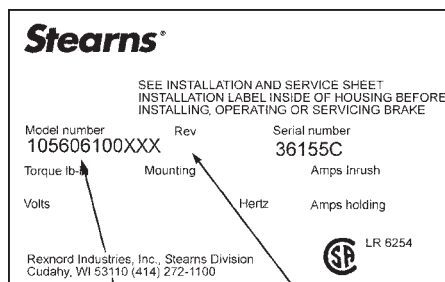

Note:

MODEL NUMBER
Refer to actual nameplate on
brake for additional information

REVISION CONTROL

Important

Please read these instructions carefully before installing, operating, or servicing your Stearns Brake. Failure to comply with these instructions could cause injury to personnel and/or damage to property if the brake is installed or operated incorrectly. For definition of limited warranty/liability, contact Rexnord Industries, Inc., Stearns Division, 5150 S. International Dr., Cudahy, WI 53110, (414) 272-1100.

Caution

1. Installation and servicing must be made in compliance with all local safety codes including Occupational Safety and Health Act (OSHA). All wiring and electrical connections must comply with the National Electric Code (NEC) and local electric codes in effect.

2. Do not operate the brake in atmospheres containing explosive gases or dusts.
3. To prevent an electrical hazard, disconnect power source before working on the brake. If power disconnect point is out of sight, lock disconnect in the *off* position and tag to prevent accidental application of power.
4. Make certain power source conforms to the requirements specified on the brake nameplate.
5. Be careful when touching the exterior of an operating brake. Allow sufficient time for brake to cool before disassembly. Surfaces may be hot enough to be painful or cause injury.
6. Do not operate brake with housing removed. All moving parts should be guarded.
7. Installation and servicing should be performed only by qualified personnel familiar with the construction and operation of the brake.
8. For proper performance and operation, only genuine Stearns parts should be used for repairs and replacements.

9. After usage, the brake interior will contain burnt and degraded friction material dust. This dust must be removed before servicing or adjusting the brake.

DO NOT BLOW OFF DUST using an air hose. It is important to avoid dispersing dust into the air or inhaling it, as this may be dangerous to your health.

- a) Wear a filtered mask or a respirator while removing dust from the inside of a brake.
- b) Use a vacuum cleaner or a soft brush to remove dust from the brake. When brushing, avoid causing the dust to become airborne. Collect the dust in a container, such as a bag, which can be sealed off.

Information required when ordering replacement parts:

- Give part number of parts or kits needed, brake model number, and brake serial number. The brake model and serial number may identify special brakes not covered by this parts list
- When ordering hubs, specify shaft diameter (hub bore) and keyway.

•Enclosure is specified as follows:

NEMA 2 (formerly referred to as standard)

NEMA 4 (formerly referred to as DTWP dust-tight waterproof)

NEMA 4X (formerly referred to as BISSC washdown)

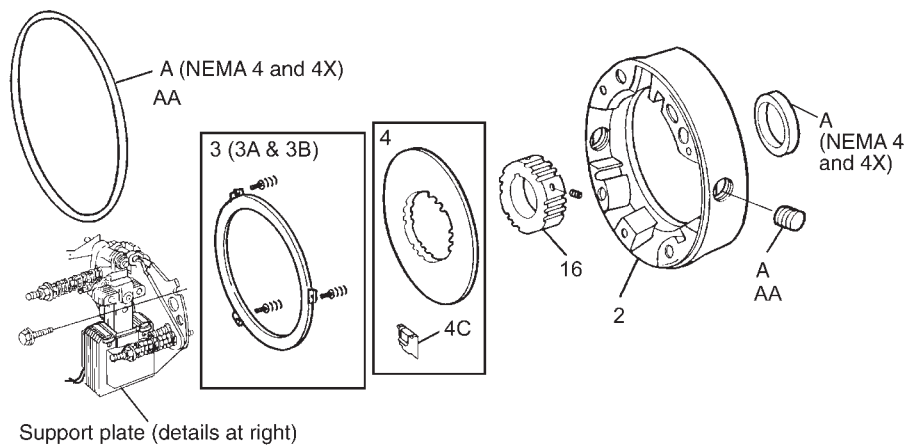
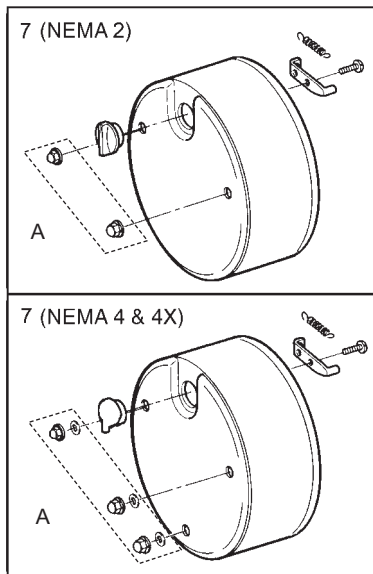


TABLE 1
Components of Standard AC or DC Brake

Item	Description		Part Number ↓	1-056-001-00	1-056-002-00	1-056-004-00	1-056-021-00	1-056-022-00	1-056-024-00	1-056-031-00	1-056-032-00	1-056-034-00	1-056-041-00	1-056-042-00	1-056-044-00	1-056-051-00	1-056-052-00	1-056-054-00
A	Hardware kit - NEMA 2 Hardware kit - NEMA 4 Hardware kit - NEMA 4X		5-66-1001-00 5-66-1002-00 5-66-1003-00	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1
AA	Plug/Gasket kit — NEMA 4 ** Close couple — NEMA 4X — NEMA 4 3 disc — NEMA 4X 3 disc		5-63-0532-00 5-63-0533-00 5-63-0534-00 5-63-0535-00	1		1	1	1	1		1	1	1		1		1	1
7	Housing & release knob kit — NEMA 2 Housing & release knob kit — NEMA 4 Housing & release knob kit — NEMA 4X		5-66-8756-00 5-66-8757-00 5-66-8758-00	1	1		1	1		1	1		1	1		1	1	1
Not Shown	Release knob kit		5-63-5503-00		1	1		1	1		1	1		1	1		1	1
3	Stationary disc kit (1 disc universal 3 disc horizontal)		5-66-8354-00	1	1	1	1	1	1							3	3	3
3A	Stationary disc kit (2 disc universal)		5-66-8355-00							1	1	1	1	1	1	1	1	1
3B	Stationary disc kit (3 disc universal)		5-66-8356-00													1	1	1
Not Shown	Vertical Spring Kit (3 disc)		5-63-0525-00													1	1	1
4 4C	Friction disc kit Stabilizing clip (part of 5-66-8462-00)		5-66-8462-00	1 2	1 2	1 2	1 2	1 2	1 2	2 *	2 *	2 *	2 *	2 *	2 *	3 *	3 *	3 *
DP	Disc pack kit — 1 disc Disc pack kit — 2 disc Disc pack kit — 3 disc		5-66-8601-00 5-66-8602-00 5-66-8603-00	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1
16	Hub and set screw assembly 1 & 2 disc (NEMA 2)		5-16-5150-00-01B 5-16-5150-00-01D 5-16-5150-00-01E	1 1 1			1 1 1			1 1 1			1 1 1					
	Hub and set screw assembly 1 disc (NEMA 4 & 4X)		5-16-5151-00-01B 5-16-5151-00-01D 5-16-5151-00-01E		1 1 1	1 1 1		1 1 1	1 1 1									
	Hub and set screw assembly 3 disc (NEMA 2) and 2 & 3 disc (NEMA 4 & 4X)		5-16-5153-00-01B 5-16-5153-00-01D 5-16-5153-00-01E								1 1 1	1 1 1		1 1 1	1 1 1	1 1 1	1 1 1	1 1 1
2	Endplate and stationary disc assembly	1 & 2 disc (NEMA 2) 3 disc (NEMA 2) 1 disc (NEMA 4) 2 & 3 disc (NEMA 4) 1 disc (NEMA 4X) 2 & 3 disc (NEMA 4X)	5-02-5031-00 5-02-5032-00 5-02-5033-00 5-02-5034-00 5-02-5037-00 5-02-5038-00	1	1		1	1		1		1	1			1		1

* Certain multiple friction disc model numbers require a single stabilizer clip (D1) added to each friction disc. If your brake has these clips, they must be replaced when the friction disc is replaced. This clip is included as part of the friction disc kit 5-66-8462-00.

** Close coupled brakes identified by 8 in the 8th digit. example: 1-056-XXX-8X.

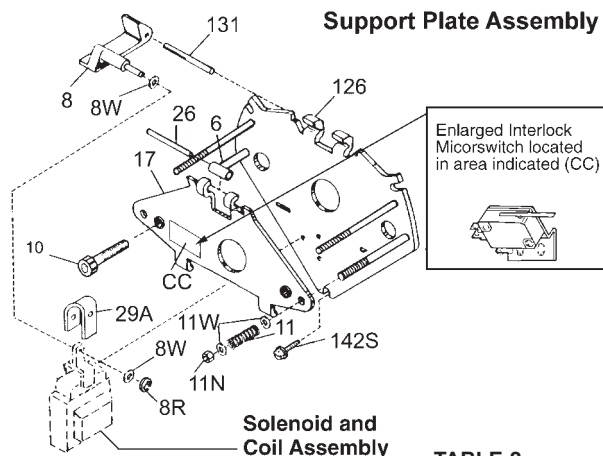


TABLE 2
Components of Support Plate and Coil Assembly

TABLE 2 Components of Support Plate and Coil Assembly				Torque (lb-ft)		1.5 & 3		6		10		15		20		25			
				NEMA Enclosure		2	4 4X	2	4 4X	2	4 4X	2	4 4X	2	4 4X	2	4 4X	2	4 4X
				Support Plate Assy. (Items 6 through 131 and Z) →		5-42-5601-00-04	5-42-5601-00-14	5-42-5605-00-04	5-42-5605-00-14	5-42-5607-00-04	5-42-5607-00-14	5-42-5609-00-04	5-42-5609-00-14	5-42-5611-00-04	5-42-5611-00-14	5-42-5611-00-04	5-42-5611-00-14		
Item	Description		Part Number ↓	5-42-5601-00-04	5-42-5601-00-14	5-42-5605-00-04	5-42-5605-00-14	5-42-5607-00-04	5-42-5607-00-14	5-42-5609-00-04	5-42-5609-00-14	5-42-5611-00-04	5-42-5611-00-14	5-42-5611-00-04	5-42-5611-00-14				
6 8 8R 8W	Bearing Solenoid lever Retaining ring Spacer		8-006-501-00 8-008-504-05 9-03-0057-00 9-45-0168-00	1 1 1 2	1 1 1 2	1 1 1 2	1 1 1 2	1 1 1 2	1 1 1 2	1 1 1 2	1 1 1 2	1 1 1 2	1 1 1 2	1 1 1 2	1 1 1 2				
11N 10	Torque adjustment nut Wear adjustment screw		9-40-3928-00 9-17-8420-00	2 2	2 2	2 2	2 2	2 2	2 2	2 2	2 2	2 2	2 2	2 2	2 2				
11 11W	Pressure spring Pressure spring Pressure spring Spring washer		9-70-1215-00 9-70-1523-00 9-70-1524-00 9-46-0010-00	2 	2 	 2 4	 2 4	 2 4	 2 4	 2 4	 2 4	 2 4	 2 4	 2 4	 2 4				
17 26 29A	Lever arm and stop nut assy. Bearing pin Plunger stop		5-17-5011-00 9-29-4826-00 8-094-503-00	1 1 1	1 1 1	1 1 1	1 1 1	1 1 1	1 1 1	1 1 1	1 1 1	1 1 1	1 1 1	1 1 1	1 1 1				
126	Support plate and spring stud assembly (2 housing studs)		5-26-5019-00	1		1		1		1		1		1					
	Support plate and spring stud assembly (3 housing studs)		5-26-5020-00		1		1		1		1		1		1				
131 142S	Pivot pin Mounting screws		9-29-4836-00 9-25-9013-00	1 3	1 3	1 3	1 3	1 3	1 3	1 3	1 3	1 3	1 3	1 3	1 3				
AC Brakes																			
Z	No. 4 solenoid kit (rev A & B) (rev B)		5-66-5042-00 5-96-5042-01	1 1		1 1		1 1		1 1		1 1		1 1		1 1			
AC	No. 4 coil kit 60 Hz	115/230 Vac	5-66-6407-33	1															
		230/460 Vac	5-66-6409-33	1															
		115 Vac	5-66-6401-33	1															
		230 Vac	5-66-6402-33	1															
		460 Vac	5-66-6404-33	1															
		575 Vac	5-66-6405-33	1															
	No. K4 coil kit 60 Hz	115/230 Vac	5-66-6457-33			1		1											
		230/460 Vac	5-66-6459-33			1		1											
		115 Vac	5-66-6451-33			1		1											
		230 Vac	5-66-6452-33			1		1											
		460 Vac	5-66-6454-33			1		1											
		575 Vac	5-66-6455-33			1		1											
	No. K4+ coil kit 60 Hz	115/230 Vac	5-66-6407-23							1		1							
		230/460 Vac	5-66-6409-23							1		1							
		115 Vac	5-66-6401-23							1		1							
		230 Vac	5-66-6402-23							1		1							
		460 Vac	5-66-6404-23							1		1							
		575 Vac	5-66-6405-23							1		1							
	No. M4+ coil kit 60 Hz	115/230 Vac	5-66-6457-23												1				
		230/460 Vac	5-66-6459-23												1				
115 Vac		5-66-6451-23												1					
230 Vac		5-66-6452-23												1					
460 Vac		5-66-6454-23												1					
575 Vac		5-66-6455-23												1					
CC	Brake release interlock switch (optional)		5-57-5526-00	1		1		1		1		1		1					
DC Brakes																			
AD	No. 4 + coil assembly	115 Vdc 230 Vdc	5-96-6416-43 5-96-6417-43	1 1															
	No. K4 + coil assembly	115 Vdc 230 Vdc	5-96-6416-23 5-96-6417-23			1 1		1 1											
	No. M4 + coil assembly	115 Vdc 230 Vdc	5-96-6466-23 5-96-6467-23							1 1		1 1							
	No. P4 + coil assembly	115 Vdc 230 Vdc	5-96-6446-43 5-96-6447-43												1 1				
BD	Electronic DC switch kit	24/28 Vdc	5-57-5712-15			1		1		1		1		1		1			
		115 Vdc	5-57-5716-15	1		1		1		1		1		1		1			
		230 Vdc	5-57-5717-15	1		1		1		1		1		1		1			

Solenoid and Coil Assembly

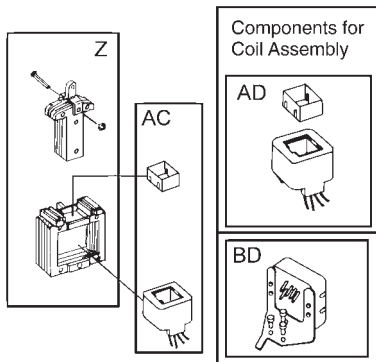


TABLE 3
Contents of Kits and Assemblies

Item	Kit Description
A	Hardware kit – NEMA 2 (5-66-1001-00) 2 – Housing acorn nuts 2 – Conduit plugs
	Hardware kit – NEMA 4 (5-66-1002-00) Hardware kit – NEMA 4X (5-66-1003-00) 3 – Housing nuts 3 – Housing nut gaskets 1 – Endplate oil seal 2 – Endplate hole plugs 1 – Housing to endplate “U” gasket 2 – Endplate conduit pipe plugs
7	Housing & release knob kit (5-66-875X-00) 1 – Housing and release knob assembly 2 or 3 – Housing nuts 3 – Housing nut gasket (NEMA 4 and 4X)
3	Stationary disc kit (5-66-8354-00) 1 – Stationary disc
3A	Stationary disc kit (5-66-8355-00) 2 – Stationary discs with springs
3B	Stationary disc kit (5-66-8356-00) 3 – Stationary discs with springs
4	Friction disc kit (5-66-8462-00) 1 – Friction disc 2 – Stabilizing clips
DP	Disc pack kit (5-66-860X-00) 1, 2 or 3 – Friction disc(s) 1, 2 or 3 – Stationary disc(s) 2 – Stabilizing clips (5-66-8601-00 only) 3, 6 or 9 – Stationary disc separator springs
16	Hub and screw assembly – all types, all bores (5-16-515X-00) 1 – Brake hub 2 – Set screws
Z	No. 4 solenoid kit (5-66-5042-00) (5-96-5042-01) 1 – Plunger 1 – Solenoid link 1 – Frame (including mounting bracket) 1 – Solenoid link cap screw 1 – Solenoid link nut 3 – Solenoid mounting screws
AC AD	No. 4 AC coil kit (5-66-64-XX-X3) and DC coil assembly (5-96-64XX-X3) Coil / Top Plunger guide / Wire nut
BD	DC switch kit (5-57-571X-15) 1 – Electronic switch 1 – Mounting bracket 3 – Bracket mounting screws 4 – Switch mounting screws 4 – Nuts 4 – Lock washers 5 – Crimp connectors
CC	Brake release interlock switch (5-57-5526-00) 1 – Microswitch 1 – Mounting bracket 2 – Bracket mounting screws 2 – Switch mounting screws 2 – Lock washers 2 – Nuts 2 – Lead wire assembly

Optional Modification Kits

TABLE 4

Catalog Mod Number	Description	Part Number ↓	Torque (lb-ft)	1.5, 3 & 6	10 & 15	20 & 25
M4	Brass Stationary Disc	8-003-513-02	1	2	3	
M13	Space Heater 115 Vac 230 Vac	5-27-2004-00 5-27-2005-00	1 1	1 1	1 1	
M17	Terminal Strip	5-63-0524-00	1	1	1	
M21	Vertical Spring Kit (2 disc) (3 disc)	5-63-0539-00 5-63-0525-00		1		1

			Torque (lb-ft)	1.5 & 3	6 & 10	15 & 20	25	
			Brake Model Number→	1-056-001-00 1-056-011-00	1-056-021-00 1-056-031-00	1-056-041-00 1-056-051-00	1-056-061-00	
Catalog Mod Number	Description		Part Number ↓					
M6	No. 4 Class 'H' coil kit 60 Hz	115/230 Vac	5-96-6407-05	1				
		230/460 Vac	5-96-6409-05	1				
		115 Vac	5-96-6401-05	1				
		230 Vac	5-96-6402-05	1				
		460 Vac	5-96-6404-05	1				
		575 Vac	5-96-6405-05	1				
	No. K4 Class 'H' coil kit 60 Hz	115/230 Vac	5-96-6457-05		1			
		230/460 Vac	5-96-6459-05		1			
		115 Vac	5-96-6451-05		1			
		230 Vac	5-96-6452-05		1			
		460 Vac	5-96-6454-05		1			
		575 Vac	5-96-6455-05		1			
	No. K4+ Class 'H' coil kit 60 Hz	115/230 Vac	5-96-6407-25				1	
		230/460 Vac	5-96-6409-25				1	
		115 Vac	5-96-6401-25				1	
		230 Vac	5-96-6402-25				1	
		460 Vac	5-96-6404-25				1	
		575 Vac	5-96-6405-25				1	
	No. M4+ Class 'H' coil kit 60 Hz	115/230 Vac	5-96-6457-25					1
		230/460 Vac	5-96-6459-25					1
		115 Vac	5-96-6451-25					1
		230 Vac	5-96-6452-25					1
		460 Vac	5-96-6454-25					1
		575 Vac	5-96-6455-25					1




Rexnord Industries, LLC
Stearns Division
5150 S. International Drive
Cudahy, Wisconsin 53110
(414) 272-1100 Fax: (414) 277-4364
www.stearns.rexnord.com

Stearns® Spring-Set Disc Brakes

P/N 8-078-906-01
effective 01/31/08

Parts List for 1-056-100 Series (rev. A & B) Manual Adjust Brakes


For Installation and Service
Instructions refer to sheet part
number 8-078-905-60.
Instructions and parts list also
available at
www.stearns.rexnord.com.

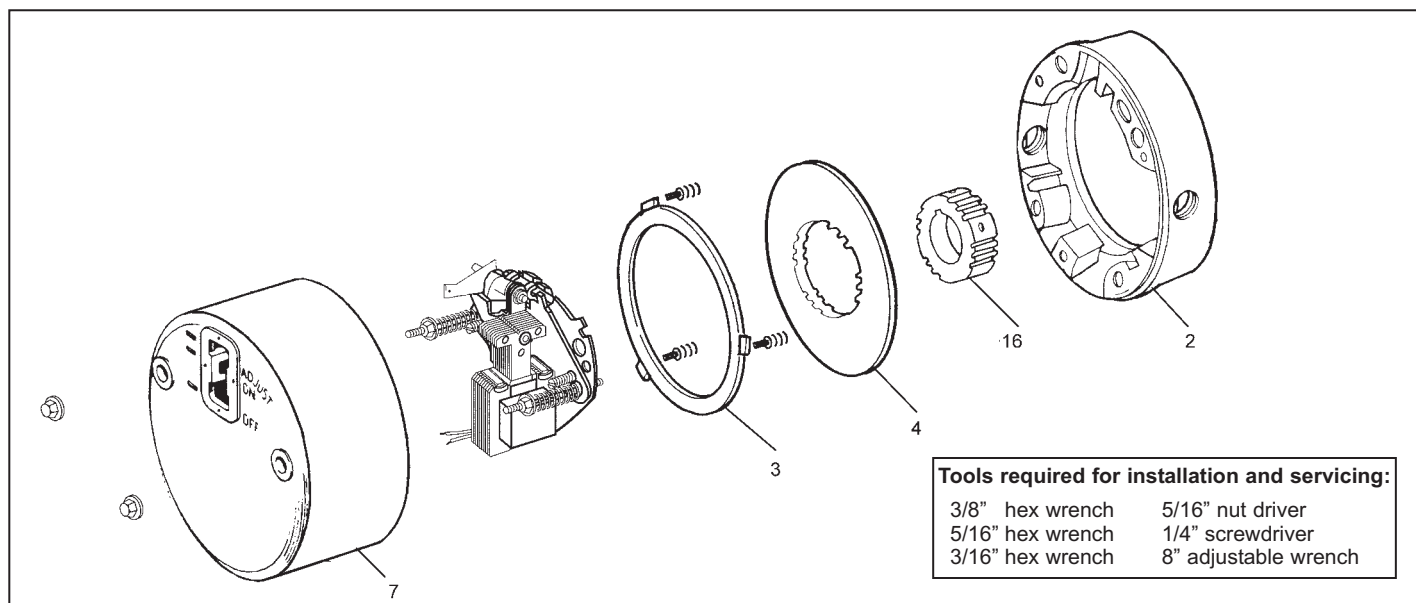

Tools required for installation and servicing:

3/8" hex wrench	5/16" nut driver
5/16" hex wrench	1/4" screwdriver
3/16" hex wrench	8" adjustable wrench

Typical Nameplate

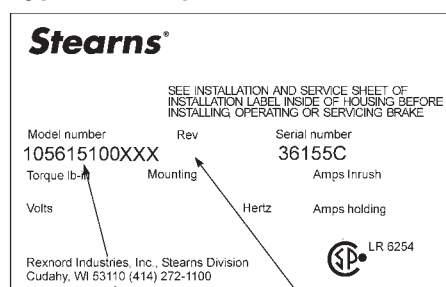

MODEL NUMBER REVISION CONTROL
Refer to actual nameplate on
brake for additional information

IMPORTANT

Please read these instructions carefully before installing, operating, or servicing your Stearns Brake. Failure to comply with these instructions could cause injury to personnel and/or damage to property if the brake is installed or operated incorrectly. For definition of limited warranty/liability, contact Rexnord Industries, LLC, Stearns Division, 5150 S. International Dr., Cudahy, WI 53110, (414) 272-1100.

Caution

1. Installation and servicing must be made in compliance with all local safety codes including Occupational Safety and Health Act (OSHA). All wiring and electrical connections must comply with the National Electric Code (NEC) and local electric codes in effect.

2. Do not operate the brake in atmospheres containing explosive gases or dusts.
3. To prevent an electrical hazard, disconnect power source before working on the brake. If power disconnect point is out of sight, lock disconnect in the *off* position and tag to prevent accidental application of power.
4. Make certain power source conforms to the requirements specified on the brake nameplate.
5. Be careful when touching the exterior of an operating brake. Allow sufficient time for brake to cool before disassembly. Surfaces may be hot enough to be painful or cause injury.
6. Do not operate brake with housing removed. All moving parts should be guarded.
7. Installation and servicing should be performed only by qualified personnel familiar with the construction and operation of the brake.
8. For proper performance and operation, only genuine Stearns parts should be used for repairs and replacements.
9. After usage, the brake interior will contain burnt and degraded friction material dust. This dust must be removed before servicing or adjusting the brake.

DO NOT BLOW OFF DUST using an air hose. It is important to avoid dispersing dust into the air or inhaling it, as this may be dangerous to your health.

- a) Wear a filtered mask or a respirator while removing dust from the inside of a brake.
- b) Use a vacuum cleaner or a soft brush to remove dust from the brake. When brushing, avoid causing the dust to become airborne. Collect the dust in a container, such as a bag, which can be sealed off.



Information required when ordering replacement parts:

- Give Part Number of parts or kits needed, Brake Model Number, and Brake Serial Number. The Brake Model and Serial Number may identify special brakes not covered by this parts list.
- When ordering hubs, specify shaft diameter (hub bore) and keyway.
- Enclosure is specified as follows:

NEMA 2 (formerly referred to as standard)

NEMA 4 (formerly referred to as DTWP dust-tight waterproof)

NEMA 4X (formerly referred to as BISSC washdown)

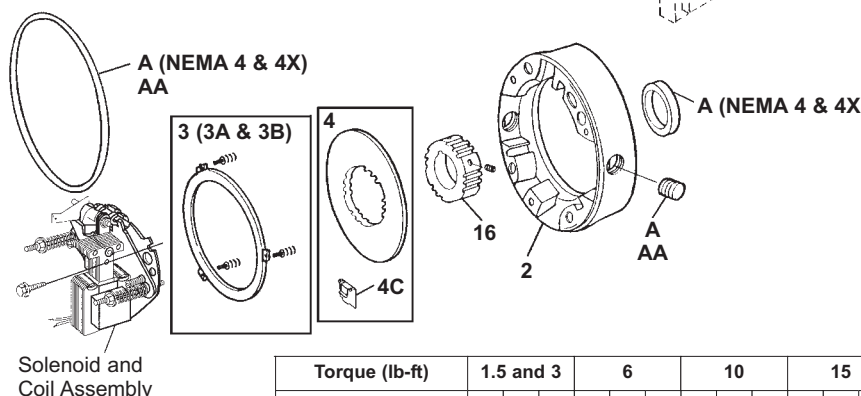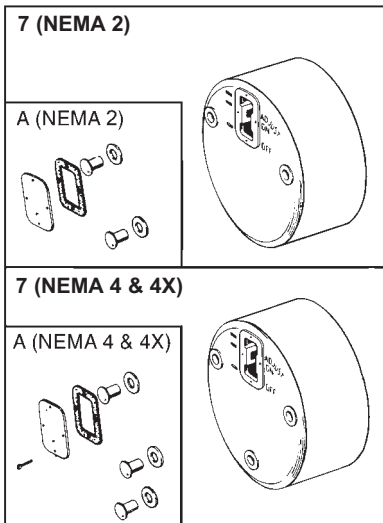**Support Plate Assembly**

Enlarged Interlock Microswitch located in area indicated (CC)



Solenoid and Coil Assembly

TABLE 1
Components of Standard AC or DC Brake

Item	Description		Part Number ↓	1-056-101-00	1-056-102-00	1-056-104-00	1-056-121-00	1-056-122-00	1-056-124-00	1-056-131-00	1-056-132-00	1-056-134-00	1-056-141-00	1-056-142-00	1-056-144-00	1-056-151-00	1-056-152-00	1-056-154-00
A	Hardware kit - NEMA 2 Hardware kit - NEMA 4 Hardware kit - NEMA 4X		5-66-1011-00 5-66-1012-00 5-66-1013-00	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1
AA	Plug/Gasket kit — NEMA 4 ** Close couple — NEMA 4X — NEMA 4 3 disc — NEMA 4X 3 disc		5-63-0532-00 5-63-0533-00 5-63-0534-00 5-63-0535-00		1	1	1	1	1	1	1	1	1	1	1		1	1
7	Housing — NEMA 2 Housing — NEMA 4 Housing — NEMA 4X		8-007-533-00 8-007-533-10 8-007-533-12	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1
3	Stationary disc kit (1 disc universal 3 disc horizontal)		5-66-8354-00	1	1	1	1	1	1	1						3	3	3
3A	Stationary disc kit (2 disc universal)		5-66-8355-00							1	1	1	1	1				
3B	Stationary disc kit (3 disc horizontal)		5-66-8356-00													1	1	1
Not Shown	Vertical Spring Kit (3 disc)		5-63-0525-00													1	1	1
4	Friction disc kit		5-66-8462-00	1	1	1	1	1	1	1	2	2	2	2	2	2	3	3
4C	Stabilizing clip (part of 5-66-8462-00)			2	2	2	2	2	2	2	*	*	*	*	*	*	*	*
DP	Disc pack kit — 1 disc Disc pack kit — 2 disc Disc pack kit — 3 disc		5-66-8601-00 5-66-8602-00 5-66-8603-00	1	1	1	1	1	1		1	1	1	1	1	1	1	1
16	Hub and set screw assembly 1 & 2 disc (NEMA 2)	5/8 bore 7/8 bore 1-1/8 bore	5-16-5150-00-01B 5-16-5150-00-01D 5-16-5150-00-01E	1 1 1			1 1 1			1 1 1			1 1 1					
	Hub and set screw assembly 1 disc (NEMA 4 & 4X)	5/8 bore 7/8 bore 1-1/8 bore	5-16-5151-00-01B 5-16-5151-00-01D 5-16-5151-00-01E		1 1 1	1 1 1	1 1 1	1 1 1										
	Hub and set screw assembly 3 disc (NEMA 2) and 2 & 3 disc (NEMA 4 & 4X)	5/8 bore 7/8 bore 1-1/8 bore	5-16-5153-00-01B 5-16-5153-00-01D 5-16-5153-00-01E								1 1 1	1 1 1		1 1 1	1 1 1	1 1 1	1 1 1	1 1 1
2	Endplate and stationary disc assembly	1 & 2 disc (NEMA 2) 3 disc (NEMA 2) 1 disc (NEMA 4) 2 & 3 disc (NEMA 4) 1 disc (NEMA 4X) 2 & 3 disc (NEMA 4X)	5-02-5031-00 5-02-5032-00 5-02-5033-00 5-02-5034-00 5-02-5037-00 5-02-5038-00	1	1		1	1		1		1		1		1		1

* Certain multiple friction disc model numbers require a single stabilizer clip (D1) added to each friction disc. If your brake has these clips, they must be replaced when the friction disc is replaced. This clip is included as part of the friction disc kit 5-66-8462-00.

** Close coupled brakes identified by 8 in the 8th digit. example: 1-056-XXX-8X.

TABLE 2
Components of Support Plate
and Coil Assembly

			Torque (lb-ft)	1.5 & 3		6		10		15		20		25	
			NEMA Enclosure	2	4 4X	2	4 4X	2	4 4X	2	4 4X	2	4 4X	2	4 4X
			Support Plate Assy. (Items 6 through 131 and Z) →	5-42-5601-00-21	5-42-5601-00-22	5-42-5605-00-21	5-42-5605-00-22	5-42-5607-00-21	5-42-5607-00-22	5-42-5609-00-21	5-42-5609-00-22	5-42-5611-00-21	5-42-5611-00-22	5-42-5611-00-21	5-42-5611-00-22
TABLE 2 Components of Support Plate and Coil Assembly															
Item	Description		Part Number↓												
6	Bearing		8-006-501-00	1	1	1	1	1	1	1	1	1	1	1	1
8	Solenoid lever		8-008-504-01	1	1	1	1	1	1	1	1	1	1	1	1
8R	Retaining ring		9-03-0057-00	2	2	2	2	2	2	2	2	2	2	2	2
8W	Spacer		9-45-0168-00	3	3	3	3	3	3	3	3	3	3	3	3
11N	Torque adjustment nut		9-40-3928-00	2	2	2	2	2	2	2	2	2	2	2	2
10	Wear adjustment screw		9-17-8420-00	2	2	2	2	2	2	2	2	2	2	2	2
11	Pressure spring		9-70-1215-00	2	2										
	Pressure spring		9-70-1523-00			2	2	2	2						
	Pressure spring		9-70-1524-00							2	2	2	2	2	2
11W	Spring washer		9-46-0010-00			4	4	4	4	4	4	4	4	4	4
17	Lever arm and stop nut assy.		5-17-5011-00	1	1	1	1	1	1	1	1	1	1	1	1
26	Bearing pin		9-29-4826-00	1	1	1	1	1	1	1	1	1	1	1	1
29A	Plunger stop		8-094-503-00	1	1	1	1	1	1	1	1	1	1	1	1
28	Release Indicator		8-028-502-00	1	1	1	1	1	1	1	1	1	1	1	1
59	Release spring		9-70-0809-000	1	1	1	1	1	1	1	1	1	1	1	1
126	Support plate and spring stud assembly (2 housing studs)		5-26-5019-00	1		1		1		1		1		1	
	Support plate and spring stud assembly (3 housing studs)		5-26-5020-00		1		1		1		1		1		1
131	Pivot pin		9-29-4836-00	1	1	1	1	1	1	1	1	1	1	1	1
142S	Mounting screws		9-25-9013-00	3	3	3	3	3	3	3	3	3	3	3	3
AC Brakes															
Z	No. 4 solenoid kit (rev A & B) (rev B only)		5-66-5042-00	1		1		1		1		1		1	
			5-96-5042-01	1		1		1		1		1		1	
AC	No. 4 coil kit 60 Hz	115/230 Vac	5-66-6407-33	1											
		230/460 Vac	5-66-6409-33	1											
		115 Vac	5-66-6401-33	1											
		230 Vac	5-66-6402-33	1											
		460 Vac	5-66-6404-33	1											
		575 Vac	5-66-6405-33	1											
	No. K4 coil kit 60 Hz	115/230 Vac	5-66-6457-33			1		1							
		230/460 Vac	5-66-6459-33			1		1							
		115 Vac	5-66-6451-33			1		1							
		230 Vac	5-66-6452-33			1		1							
		460 Vac	5-66-6454-33			1		1							
		575 Vac	5-66-6455-33			1		1							
	No. K4+ coil kit 60 Hz	115/230 Vac	5-66-6407-23							1		1			
		230/460 Vac	5-66-6409-23							1		1			
		115 Vac	5-66-6401-23							1		1			
		230 Vac	5-66-6402-23							1		1			
460 Vac		5-66-6404-23							1		1				
575 Vac		5-66-6405-23							1		1				
No. M4+ coil kit 60 Hz	115/230 Vac	5-66-6457-23												1	
	230/460 Vac	5-66-6459-23												1	
	115 Vac	5-66-6451-23												1	
	230 Vac	5-66-6452-23												1	
	460 Vac	5-66-6454-23												1	
	575 Vac	5-66-6455-23												1	
CC	Brake release interlock switch (optional)		5-57-5526-00	1		1		1		1		1		1	
DC Brakes															
AD	No. 4 + coil assembly	115 Vdc	5-96-6416-43	1											
		230 Vdc	5-96-6417-43	1											
	No. K4 + coil assembly	115 Vdc	5-96-6416-23			1		1							
		230 Vdc	5-96-6417-23			1		1							
No. M4 + coil assembly	115 Vdc	5-96-6466-23							1		1				
	230 Vdc	5-96-6467-23							1		1				
No. P4 + coil assembly	115 Vdc	5-96-6446-43												1	
	230 Vdc	5-96-6447-43												1	
BD	Electronic DC switch kit	24/28 Vdc	5-57-5712-15	1		1		1		1		1		1	
		115 Vdc	5-57-5716-15	1		1		1		1		1		1	
		230 Vdc	5-57-5717-15	1		1		1		1		1		1	

Solenoid and Coil Assembly

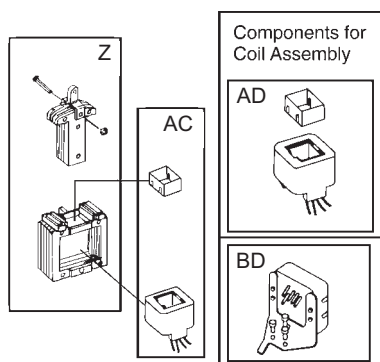


TABLE 3
Contents of Kits and Assemblies

Letter Designation	Kit Description
A	Hardware kit – NEMA 2 (5-66-1011-00) 2 – Housing acorn nuts 2 – Conduit plugs 1 – Release cover with clip 1 – Release cover gasket
	Hardware kit – NEMA 4 (5-66-1012-00) Hardware kit – NEMA 4X (5-66-1013-00) 1 – Endplate oil seal 1 – Drain plug 3 – Housing nuts 3 – Housing nut “O” rings 1 – Release cover 4 – Release cover screws 1 – Release cover gasket 1 – Housing-to-endplate gasket
3	Stationary disc kit (5-66-8354-00) 1 – Stationary disc
3A	Stationary disc kit (5-66-8355-00) 2 – Stationary discs with springs
3B	Stationary disc kit (5-66-8356-00) 3 – Stationary discs with springs
4	Friction disc kit (5-66-8462-00) 1 – Friction disc 2 – Stabilizing clips
DP	Disc pack kit (5-66-860X-00) 1, 2 or 3 – Friction disc(s) 1, 2 or 3 – Stationary disc(s) 2 – Stabilizing clips (5-66-8601-00 only) 3, 6 or 9 – Stationary disc separator springs
16	Hub and set screw assembly – all types, all bores (5-16-515X-00) 1 – Brake hub 2 – Set screws
Z	No. 4 solenoid kit (5-66-5042-00) (5-96-5042-01) 1 – Plunger 1 – Solenoid link 1 – Frame (including mounting bracket) 1 – Solenoid link cap screw 1 – Solenoid link nut 3 – Solenoid mounting screws
AC AD	No. 4 AC coil kit (5-66-64XX-X3) and DC coil assembly (5-96-64XX-X3) Coil / Top Plunger guide / Wire nut
BD	DC switch kit (5-57-571X-15) 1 – Electronic switch 1 – Mounting bracket 3 – Bracket mounting screws 4 – Switch mounting screws 4 – Nuts 4 – Lock washers 5 – Crimp connectors
CC	Brake release interlock switch (5-57-5526-00) 1 – Microswitch 1 – Mounting bracket 2 – Bracket mounting screws 2 – Switch mounting screws 2 – Lock washers 2 – Nuts 2 – Lead wire assembly

Optional Modification Kits

[BACK TO PRODUCT PAGE](#)

TABLE 4

Catalog Mod Number	Description	Part Number ↓	Torque (lb-ft)	1.5, 3 & 6	10 & 15	20 & 25
			Brake Model Number→	1-056-10X 1-056-11X 1-056-12X	1-056-13X 1-056-14X	1-056-15X 1-056-16X
M4	Brass Stationary Disc	8-003-513-02	1	2	3	
M13	Space Heater 115 Vac 230 Vac	5-27-2004-00 5-27-2005-00	1 1	1 1	1 1	
M17	Terminal Strip	5-63-0524-00	1	1	1	
M21	Vertical Spring Kit (2 disc) (3 disc)	5-63-0539-00 5-63-0525-00		1		1

Catalog Mod Number	Description	Part Number ↓	Torque (lb-ft)	1.5 & 3	6 & 10	15 & 20	25
			Brake Model Number→	1-056-101-00 1-056-111-00 1-056-121-00 1-056-131-00 1-056-141-00 1-056-151-00 1-056-161-00			
M6	No. 4 Class 'H' coil kit 60 Hz	115/230 Vac	5-96-6407-05	1			
		230/460 Vac	5-96-6409-05	1			
		115 Vac	5-96-6401-05	1			
		230 Vac	5-96-6402-05	1			
		460 Vac	5-96-6404-05	1			
		575 Vac	5-96-6405-05	1			
	No. K4 Class 'H' coil kit 60 Hz	115/230 Vac	5-96-6457-05		1		
		230/460 Vac	5-96-6459-05		1		
		115 Vac	5-96-6451-05		1		
		230 Vac	5-96-6452-05		1		
		460 Vac	5-96-6454-05		1		
		575 Vac	5-96-6455-05		1		
	No. K4+ Class 'H' coil kit 60 Hz	115/230 Vac	5-96-6407-25			1	
		230/460 Vac	5-96-6409-25			1	
		115 Vac	5-96-6401-25			1	
		230 Vac	5-96-6402-25			1	
		460 Vac	5-96-6404-25			1	
		575 Vac	5-96-6405-25			1	
	No. M4+ Class 'H' coil kit 60 Hz	115/230 Vac	5-96-6457-25				1
		230/460 Vac	5-96-6459-25				1
		115 Vac	5-96-6451-25				1
		230 Vac	5-96-6452-25				1
		460 Vac	5-96-6454-25				1
		575 Vac	5-96-6455-25				1




Rexnord Industries, Inc.
Stearns Division
5150 S. International Drive
Cudahy, Wisconsin 53110
(414) 272-1100 Fax: (414) 277-4364
www.stearns.rexnord.com


Stearns® Spring-Set Disc Brakes

Parts List for 1-056-200 Series (rev. A & B) Manual Adjust Brakes

For Installation and Service
Instructions refer to sheet part
number 8-078-905-60.
Instructions and parts list also
available at
www.stearns.rexnord.com.

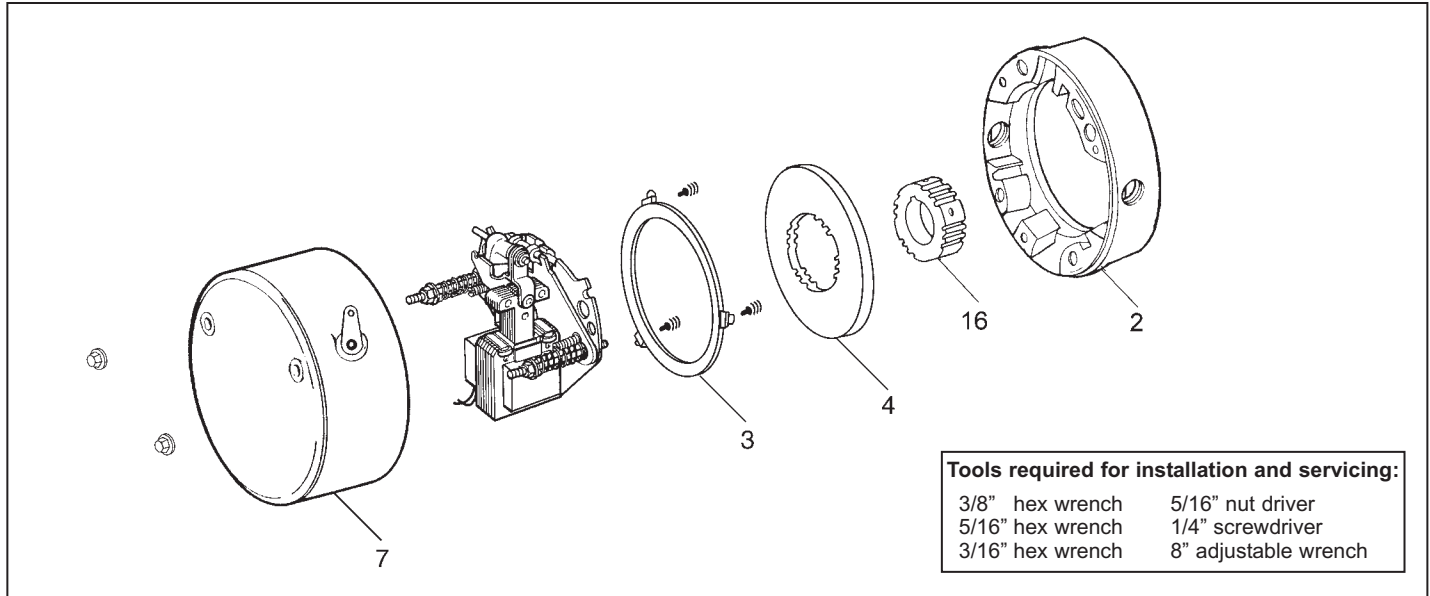

Typical Nameplate

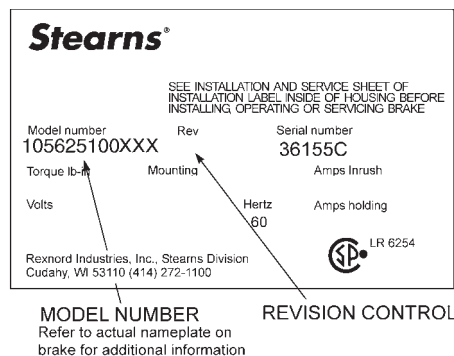

IMPORTANT

Please read these instructions carefully before installing, operating, or servicing your Stearns Brake. Failure to comply with these instructions could cause injury to personnel and/or damage to property if the brake is installed or operated incorrectly. For definition of limited warranty/liability, contact Rexnord Industries, LLC, Stearns Division, 5150 S. International Dr., Cudahy, WI 53110, (414) 272-1100.

Caution

1. Installation and servicing must be made in compliance with all local safety codes including Occupational Safety and Health Act (OSHA). All wiring and electrical connections must comply with the National Electric Code (NEC) and local electric codes in effect.

2. Do not operate the brake in atmospheres containing explosive gases or dusts.
3. To prevent an electrical hazard, disconnect power source before working on the brake. If power disconnect point is out of sight, lock disconnect in the *off* position and tag to prevent accidental application of power.
4. Make certain power source conforms to the requirements specified on the brake nameplate.
5. Be careful when touching the exterior of an operating brake. Allow sufficient time for brake to cool before disassembly. Surfaces may be hot enough to be painful or cause injury.
6. Do not operate brake with housing removed. All moving parts should be guarded.
7. Installation and servicing should be performed only by qualified personnel familiar with the construction and operation of the brake.
8. For proper performance and operation, only genuine Stearns parts should be used for repairs and replacements.
9. After usage, the brake interior will contain burnt and degraded friction material dust. This dust must be removed before servicing or adjusting the brake.

DO NOT BLOW OFF DUST using an air hose. It is important to avoid dispersing dust into the air or inhaling it, as this may be dangerous to your health.

- a) Wear a filtered mask or a respirator while removing dust from the inside of a brake.
- b) Use a vacuum cleaner or a soft brush to remove dust from the brake. When brushing, avoid causing the dust to become airborne. Collect the dust in a container, such as a bag, which can be sealed off.

Information required when ordering replacement parts:

- Give Part Number of parts or kits needed, Brake Model Number, and Brake Serial Number. The Brake Model and Serial Number may identify special brakes not covered by this parts list
- When ordering hubs, specify shaft diameter (hub bore) and keyway.

• Enclosure is specified as follows:

NEMA 2 (formerly referred to as standard)

NEMA 4 (formerly referred to as DTWP dust-tight waterproof)

NEMA 4X (formerly referred to as BISSC washdown)

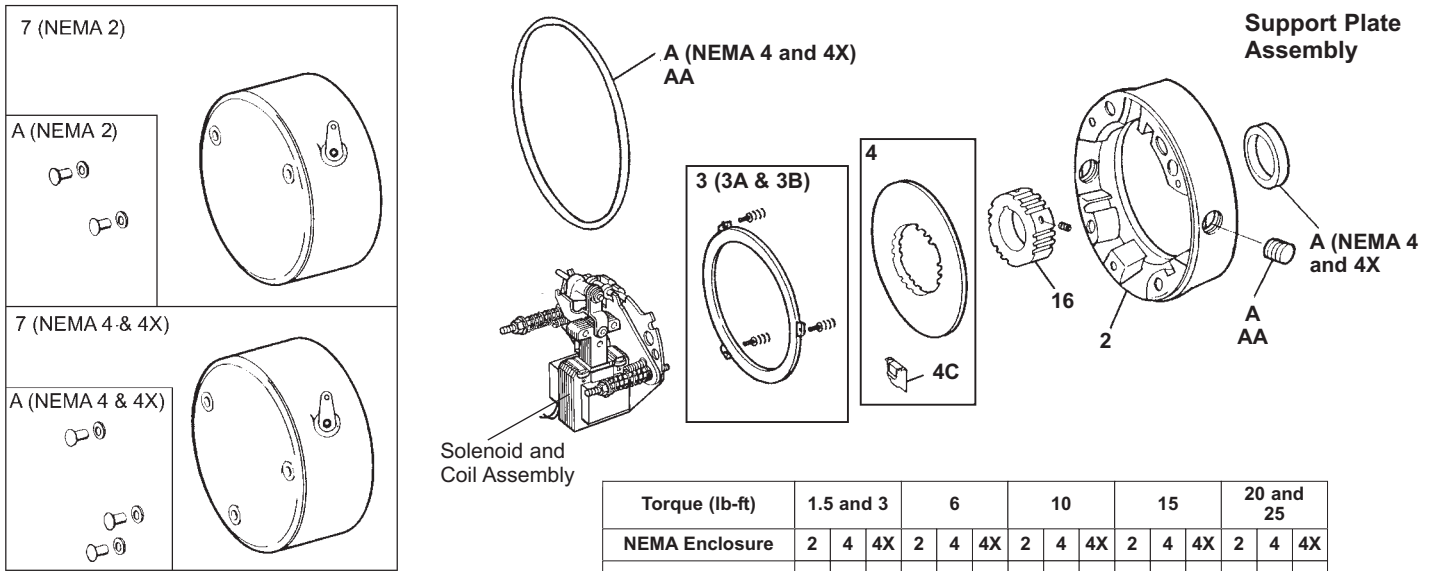


TABLE 1
Components of Standard AC or DC Brake

Item	Description		Part Number ↓	1-056-201-0	1-056-202-0	1-056-204-0	1-056-221-0	1-056-222-0	1-056-224-0	1-056-231-0	1-056-232-0	1-056-234-0	1-056-241-0	1-056-242-0	1-056-244-0	1-056-251-0	1-056-252-0	1-056-254-0
A	Hardware kit - NEMA 2 Hardware kit - NEMA 4 Hardware kit - NEMA 4X		5-66-1014-00 5-66-1015-00 5-66-1016-00	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1
AA	Plug/Gasket kit ** Close couple	— NEMA 4 — NEMA 4X — NEMA 4 3 disc — NEMA 4X 3 disc	5-63-0532-00 5-63-0533-00 5-63-0534-00 5-63-0537-00		1	1	1	1	1	1	1	1	1	1	1	1	1	1
7	Housing & release kit — NEMA 2 Housing & release kit — NEMA 4 Housing & release kit — NEMA 4X		5-07-5040-00 5-07-5041-00 5-07-5043-00	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1
3	Stationary disc kit (1 disc universal 3 disc horizontal)		5-66-8354-00	1	1	1	1	1	1							3	3	3
3A	Stationary disc kit (2 disc universal)		5-66-8355-00							1	1	1	1	1	1	1	1	1
3B	Stationary disc kit (3 disc universal)		5-66-8356-00													1	1	1
Not Shown	Vertical spring kit (3 disc)		5-63-0525-00													1	1	1
4 4C	Friction disc kit Stabilizing clip (part of 5-66-8462-00)		5-66-8462-00	1 2	1 2	1 2	1 2	1 2	1 2	2 *	2 *	2 *	2 *	2 *	2 *	3 *	3 *	3 *
DP	Disc pack kit — 1 disc Disc pack kit — 2 disc Disc pack kit — 3 disc		5-66-8601-00 5-66-8602-00 5-66-8603-00	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1
16	Hub and set screw assembly 1 & 2 disc (NEMA 2)		5/8 bore 5-16-5150-00-01B 7/8 bore 5-16-5150-00-01D 1-1/8 bore 5-16-5150-00-01E	1 1 1			1 1 1			1 1 1		1 1 1						
	Hub and set screw assembly 1 disc (NEMA 4 & 4X)		5/8 bore 5-16-5151-00-01B 7/8 bore 5-16-5151-00-01D 1-1/8 bore 5-16-5151-00-01E		1 1 1	1 1 1		1 1 1	1 1 1									
	Hub and set screw assembly 3 disc (NEMA 2) and 2 & 3 disc (NEMA 4 & 4X)		5/8 bore 5-16-5153-00-01B 7/8 bore 5-16-5153-00-01D 1-1/8 bore 5-16-5153-00-01E								1 1 1	1 1 1		1 1 1	1 1 1	1 1 1	1 1 1	1 1 1
2	Endplate	1 disc (NEMA 2)	8-002-580-01-30F	1			1			1			1			1		
	Endplate	2 & 3 disc (NEMA 2)	8-002-582-01-30F		1			1										
	Endplate & Seal Assy.	1 disc (NEMA 4)	5-02-5043-00															
	Endplate & Seal Assy.	2 & 3 disc (NEMA 4)	5-02-5044-00															
	Endplate & Seal Assy.	1 disc (NEMA 4X)	5-02-5045-00			1			1									
	Endplate & Seal Assy.	2 & 3 disc (NEMA 4X)	5-02-5046-00									1			1			1

* Certain multiple friction disc model numbers require a single stabilizer clip (D1) added to each friction disc. If your brake has these clips, they must be replaced when the friction disc is replaced. This clip is included as part of the friction disc kit 5-66-8462-00.

** Close coupled brakes identified by 8 in the 8th digit. example: 1-056-XXX-8X.

Support Plate Assembly

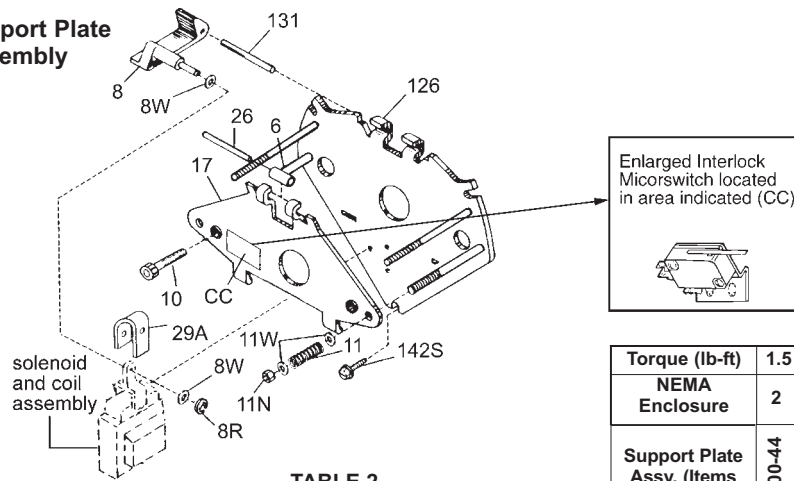


TABLE 2
Components of Support Plate and Coil Assembly

Item	Description		Part Number ↓	5-4	5-4	5-4	5-4	5-4	5-4	5-4	5-4	5-4	5-4	5-4	5-4
6 8R 8W	Bearing Solenoid lever Retaining ring Spacer		8-006-501-00 8-008-504-05 9-03-0057-00 9-45-0168-00	1 1 1 2	1 1 1 2	1 1 1 2	1 1 1 2	1 1 1 2	1 1 1 2	1 1 1 2	1 1 1 2	1 1 1 2	1 1 1 2	1 1 1 2	1 1 1 2
11N 10	Torque adjustment nut Wear adjustment screw		9-40-3928-00 9-17-8420-00	2 2	2 2	2 2	2 2	2 2	2 2	2 2	2 2	2 2	2 2	2 2	2 2
11 11W	Pressure spring Pressure spring Pressure spring Spring washer		9-70-1215-00 9-70-1523-00 9-70-1524-00 9-46-0010-00	2 2	2 2	 2 4	 2 4	 2 4	 2 4	 2 4	 2 4	 2 4	 2 4	 2 4	 2 4
17 26 29A	Lever arm and stop nut assy. Bearing pin Plunger stop		5-17-5011-00 9-29-4826-00 8-094-503-00	1 1 1	1 1 1	1 1 1	1 1 1	1 1 1	1 1 1	1 1 1	1 1 1	1 1 1	1 1 1	1 1 1	1 1 1
126	Support plate and spring stud assembly (2 housing studs) Support plate and spring stud assembly (3 housing studs)		5-26-5019-00 5-26-5020-00	1 1	 1 1	 1 1	 1 1	 1 1	 1 1	 1 1	 1 1	 1 1	 1 1	 1 1	 1 1
131 142S	Pivot pin Mounting screws		9-29-4836-00 9-25-9013-00	1 3	1 3	1 3	1 3	1 3	1 3	1 3	1 3	1 3	1 3	1 3	1 3
AC Brakes															
Z	No. 4 solenoid kit (rev A & B) (rev B only)		5-66-5047-00 5-96-5047-01	1 1	 1	 1	 1	 1	 1	 1	 1	 1	 1	 1	 1
AC	No. 4 coil kit 60 Hz	115/230 Vac	5-66-6407-33	1											
		230/460 Vac	5-66-6409-33	1											
		115 Vac	5-66-6401-33	1											
		230 Vac	5-66-6402-33	1											
		460 Vac	5-66-6404-33	1											
		575 Vac	5-66-6405-33	1											
	No. K4 coil kit 60 Hz	115/230 Vac	5-66-6457-33			1		1							
		230/460 Vac	5-66-6459-33			1		1							
		115 Vac	5-66-6451-33			1		1							
		230 Vac	5-66-6452-33			1		1							
		460 Vac	5-66-6454-33			1		1							
		575 Vac	5-66-6455-33			1		1							
	No. K4+ coil kit 60 Hz	115/230 Vac	5-66-6407-23							1		1			
		230/460 Vac	5-66-6409-23							1		1			
		115 Vac	5-66-6401-23							1		1			
		230 Vac	5-66-6402-23							1		1			
		460 Vac	5-66-6404-23							1		1			
		575 Vac	5-66-6405-23							1		1			
	No. M4+ coil kit 60 Hz	115/230 Vac	5-66-6457-23												1
		230/460 Vac	5-66-6459-23												1
		115 Vac	5-66-6451-23												1
		230 Vac	5-66-6452-23												1
		460 Vac	5-66-6454-23												1
		575 Vac	5-66-6455-23												1
CC	Brake release interlock switch (optional)		5-57-5526-00	1		1		1		1		1		1	
DC Brakes															
AD	No. 4 + coil assembly	115 Vdc	5-96-6416-43	1											
		230 Vdc	5-96-6417-43	1											
	No. K4 + coil assembly	115 Vdc	5-96-6416-23			1		1							
		230 Vdc	5-96-6417-23			1		1							
No. M4 + coil assembly	115 Vdc	5-96-6466-23							1		1				
	230 Vdc	5-96-6467-23							1		1				
No. P4 + coil assembly	115 Vdc	5-96-6446-43												1	
	230 Vdc	5-96-6447-43												1	
BD	Electronic DC switch kit	24/28 Vdc	5-57-5712-15	1		1		1		1		1		1	
		115 Vdc	5-57-5716-15	1		1		1		1		1		1	
		230 Vdc	5-57-5717-15	1		1		1		1		1		1	

Solenoid and Coil Assembly

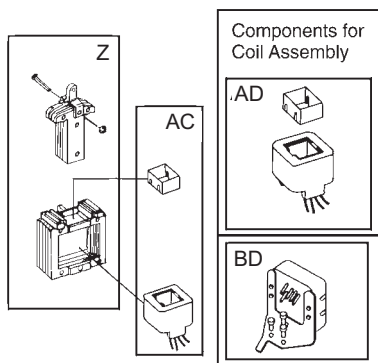


TABLE 3
Contents of Kits and Assemblies

Item	Kit Description
A	Hardware kit – NEMA 2 (5-66-1014-00) 2 – Housing acorn nuts 2 – Conduit plugs
	Hardware kit – NEMA 4 (5-66-1015-00) Hardware kit – NEMA 4X (5-66-1016-00) 3 – Housing nuts 3 – Housing nut gaskets 1 – Endplate oil seal 2 – Endplate hole plugs 1 – Housing to endplate gasket 2 – Endplate conduit pipe plugs
3	Stationary disc kit (5-66-8354-00) 1 – Stationary disc
3A	Stationary disc kit (5-66-8355-00) 2 – Stationary discs with springs
3B	Stationary disc kit (5-66-8356-00) 3 – Stationary discs with springs
4	Friction disc kit (5-66-8462-00) 1 – Friction disc 2 – Stabilizing clips
DP	Disc pack kit (5-66-860X-00) 1, 2 or 3 – Friction disc(s) 1, 2 or 3 – Stationary disc(s) 2 – Stabilizing clips (5-66-8601-00 only) 3, 6 or 9 – Stationary disc separator springs
16	Hub and screw assembly – all types, all bores (5-16-515X-00) 1 – Brake hub 2 – Set screws
Z	No. 4 solenoid kit (5-66-5047-00) (5-96-5047-01) 1 – Plunger 1 – Solenoid link 1 – Frame (including mounting bracket) 1 – Solenoid link cap screw 1 – Solenoid link nut 3 – Solenoid mounting screws
AC AD	No. 4 AC coil kit (5-66-64-XX-X3) and DC coil assembly (5-96-64XX-X3) Coil / Top Plunger guide / Wire nut
BD	DC switch kit (5-57-571X-15) 1 – Electronic switch 1 – Mounting bracket 3 – Bracket mounting screws 4 – Switch mounting screws 4 – nuts 4 – Lock washers 5 – Crimp connectors
CC	Brake release interlock switch (5-57-5526-00) 1 – Microswitch 1 – Mounting bracket 2 – Bracket mounting screws 2 – Switch mounting screws 2 – Lock washers 2 – Nuts 2 – Lead wire assembly

Optional Modification Kits

[BACK TO PRODUCT PAGE](#)

TABLE 4

Catalog Mod Number	Description	Part Number ↓	Torque (lb-ft)	1.5, 3 & 6	10 & 15	20 & 25
M4	Brass Stationary Disc	8-003-513-02	1	2	3	
M13	Space Heater 115 Vac 230 Vac	5-27-2004-00 5-27-2005-00	1 1	1 1	1 1	
M17	Terminal Strip	5-63-0524-00	1	1	1	
M21	Vertical Spring Kit (2 disc) (3 disc)	5-63-0539-00 5-63-0525-00		1		1

Catalog Mod Number	Description	Part Number ↓	Torque (lb-ft)	1.5 & 3	6 & 10	15 & 20	25
M6	No. 4 Class 'H' coil kit 60 Hz	115/230 Vac 230/460 Vac	5-96-6407-05 5-96-6409-05	1 1			
		115 Vac 230 Vac	5-96-6401-05 5-96-6402-05	1 1			
		460 Vac 575 Vac	5-96-6404-05 5-96-6405-05	1 1			
		115/230 Vac 230/460 Vac	5-96-6457-05 5-96-6459-05		1 1		
		115 Vac 230 Vac	5-96-6451-05 5-96-6452-05		1 1		
		460 Vac 575 Vac	5-96-6454-05 5-96-6455-05		1 1		
	No. K4+ Class 'H' coil kit 60 Hz	115/230 Vac 230/460 Vac	5-96-6407-25 5-96-6409-25			1 1	
		115 Vac 230 Vac	5-96-6401-25 5-96-6402-25			1 1	
		460 Vac 575 Vac	5-96-6404-25 5-96-6405-25			1 1	
		115/230 Vac 230/460 Vac	5-96-6457-25 5-96-6459-25				1 1
		115 Vac 230 Vac	5-96-6451-25 5-96-6452-25				1 1
		460 Vac 575 Vac	5-96-6454-25 5-96-6455-25				1 1
	No. M4+ Class 'H' coil kit 60 Hz	115/230 Vac 230/460 Vac	5-96-6457-25 5-96-6459-25				1 1
		115 Vac 230 Vac	5-96-6451-25 5-96-6452-25				1 1
		460 Vac 575 Vac	5-96-6454-25 5-96-6455-25				1 1
		115/230 Vac 230/460 Vac	5-96-6457-25 5-96-6459-25				1 1
		115 Vac 230 Vac	5-96-6451-25 5-96-6452-25				1 1
		460 Vac 575 Vac	5-96-6454-25 5-96-6455-25				1 1

Rexnord Industries, LLC
Stearns Division
5150 S. International Drive
Cudahy, Wisconsin 53110
(414) 272-1100 Fax: (414) 277-4364
www.stearns.rexnord.com




Stearns® Spring-Set Disc Brakes

P/N 8-078-906-03
effective 01/31/08

Parts List for 1-056-300 Series (rev. A & B) Manual Adjust Brakes


For Installation and Service Instructions refer to sheet part number 8-078-905-60. Instructions and parts list also available at www.stearns.rexnord.com.

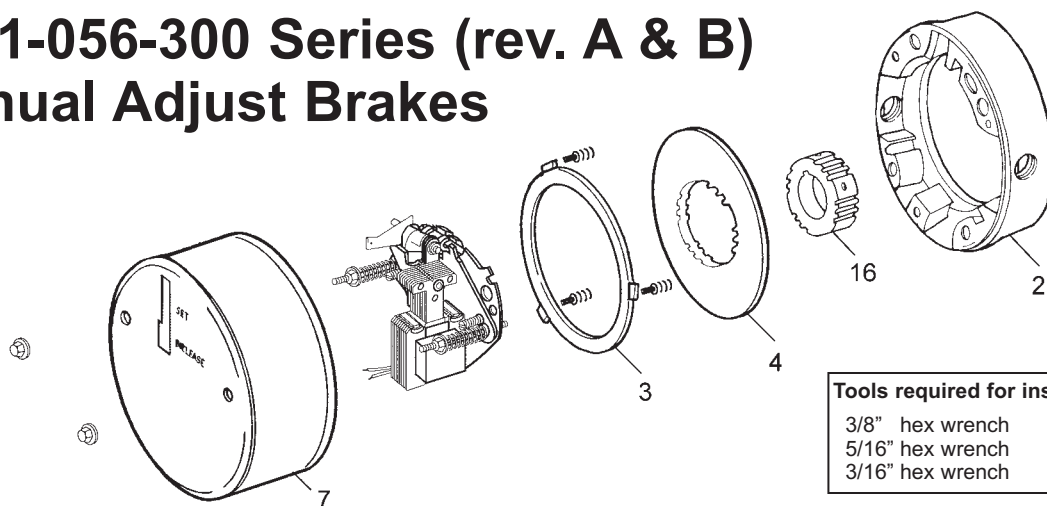

Tools required for installation and servicing:

3/8" hex wrench	5/16" nut driver
5/16" hex wrench	1/4" screwdriver
3/16" hex wrench	8" adjustable wrench

Typical Nameplate

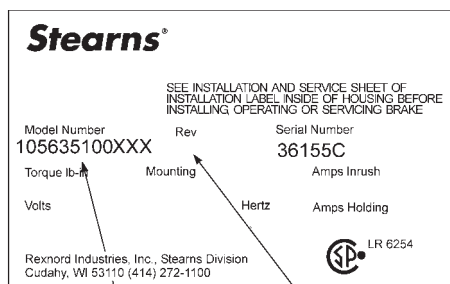

MODEL NUMBER
Refer to actual nameplate on
brake for additional information

REVISION CONTROL

IMPORTANT

Please read these instructions carefully before installing, operating, or servicing your Stearns Brake. Failure to comply with these instructions could cause injury to personnel and/or damage to property if the brake is installed or operated incorrectly. For definition of limited warranty/liability, contact Rexnord Industries, LLC, Stearns Division, 5150 S. International Dr., Cudahy, WI 53110, (414) 272-1100.

Caution

1. Installation and servicing must be made in compliance with all local safety codes including Occupational Safety and Health Act (OSHA). All wiring and electrical connections must comply with the National Electric Code (NEC) and local electric codes in effect.

2. Do not operate the brake in atmospheres containing explosive gases or dusts.
3. To prevent an electrical hazard, disconnect power source before working on the brake. If power disconnect point is out of sight, lock disconnect in the *off* position and tag to prevent accidental application of power.
4. Make certain power source conforms to the requirements specified on the brake nameplate.
5. Be careful when touching the exterior of an operating brake. Allow sufficient time for brake to cool before disassembly. Surfaces may be hot enough to be painful or cause injury.
6. Do not operate brake with housing removed. All moving parts should be guarded.
7. Installation and servicing should be performed only by qualified personnel familiar with the construction and operation of the brake.
8. For proper performance and operation, only genuine Stearns parts should be used for repairs and replacements.
9. After usage, the brake interior will contain burnt and degraded friction material dust. This dust must be removed before servicing or adjusting the brake.

DO NOT BLOW OFF DUST using an air hose. It is important to avoid dispersing dust into the air or inhaling it, as this may be dangerous to your health.


- a) Wear a filtered mask or a respirator while removing dust from the inside of a brake.
- b) Use a vacuum cleaner or a soft brush to remove dust from the brake. When brushing, avoid causing the dust to become airborne. Collect the dust in a container, such as a bag, which can be sealed off.

Information required when ordering replacement parts:

- Give Part Number of parts or kits needed, Brake Model Number, and Brake Serial Number. The Brake Model and Serial Number may identify special brakes not covered by this parts list.
- When ordering hubs, specify shaft diameter (hub bore) and keyway.

NOTE: Housing Enclosure is NEMA 1 rated (formerly referred to as standard).

Support Plate Assembly

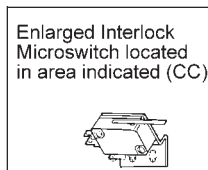

Solenoid and Coil Assembly

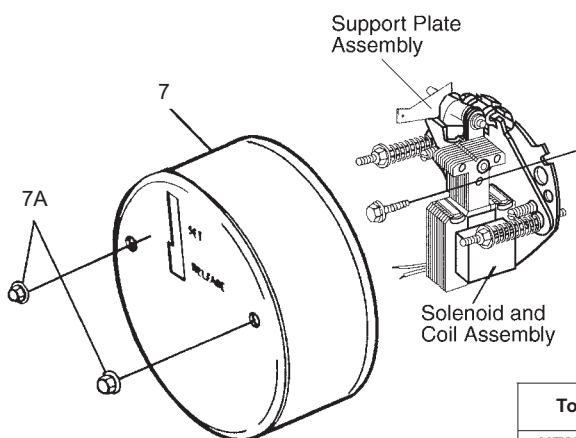
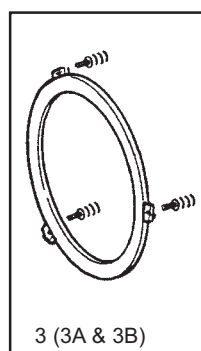
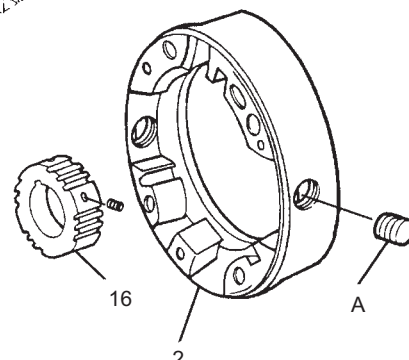
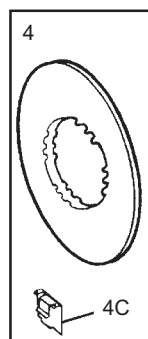


TABLE 1
Components of Standard AC or DC Brake

Item	Description		Part Number ↓	1-056-301-00	1-056-305-00	1-056-321-00	1-056-325-00	1-056-331-00	1-056-335-00	1-056-341-00	1-056-345-00	1-056-351-00	1-056-355-00
7 7A	Housing Housing nut		8-007-543-00 9-40-3128-00	1 2	1 2	1 2	1 2	1 2	1 2	1 2	1 2	1 2	1 2
3 3A 3B	Stationary disc kit (1 disc universal 3 disc horizontal) Stationary disc kit (2 disc universal) Stationary disc kit (3 disc horizontal)		5-66-8354-00 5-66-8355-00 5-66-8356-00	1	1	1	1					3	3
								1	1	1	1	1	1
Not Shown	Vertical Spring Kit (3 disc)		5-63-0525-00								1	1	1
4 4C	Friction disc kit Stabilizing clip (part of 5-66-8462-00)		5-66-8462-00	1 2	1 2	1 2	1 2	2 *	2 *	2 *	2 *	3 *	3 *
DP	Disc pack kit — 1 disc Disc pack kit — 2 disc Disc pack kit — 3 disc		5-66-8601-00 5-66-8602-00 5-66-8603-00	1	1	1	1	1	1	1	1		
16	Hub and set screw assembly 1 & 2 disc		5/8 bore 7/8 bore 1-1/8 bore	5-16-5150-00-01B 5-16-5150-00-01D 5-16-5150-00-01E	1 1 1	1 1 1	1 1 1	1 1 1	1 1 1	1 1 1	1 1 1		
	Hub and set screw assembly 3 disc		5/8 bore 7/8 bore 1-1/8 bore	5-16-5153-00-01B 5-16-5153-00-01D 5-16-5153-00-01E								1 1 1	1 1 1
2	Endplate and stationary disc assembly		1 & 2 disc (NEMA 1) 3 disc (NEMA 1)	5-02-5031-00 5-02-5032-00	1	1	1	1	1	1	1	1	1
A	Conduit plug		9-61-1167-00	2	2	2	2	2	2	2	2	2	2

* Certain multiple friction disc model numbers require a single stabilizer clip (D1) added to each friction disc. If your particular brake model has this clip on the discs, as received, it must be replaced whenever the friction disc is replaced. This clip is included as part of the friction disc kit 5-66-8462-00.

TABLE 2
Components of Support Plate
and Coil Assembly

			Torque (lb-ft)	1.5 & 3	6	10	15	20	25
			Support Plate Assy. (Items 6 through 131 and Z) →	5-42-5601-00-24	5-42-5605-00-24	5-42-5607-00-24	5-42-5609-00-24	5-42-5611-00-24	5-42-5611-00-24
Item	Description		Part Number ↓						
6	Bearing		8-006-501-00	1	1	1	1	1	1
8	Solenoid lever		8-008-504-01	1	1	1	1	1	1
8R	Retaining ring		9-03-0057-00	2	2	2	2	2	2
8W	Spacer		9-45-0168-00	3	3	3	3	3	3
11N	Torque adjustment nut		9-40-3928-00	2	2	2	2	2	2
10	Wear adjustment screw		9-17-8420-00	2	2	2	2	2	2
11	Pressure spring		9-70-1215-00	2					
	Pressure spring		9-70-1523-00		2	2			
	Pressure spring		9-70-1524-00				2	2	2
11W	Spring washer		9-46-0010-00		4	4	4	4	4
17	Lever arm and stop nut assy.		5-17-5011-00	1	1	1	1	1	1
26	Bearing pin		9-29-4826-00	1	1	1	1	1	1
29A	Plunger stop		8-094-503-00	1	1	1	1	1	1
28	Release indicator		8-028-501-00	1	1	1	1	1	1
59	Release spring		9-70-0809-00	1	1	1	1	1	1
126	Support plate and spring stud assembly (2 housing studs)		5-26-5019-00	1	1	1	1	1	1
131	Pivot pin		9-29-4836-00	1	1	1	1	1	1
142S	Mounting screws		9-25-9013-00	3	3	3	3	3	3
AC Brakes									
Z	No. 4 solenoid kit (rev A & B) (rev B only)		5-66-5042-00 5-96-5042-01	1 1	1 1	1 1	1 1	1 1	1 1
AC	No. 4 coil kit 60 Hz	115/230 Vac 230/460 Vac	5-66-6407-33 5-66-6409-33	1 1					
		115 Vac 230 Vac	5-66-6401-33 5-66-6402-33	1 1					
		460 Vac 575 Vac	5-66-6404-33 5-66-6405-33	1 1					
		115/230 Vac 230/460 Vac	5-66-6457-33 5-66-6459-33		1 1	1 1			
		115 Vac 230 Vac	5-66-6451-33 5-66-6452-33		1 1	1 1			
		460 Vac 575 Vac	5-66-6454-33 5-66-6455-33		1 1	1 1			
	No. K4 coil kit 60 Hz	115/230 Vac 230/460 Vac	5-66-6407-23 5-66-6409-23				1 1	1 1	
		115 Vac 230 Vac	5-66-6401-23 5-66-6402-23				1 1	1 1	
		460 Vac 575 Vac	5-66-6404-23 5-66-6405-23				1 1	1 1	
		115/230 Vac 230/460 Vac	5-66-6457-23 5-66-6459-23						1 1
		115 Vac 230 Vac	5-66-6451-23 5-66-6452-23						1 1
		460 Vac 575 Vac	5-66-6454-23 5-66-6455-23						1 1
CC	Brake release interlock switch (optional)		5-57-5526-00	1	1	1	1	1	1
DC Brakes									
AD	No. 4 + coil assembly	115 Vdc 230 Vdc	5-96-6416-43 5-96-6417-43	1 1					
		115 Vdc 230 Vdc	5-96-6416-23 5-96-6417-23		1 1	1 1			
	No. M4 + coil assembly	115 Vdc 230 Vdc	5-96-6466-23 5-96-6467-23				1 1	1 1	
		115 Vdc 230 Vdc	5-96-6446-43 5-96-6447-43						1 1
BD	Electronic DC switch kit	24/28 Vdc	5-57-5712-15	1	1	1	1	1	1
		115 Vdc	5-57-5716-15	1	1	1	1	1	1
		230 Vdc	5-57-5717-15	1	1	1	1	1	1

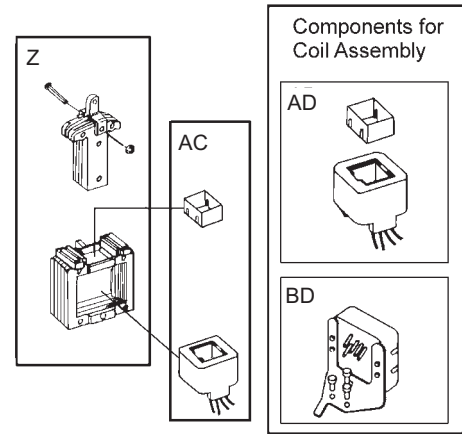


TABLE 3
Contents of Kits and Assemblies

Item	Kit Description
3	Stationary disc kit (5-66-8354-00) 1 – Stationary disc
3A	Stationary disc kit (5-66-8355-00) 2 – Stationary discs with springs
3B	Stationary disc kit (5-66-8356-00) 3 – Stationary discs with springs
4	Friction disc kit (5-66-8462-00) 1 – Friction disc 2 – Stabilizing clips
DP	Disc pack kit (5-66-860X-00) 1, 2 or 3 – Friction disc(s) 1, 2 or 3 – Stationary disc(s) 2 – clips (5-66-8601-00 only) 3, 6 or 9 – Stationary disc separator springs
16	Hub and set screw assembly – all types, all bores (5-16-515X-00) 1 – Brake hub 2 – Set screws
Z	No. 4 solenoid kit (5-66-5042-00) (5-96-5042-01) 1 – Plunger 1 – Solenoid link 1 – Frame (including mounting bracket) 1 – Solenoid link cap screw 1 – Solenoid link nut 3 – Solenoid mounting screws
AC AD	No. 4 AC coil kit (5-66-64XX-X3) and DC coil assembly (5-96-64XX-X3) Coil / Top Plunger guide / Wire nut
BD	DC switch kit (5-57-571X-15) 1 – Electronic switch 1 – Mounting bracket 3 – Bracket mounting screws 4 – Switch mounting screws 4 – Nuts 4 – Lock washers 5 – Crimp connectors
CC	Brake release interlock switch (5-57-5526-00) 1 – Microswitch 1 – Mounting bracket 2 – Bracket mounting screws 2 – Switch mounting screws 2 – Lock washers 2 – Nuts 2 – Lead wire assembly

TABLE 4

Catalog Mod Number	Description	Part Number ↓	Torque (lb-ft)			
			1.5, 3 & 6	10 & 15	20 & 25	Brake Model Number→
M4	Brass Stationary Disc	8-003-513-02	1	2	3	1-056-30X 1-056-31X 1-056-32X
M13	Space Heater 115 Vac 230 Vac	5-27-2004-00 5-27-2005-00	1 1	1 1	1 1	1-056-33X 1-056-34X
M17	Terminal Strip	5-63-0524-00	1	1	1	1-056-35X 1-056-36X
M21	Vertical Spring Kit (2 disc) (3 disc)	5-63-0539-00 5-63-0525-00		1	1	

Catalog Mod Number	Description	Part Number ↓	Torque (lb-ft)				
			1.5 & 3	6 & 10	15 & 20	25	Brake Model Number→
M6	No. 4 Class 'H' coil kit 60 Hz	115/230 Vac	5-96-6407-05	1			1-056-301-00
		230/460 Vac	5-96-6409-05	1			1-056-311-00
		115 Vac	5-96-6401-05	1			1-056-321-00
		230 Vac	5-96-6402-05	1			1-056-331-00
		460 Vac	5-96-6404-05	1			1-056-341-00
		575 Vac	5-96-6405-05	1			1-056-351-00
	No. K4 Class 'H' coil kit 60 Hz	115/230 Vac	5-96-6457-05		1		1-056-361-00
		230/460 Vac	5-96-6459-05		1		
		115 Vac	5-96-6451-05		1		
		230 Vac	5-96-6452-05		1		
		460 Vac	5-96-6454-05		1		
		575 Vac	5-96-6455-05		1		
	No. K4+ Class 'H' coil kit 60 Hz	115/230 Vac	5-96-6407-25			1	
		230/460 Vac	5-96-6409-25			1	
		115 Vac	5-96-6401-25			1	
		230 Vac	5-96-6402-25			1	
		460 Vac	5-96-6404-25			1	
		575 Vac	5-96-6405-25			1	
	No. M4+ Class 'H' coil kit 60 Hz	115/230 Vac	5-96-6457-25				1
		230/460 Vac	5-96-6459-25				1
		115 Vac	5-96-6451-25				1
		230 Vac	5-96-6452-25				1
		460 Vac	5-96-6454-25				1
		575 Vac	5-96-6455-25				1




Rexnord Industries, LLC
 Stearns Division
 5150 S. International Drive
 Cudahy, Wisconsin 53110
 (414) 272-1100 Fax: (414) 277-4364 www.stearns.rexnord.com

Stearns® Spring-Set Disc Brakes

Parts List for 1-056-400 Series (rev. A & B) Manual Adjust Brakes


For Installation and Service Instructions refer to sheet part number 8-078-905-60. Instructions and parts list also available at www.stearns.rexnord.com.

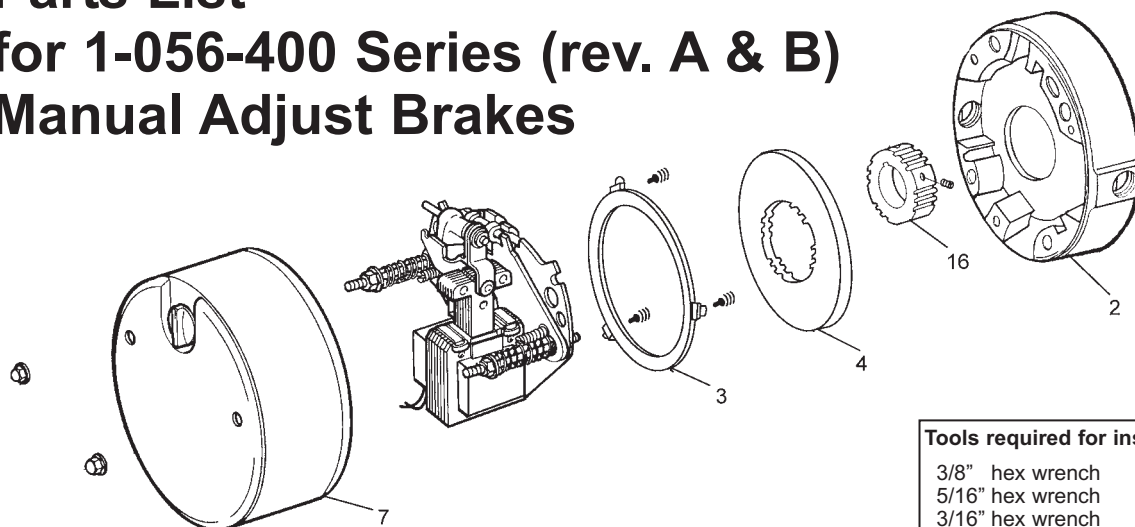

Tools required for installation and servicing:

3/8" hex wrench	5/16" nut driver
5/16" hex wrench	1/4" screwdriver
3/16" hex wrench	8" adjustable wrench

Typical Nameplate

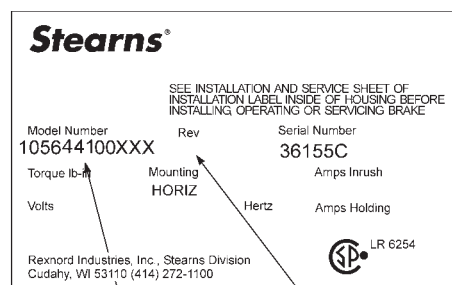

MODEL NUMBER
Refer to actual nameplate on brake for additional information

REVISION CONTROL

IMPORTANT

Please read these instructions carefully before installing, operating, or servicing your Stearns Brake. Failure to comply with these instructions could cause injury to personnel and/or damage to property if the brake is installed or operated incorrectly. For definition of limited warranty/liability, contact Rexnord Industries, LLC Stearns Division, 5150 S. International Dr., Cudahy, WI 53110, (414) 272-1100.

Caution

1. Installation and servicing must be made in compliance with all local safety codes including Occupational Safety and Health Act (OSHA). All wiring and electrical connections must comply with the National Electric Code (NEC) and local electric codes in effect.

2. Do not operate the brake in atmospheres containing explosive gases or dusts.
3. To prevent an electrical hazard, disconnect power source before working on the brake. If power disconnect point is out of sight, lock disconnect in the *off* position and tag to prevent accidental application of power.
4. Make certain power source conforms to the requirements specified on the brake nameplate.
5. Be careful when touching the exterior of an operating brake. Allow sufficient time for brake to cool before disassembly. Surfaces may be hot enough to be painful or cause injury.
6. Do not operate brake with housing removed. All moving parts should be guarded.
7. Installation and servicing should be performed only by qualified personnel familiar with the construction and operation of the brake.
8. For proper performance and operation, only genuine Stearns parts should be used for repairs and replacements.
9. After usage, the brake interior will contain burnt and degraded friction material dust. This dust must be removed before servicing or adjusting the brake.


DO NOT BLOW OFF DUST using an air hose. It is important to avoid dispersing dust into the air or inhaling it, as this may be dangerous to your health.

- a) Wear a filtered mask or a respirator while removing dust from the inside of a brake.
- b) Use a vacuum cleaner or a soft brush to remove dust from the brake. When brushing, avoid causing the dust to become airborne. Collect the dust in a container, such as a bag, which can be sealed off.


Information required when ordering replacement parts:

- Give Part Number of parts or kits needed, Brake Model Number, and Brake Serial Number. The Brake Model and Serial Number may identify special brakes not covered by this parts list.
- When ordering hubs, specify shaft diameter (hub bore) and keyway.
- Enclosure is specified as follows:
NEMA 2 (formerly referred to as standard)
NEMA 4 (formerly referred to as DTWP dust-tight waterproof)

7 (NEMA 2)

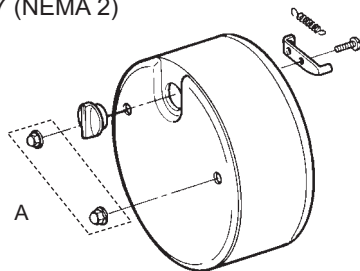

7 (NEMA 4 & 4X)

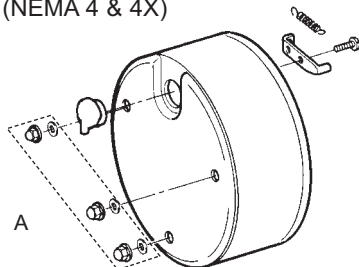
**TABLE 1**

Components of Standard AC or DC Brake


Item	Description		Part Number ↓	1-056-401-00	1-056-402-00	1-056-421-00	1-056-422-00	1-056-431-00	1-056-432-00	1-056-441-00	1-056-442-00	1-056-451-00	1-056-452-00
A	Hardware kit - NEMA 2 Hardware kit - NEMA 4		5-66-1001-00 5-66-1002-00	1	1	1	1	1	1	1	1	1	1
AA	Plug / Gasket kit - NEMA 4 1 & 2 disc ** Close couple - NEMA 4 3 disc		5-63-0532-00 5-63-0534-00		1		1		1		1		1
7	Housing & release knob kit - NEMA 2 Housing & release knob kit - NEMA 4		5-66-8756-00 5-66-8757-00	1		1		1		1		1	1
3	Stationary disc kit (1 disc universal 3 disc horizontal)		5-66-8354-00	1	1	1	1					3	3
3A	Stationary disc kit (2 disc universal)		5-66-8355-00					1	1	1	1		
3B	Stationary disc kit (3 disc vertical)		5-66-8356-00									1	1
Not shown	Vertical Spring Kit (3 disc)		5-63-0525-00								1	1	1
4	Friction disc kit		5-66-8462-00	1	1	1	1	2	2	2	2	3	3
4C	Stabilizing clip (part of 5-66-8462-00)			2	2	2	2	*	*	*	*	*	*
DP	Disc pack kit - 1 disc Disc pack kit - 2 disc Disc pack kit - 3 disc		5-66-8601-00 5-66-8602-00 5-66-8603-00	1	1	1	1		1	1	1	1	1
16	Hub and set screw assembly 1 & 2 disc (NEMA 2)	5/8 bore 7/8 bore 1-1/8 bore	5-16-5150-00-01B 5-16-5150-00-01D 5-16-5150-00-01E	1 1 1		1 1 1		1 1 1		1 1 1			
	Hub and set screw assembly 1 disc (NEMA 4)	5/8 bore 7/8 bore 1-1/8 bore	5-16-5151-00-01B 5-16-5151-00-01D 5-16-5151-00-01E		1 1 1		1 1 1						
	Hub and set screw assembly 3 disc (NEMA 2) and 2 & 3 disc (NEMA 4)	5/8 bore 7/8 bore 1-1/8 bore	5-16-5153-00-01B 5-16-5153-00-01D 5-16-5153-00-01E					1 1 1		1 1 1	1 1 1	1 1 1	1 1 1
2	Endplate	1 disc (NEMA 2)	8-002-580-05-30F	1		1							
	Endplate	2 & 3 disc (NEMA 2)	8-002-582-05-30F					1		1		1	
	Endplate & seal assy.	1 disc (NEMA 4)	5-02-5055-00		1		1						
	Endplate & seal assy.	2 & 3 disc (NEMA 4)	5-02-5056-00					1		1			

* Certain multiple friction disc model numbers require a single stabilizer clip (D1) added to each friction disc. If your particular brake model has this clip on the discs, as received, it must be replaced whenever the friction disc is replaced. This clip is included as part of the friction disc kit 5-66-8462-00.

** Close coupled brakes identified by 8 in the 8th digit position.
Example: 1-056-XXX-8X.

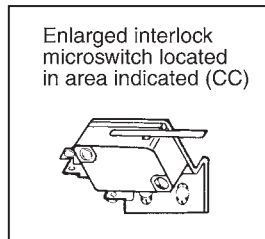

Solenoid and Coil Assembly

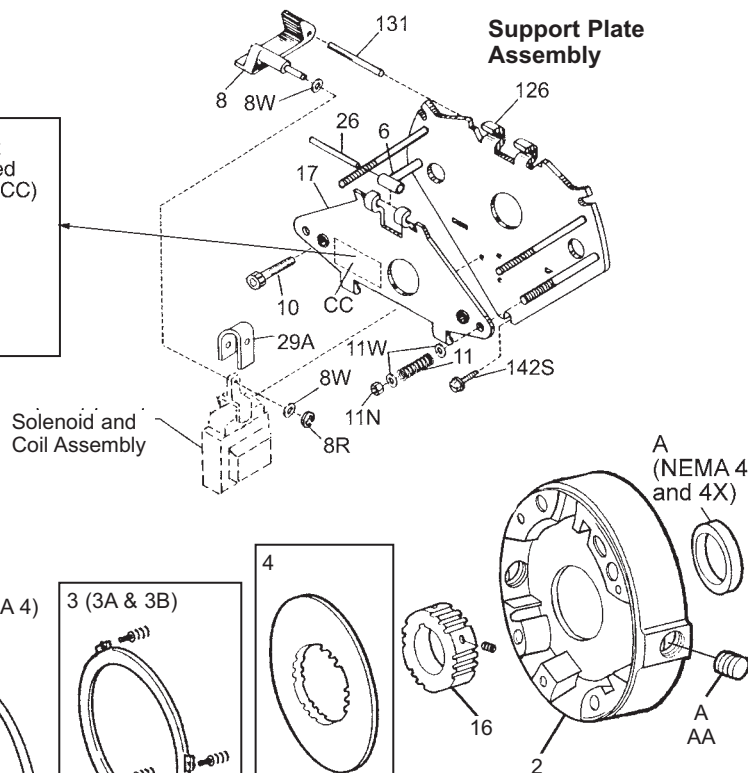

Support Plate (details above)

TABLE 2
Components of Support Plate
and Coil Assembly

TABLE 2 Components of Support Plate and Coil Assembly				Torque (lb-ft)		1.5 & 3		6		10		15		20		25			
				NEMA Enclosure		2	4	2	4	2	4	2	4	2	4	2	4	2	4
				Support Plate Assy. (Items 6 through 131 and Z) →		5-42-5601-00-04	5-42-5601-00-14	5-42-5605-00-04	5-42-5605-00-14	5-42-5607-00-04	5-42-5607-00-14	5-42-5609-00-04	5-42-5609-00-14	5-42-5611-00-04	5-42-5611-00-14	5-42-5611-00-04	5-42-5611-00-14		
Item	Description		Part Number ↓	5-42-5601-00-04	5-42-5601-00-14	5-42-5605-00-04	5-42-5605-00-14	5-42-5607-00-04	5-42-5607-00-14	5-42-5609-00-04	5-42-5609-00-14	5-42-5611-00-04	5-42-5611-00-14	5-42-5611-00-04	5-42-5611-00-14				
6	Bearing		8-006-501-00	1	1	1	1	1	1	1	1	1	1	1	1				
8	Solenoid lever		8-008-504-05	1	1	1	1	1	1	1	1	1	1	1	1				
8R	Retaining ring		9-03-0057-00	1	1	1	1	1	1	1	1	1	1	1	1				
8W	Spacer		9-45-0168-00	2	2	2	2	2	2	2	2	2	2	2	2				
11N	Torque adjustment nut		9-40-3928-00	2	2	2	2	2	2	2	2	2	2	2	2				
110	Wear adjustment screw		9-17-8420-00	2	2	2	2	2	2	2	2	2	2	2	2				
11	Pressure spring		9-70-1215-00	2	2														
	Pressure spring		9-70-1523-00			2	2	2	2										
	Pressure spring		9-70-1524-00							2	2	2	2	2	2				
11W	Spring washer		9-46-0010-00			4	4	4	4	4	4	4	4	4	4				
17	Lever arm and stop nut assy.		5-17-5011-00	1	1	1	1	1	1	1	1	1	1	1	1				
26	Bearing pin		9-29-4826-00	1	1	1	1	1	1	1	1	1	1	1	1				
29A	Plunger stop		8-094-503-00	1	1	1	1	1	1	1	1	1	1	1	1				
126	Support plate and spring stud assembly (2 housing studs)		5-26-5019-00	1		1		1		1		1		1					
	Support plate and spring stud assembly (3 housing studs)		5-26-5020-00		1		1		1		1		1		1				
131	Pivot pin		9-29-4836-00	1	1	1	1	1	1	1	1	1	1	1	1				
142S	Mounting screws		9-25-9013-00	3	3	3	3	3	3	3	3	3	3	3	3				
AC Brakes																			
Z	No. 4 solenoid kit (rev A & B) (rev B only)		5-66-5042-00	1		1		1		1		1		1					
			5-96-5042-01	1		1		1		1		1		1					
AC	No. 4 coil kit 60 Hz	115/230 Vac	5-66-6407-33	1															
		230/460 Vac	5-66-6409-33	1															
		115 Vac	5-66-6401-33	1															
		230 Vac	5-66-6402-33	1															
		460 Vac	5-66-6404-33	1															
		575 Vac	5-66-6405-33	1															
	No. K4 coil kit 60 Hz	115/230 Vac	5-66-6457-33			1		1											
		230/460 Vac	5-66-6459-33			1		1											
		115 Vac	5-66-6451-33			1		1											
		230 Vac	5-66-6452-33			1		1											
		460 Vac	5-66-6454-33			1		1											
		575 Vac	5-66-6455-33			1		1											
	No. K4+ coil kit 60 Hz	115/230 Vac	5-66-6407-23							1		1							
		230/460 Vac	5-66-6409-23							1		1							
		115 Vac	5-66-6401-23							1		1							
		230 Vac	5-66-6402-23							1		1							
		460 Vac	5-66-6404-23							1		1							
		575 Vac	5-66-6405-23							1		1							
	No. M4+ coil kit 60 Hz	115/230 Vac	5-66-6457-23											1					
		230/460 Vac	5-66-6459-23											1					
		115 Vac	5-66-6451-23											1					
		230 Vac	5-66-6452-23											1					
		460 Vac	5-66-6454-23											1					
		575 Vac	5-66-6455-23											1					
CC	Brake release interlock switch (optional)		5-57-5526-00	1		1		1		1		1		1					
DC Brakes																			
AD	No. 4 + coil assembly	115 Vdc	5-96-6416-43	1															
		230 Vdc	5-96-6417-43	1															
	No. K4 + coil assembly	115 Vdc	5-96-6416-23			1		1											
		230 Vdc	5-96-6417-23			1		1											
BD	No. M4 + coil assembly	115 Vdc	5-96-6466-23							1		1							
		230 Vdc	5-96-6467-23							1		1							
	No. P4 + coil assembly	115 Vdc	5-96-6446-43											1					
		230 Vdc	5-96-6447-43											1					
BD	Electronic DC switch kit	24/28 Vdc	5-57-5712-15	1		1		1		1		1		1					
		115 Vdc	5-57-5716-15	1		1		1		1		1		1					
		230 Vdc	5-57-5717-15	1		1		1		1		1		1					

Solenoid and Coil Assembly

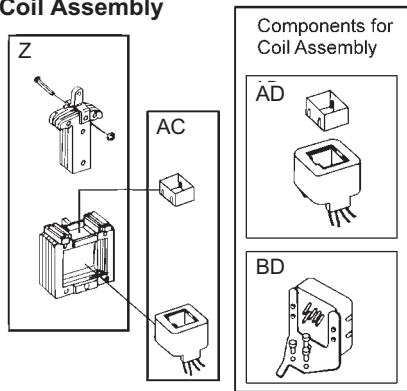


TABLE 3
Contents of Kits and Assemblies

Item	Kit Description
A	Hardware kit – NEMA 2 (5-66-1001-00) 2 – Housing acorn nuts 2 – Conduit plugs
	Hardware kit – NEMA 4 (5-66-1002-00) 3 – Housing nuts 3 – Housing nut gaskets 1 – Endplate oil seal 2 – Endplate hole plugs 1 – Housing to endplate “U” gasket 2 – Endplate conduit pipe plugs
7	Housing & release knob kit (5-66-875X-00) 1 – Housing and release knob assembly 2 or 3 – Housing nuts 3 – Housing nut gasket (NEMA 4)
3	Stationary disc kit (5-66-8354-00) 1 – Stationary disc
3A	Stationary disc kit (5-66-8355-00) 2 – Stationary discs with springs
3B	Stationary disc kit (5-66-8356-00) 3 – Stationary discs with springs
4	Friction disc kit (5-66-8462-00) 1 – Friction disc 2 – Stabilizing clips
DP	Disc pack kit (5-66-860X-00) 1, 2 or 3 – Friction disc(s) 1, 2 or 3 – Stationary disc(s) 2 – Stabilizing clips (5-66-8601-00 only) 3, 6 or 9 – Stationary disc separator springs
16	Hub and set screw assembly – all types, all bores (5-16-515X-00) 1 – Brake hub 2 – Set screws
Z	No. 4 solenoid kit (5-66-5042-00) (5-96-5042-01) 1 – Plunger 1 – Solenoid link 1 – Frame (including mounting bracket) 1 – Solenoid link cap screw 1 – Solenoid link nut 3 – Solenoid mounting screws
AC AD	No. 4 AC coil kit (5-66-64XX-X3) and DC coil assembly (5-96-64XX-X3) Coil / Top Plunger guide / Wire nut
BD	DC switch kit (5-57-571X-15) 1 – Electronic switch 1 – Mounting bracket 3 – Bracket mounting screws 4 – Switch mounting screws 4 – Nuts 4 – Lock washers 5 – Crimp connectors
CC	Brake release interlock switch (5-57-5526-00) 1 – Microswitch 1 – Mounting bracket 2 – Bracket mounting screws 2 – Switch mounting screws 2 – Lock washers 2 – Nuts 2 – Lead wire assembly

Optional Modification Kits

[BACK TO PRODUCT PAGE](#)

TABLE 4

Catalog Mod Number	Description	Part Number ↓	Torque (lb-ft)	1.5, 3 & 6	10 & 15	20 & 25
M4	Brass Stationary Disc	8-003-513-02	1	2	3	
M13	Space Heater 115 Vac 230 Vac	5-27-2004-00 5-27-2005-00	1	1	1	
M17	Terminal Strip	5-63-0524-00	1	1	1	
M21	Vertical Spring Kit (2 disc) (3 disc)	5-63-0539-00 5-63-0525-00		1	1	

Catalog Mod Number	Description	Part Number ↓	Torque (lb-ft)	1.5 & 3	6 & 10	15 & 20	25
M6	No. 4 Class 'H' coil kit 115 Vac 230 Vac 460 Vac 575 Vac 60 Hz	5-96-6407-05	1				
		5-96-6409-05	1				
		5-96-6401-05	1				
		5-96-6402-05	1				
		5-96-6404-05	1				
		5-96-6405-05	1				
	No. K4 Class 'H' coil kit 115 Vac 230 Vac 460 Vac 575 Vac 60 Hz	5-96-6457-05		1			
		5-96-6459-05		1			
		5-96-6451-05		1			
		5-96-6452-05		1			
		5-96-6454-05		1			
		5-96-6455-05		1			
	No. K4+ Class 'H' coil kit 115 Vac 230 Vac 460 Vac 575 Vac 60 Hz	5-96-6407-25			1		
		5-96-6409-25			1		
		5-96-6401-25			1		
		5-96-6402-25			1		
		5-96-6404-25			1		
		5-96-6405-25			1		
	No. M4+ Class 'H' coil kit 115 Vac 230 Vac 460 Vac 575 Vac 60 Hz	5-96-6457-25				1	
		5-96-6459-25				1	
		5-96-6451-25				1	
		5-96-6452-25				1	
		5-96-6454-25				1	
		5-96-6455-25				1	




Rexnord Industries, LLC
Stearns Division
5150 S. International Drive
Cudahy, Wisconsin 53110
(414) 272-1100 Fax: (414) 277-4364
www.stearns.rexnord.com

Stearns® Spring-Set Disc Brakes


Parts List for 1-056-500 Series (rev. A & B) Manual Adjust Brakes

For Installation and Service Instructions refer to sheet part number 8-078-905-60. Instructions and parts list also available at www.stearns.rexnord.com.

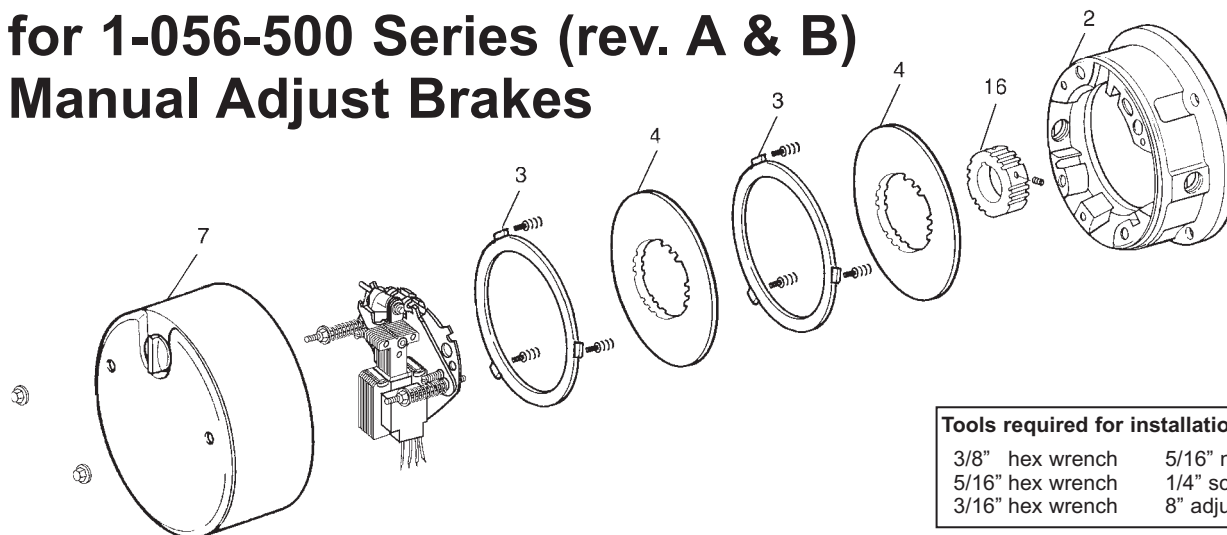**Tools required for installation and servicing:**

3/8" hex wrench	5/16" nut driver
5/16" hex wrench	1/4" screwdriver
3/16" hex wrench	8" adjustable wrench

Typical Nameplate

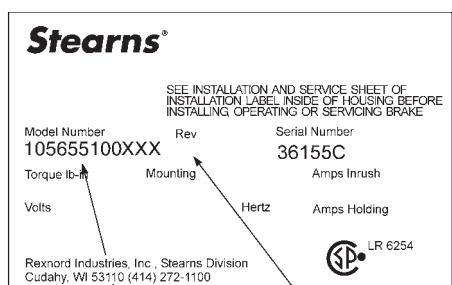**MODEL NUMBER**

Refer to actual nameplate on brake for additional information

REVISION CONTROL

IMPORTANT

Please read these instructions carefully before installing, operating, or servicing your Stearns Brake. Failure to comply with these instructions could cause injury to personnel and/or damage to property if the brake is installed or operated incorrectly. For definition of limited warranty/liability, contact Rexnord Industries, Inc., Stearns Division, 5150 S. International Dr., Cudahy, WI 53110, (414) 272-1100.

Caution

1. Installation and servicing must be made in compliance with all local safety codes including Occupational Safety and Health Act (OSHA). All wiring and electrical connections must comply with the National Electric Code (NEC) and local electric codes in effect.

2. Do not operate the brake in atmospheres containing explosive gases or dusts.
3. To prevent an electrical hazard, disconnect power source before working on the brake. If power disconnect point is out of sight, lock disconnect in the *off* position and tag to prevent accidental application of power.
4. Make certain power source conforms to the requirements specified on the brake nameplate.
5. Be careful when touching the exterior of an operating brake. Allow sufficient time for brake to cool before disassembly. Surfaces may be hot enough to be painful or cause injury.
6. Do not operate brake with housing removed. All moving parts should be guarded.
7. Installation and servicing should be performed only by qualified personnel familiar with the construction and operation of the brake.
8. For proper performance and operation, only genuine Stearns parts should be used for repairs and replacements.
9. After usage, the brake interior will contain burnt and degraded friction material dust. This dust must be removed before servicing or adjusting the brake.

DO NOT BLOW OFF DUST using an air hose. It is important to avoid dispersing dust into the air or inhaling it, as this may be dangerous to your health.

- a) Wear a filtered mask or a respirator while removing dust from the inside of a brake.
- b) Use a vacuum cleaner or a soft brush to remove dust from the brake. When brushing, avoid causing the dust to become airborne. Collect the dust in a container, such as a bag, which can be sealed off.

Information required when ordering replacement parts:


- Give Part Number of parts or kits needed, Brake Model Number, and Brake Serial Number. The Brake Model and Serial Number may identify special brakes not covered by this parts list
- When ordering hubs, specify shaft diameter (hub bore) and keyway.

- Enclosure is specified as follows:

NEMA 2 (formerly referred to as standard)

NEMA 4 (formerly referred to as DTWP dust-tight waterproof)

NEMA 4X (formerly referred to as BISSC washdown)

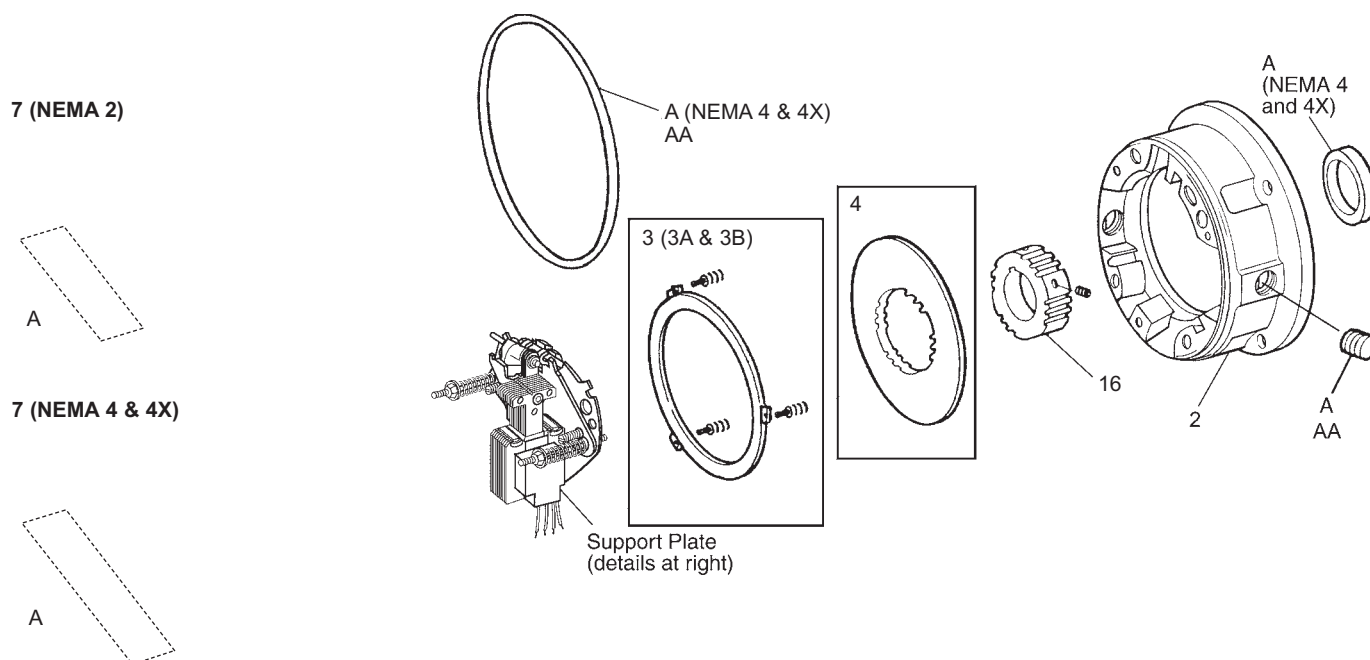**TABLE 1**

Components of Standard AC or DC Brake

Item	Description		Part Number ↓	Torque (lb-ft)			10			15			20 and 25		
				NEMA Enclosure			2			4			4X		
				Brake Model Number →			2			4			4X		
A	Hardware kit - NEMA 2 Hardware kit - NEMA 4 Hardware kit - NEMA 4X		5-66-1001-00 5-66-1002-00 5-66-1003-00	1			1			1			1		
AA	Plug/Gasket kit ** Close couple		-NEMA 4 -NEMA 4X -NEMA 4 3 disc -NEMA 4X 3 disc	5-63-0532-00 5-63-0533-00 5-63-0534-00 5-63-0535-00		1			1			1			
7	Housing and release knob kit - NEMA 2 Housing and release knob kit - NEMA 4 Housing and release knob kit - NEMA 4X		5-66-8756-00 5-66-8757-00 5-66-8758-00	1			1			1			1		
3 3A 3B	Stationary disc kit (3 disc horizontal) Stationary disc kit (2 disc universal) Stationary disc kit (3 disc vertical)		5-66-8354-00 5-66-8355-00 5-66-8356-00	1	1	1	1	1	1	1	1	1	3	3	3
Not Shown	Vertical spring kit		5-63-0525-00										1	1	1
4	Friction disc kit		5-66-8462-00	2	2	2	2	2	2	2	2	2	3	3	3
DP	Disc pack kit - 2 disc Disc pack kit - 3 disc		5-66-8602-00 5-66-8603-00	1	1	1	1	1	1	1	1	1	1	1	1
16	Hub and set screw assembly 2 disc (NEMA 2)	5/8 bore	5-16-5150-00-01-B	1			1								
		7/8 bore	5-16-5150-00-01-D	1			1								
		1-1/8 bore	5-16-5150-00-01-E	1			1								
2	Hub and set screw assembly 3 disc (NEMA 2) 2 and 3 disc (NEMA 4 & 4X)	5/8 bore	5-16-5153-00-01-B		1	1		1	1	1	1	1	1	1	1
		7/8 bore	5-16-5153-00-01-D		1	1		1	1	1	1	1	1	1	1
		1-1/8 bore	5-16-5153-00-01-E		1	1		1	1	1	1	1	1	1	1
2	Endplate Endplate and seal assembly Endplate and seal assembly	NEMA 2	8-002-583-01-30F	1			1			1			1		
		NEMA 4	5-02-5041-00		1				1				1		
		NEMA 4X	5-02-5042-00			1				1				1	

* Certain multiple friction disc model numbers require a single stabilizer clip (D1) added to each friction disc. If your brake has these clips, they must be replaced when the friction disc is replaced. This clip is included as part of the friction disc kit 5-66-8462-00.

** Close coupled brakes identified by 8 in the 8th digit. example: 1-056-XXX-8X.

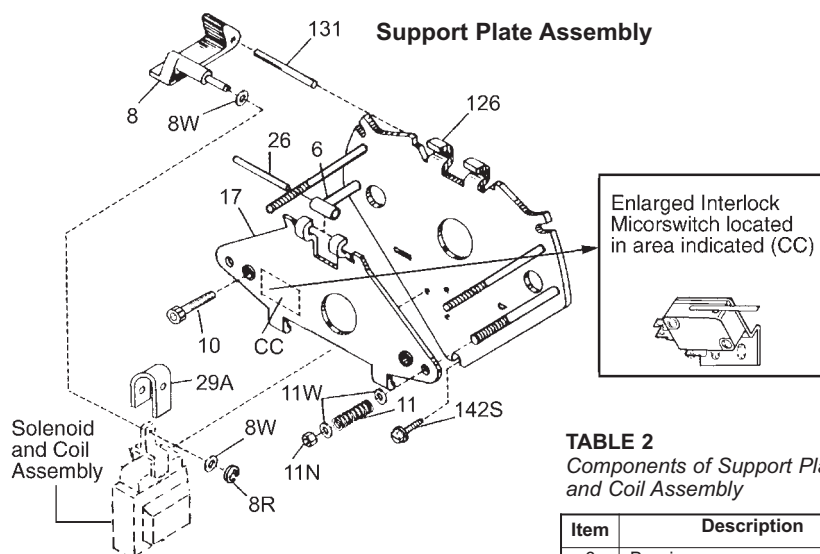


TABLE 2
Components of Support Plate
and Coil Assembly

Item	Description		Part Number↓	5-42	5-42	5-42	5-42	5-42	5-42	5-42
6	Bearing		8-006-501-00	1	1	1	1	1	1	1
8	Solenoid lever		8-008-504-05	1	1	1	1	1	1	1
8R	Retaining ring		9-03-0057-00	1	1	1	1	1	1	1
8W	Spacer		9-45-0168-00	2	2	2	2	2	2	2
11N	Torque adjustment nut		9-40-3928-00	2	2	2	2	2	2	2
10	Wear adjustment screw		9-17-8420-00	2	2	2	2	2	2	2
11	Pressure spring		9-70-1215-00							
	Pressure spring		9-70-1523-00	2	2					
	Pressure spring		9-70-1524-00			2	2	2	2	
11W	Spring washer		9-46-0010-00	4	4	4	4	4	4	2
17	Lever arm and stop nut assy.		5-17-5011-00	1	1	1	1	1	1	1
26	Bearing pin		9-29-4826-00	1	1	1	1	1	1	1
29A	Plunger stop		8-094-503-00	1	1	1	1	1	1	1
	Support plate and spring stud assembly (2 housing studs)		5-26-5019-00	1		1		1		1
126	Support plate and spring stud assembly (3 housing studs)		5-26-5020-00		1		1		1	1
131	Pivot pin		9-29-4836-00	1	1	1	1	1	1	1
142S	Mounting screws		9-25-9013-00	3	3	3	3	3	3	3
AC Brakes										
Z	No. 4 solenoid kit (rev A & B) (rev B only)		5-66-5042-00	1		1		1		1
			5-96-5042-01	1		1		1		1
AC	No. 4 coil kit 60 Hz	115/230 Vac	5-66-6407-33							
		230/460 Vac	5-66-6409-33							
		115 Vac	5-66-6401-33							
		230 Vac	5-66-6402-33							
		460 Vac	5-66-6404-33							
		575 Vac	5-66-6405-33							
	No. K4 coil kit 60 Hz	115/230 Vac	5-66-6457-33	1						
		230/460 Vac	5-66-6459-33	1						
		115 Vac	5-66-6451-33	1						
		230 Vac	5-66-6452-33	1						
		460 Vac	5-66-6454-33	1						
		575 Vac	5-66-6455-33	1						
	No. K4+ coil kit 60 Hz	115/230 Vac	5-66-6407-23			1		1		
		230/460 Vac	5-66-6409-23			1		1		
		115 Vac	5-66-6401-23			1		1		
		230 Vac	5-66-6402-23			1		1		
		460 Vac	5-66-6404-23			1		1		
		575 Vac	5-66-6405-23			1		1		
	No. M4+ coil kit 60 Hz	115/230 Vac	5-66-6457-23							1
		230/460 Vac	5-66-6459-23							1
		115 Vac	5-66-6451-23							1
		230 Vac	5-66-6452-23							1
		460 Vac	5-66-6454-23							1
		575 Vac	5-66-6455-23							1
CC	Brake release interlock switch (optional)		5-57-5526-00	1		1		1		1
DC Brakes										
AD	No. 4 + coil assembly	115 Vdc 230 Vdc	5-96-6416-43 5-96-6417-43							
	No. K4 + coil assembly	115 Vdc 230 Vdc	5-96-6416-23 5-96-6417-23	1 1						
	No. M4 + coil assembly	115 Vdc 230 Vdc	5-96-6466-23 5-96-6467-23			1 1		1 1		
	No. P4 + coil assembly	115 Vdc 230 Vdc	5-96-6446-43 5-96-6447-43							1 1
BD	Electronic DC switch kit	24/28 Vdc	5-57-5712-15	1		1		1		1
		115 Vdc	5-57-5716-15	1		1		1		1
		230 Vdc	5-57-5717-15	1		1		1		1

Item	Kit Description
A	Hardware kit - NEMA 2 (5-66-1001-00) 2 - Housing acorn nuts 2 - Conduit plugs
	Hardware kit - NEMA 4 (5-66-1002-00) Hardware kit - NEMA 4X (5-66-1003-00) 3 - Housing nuts 3 - Housing nut gaskets 1 - Endplate oil seal 2 - Endplate hole plugs 1 - Housing to endplate "U" gasket 2 - Endplate conduit pipe plugs
7	Housing and release knob kit (5-66-875X-00) 1 - Housing and release knob assembly 2 or 3 - Housing nuts 3 - Housing nut gasket (NEMA 4 and 4X)
3	Stationary disc kit (5-66-8354-00) 1 - Stationary discs
3A	Stationary disc kit (5-66-8355-00) 2 - Stationary discs with springs
4	Friction disc kit (5-66-8462-00) 1 - Friction disc
DP	Disc pack kit (5-66-860X-00) 2 or 3 - Friction discs 2 or 3 - Stationary discs 6 or 9 - Stationary disc separator springs
16	Hub and set screw assembly - all types, all bores (5-16-515X-00) 1 - Brake hub 2 - Set screws
Z	No. 4 solenoid kit (5-66-5042-00) (5-96-5042-01) 1 - Plunger 1 - Solenoid link 1 - Frame (including mounting bracket) 1 - Solenoid link cap screw 1 - Solenoid link nut 3 - Solenoid mounting screws
AC AD	No. 4 AC coil kit (5-66-64XX-X3) and DC coil assembly (5-96-64XX-X3) Coil / Top plunger guide / Wire nut
BD	DC switch kit (5-57-571X-15) 1 - Electronic switch 1 - Mounting bracket 3 - Bracket mounting screws 4 - Switch mounting screws 4 - Nuts 4 - Lock washers 5 - Crimp connectors
CC	Brake release interlock switch (5-57-5526-00) 1 - Microswitch 1 - Mounting bracket 2 - Bracket mounting screws 2 - Switch mounting screws 2 - Lock washers 2 - Nuts 2 - Lead wire assembly

[BACK TO PRODUCT PAGE](#)


Catalog Mod Number	Description	Part Number ↓		
M4	Brass Stationary Disc	8-003-513-02	2	3
M13	Space Heater 115 Vac 230 Vac	5-27-2004-00 5-27-2005-00	1 1	1 1
M17	Terminal Strip	5-63-0524-00	1	1
M21	Vertical Spring Kit (2 disc) (3 disc)	5-63-0539-00 5-63-0525-00	1	1

			Torque (lb-ft)	10	15 & 20	25
			Brake Model Number →	1-056-531-00	1-056-541-00 1-056-551-00	1-056-561-00
Catalog Mod Number	Description		Part Number ↓			
M6	No. K4 Class 'H' coil kit 60 Hz	115/230 Vac	5-96-6457-05	1		
		230/460 Vac	5-96-6459-05	1		
		115 Vac	5-96-6451-05	1		
		230 Vac	5-96-6452-05	1		
		460 Vac	5-96-6454-05	1		
		575 Vac	5-96-6455-05	1		
	No. K4+ Class 'H' coil kit 60 Hz	115/230 Vac	5-96-6407-25		1	
		230/460 Vac	5-96-6409-25		1	
		115 Vac	5-96-6401-25		1	
		230 Vac	5-96-6402-25		1	
		460 Vac	5-96-6404-25		1	
	No. M4+ Class 'H' coil kit 60 Hz	575 Vac	5-96-6405-25		1	
		115/230 Vac	5-96-6457-25			1
		230/460 Vac	5-96-6459-25			1
		115 Vac	5-96-6451-25			1
230 Vac		5-96-6452-25			1	
	460 Vac	5-96-6454-25			1	
	575 Vac	5-96-6455-25			1	


Stearns® Spring-Set Disc Brakes

Parts List for 1-056-600 Series (rev. A & B) Manual Adjust Brakes

For Installation and Service
Instructions refer to sheet part
number 8-078-905-60. Instructions
and parts list also available at
www.stearns.rexnord.com.

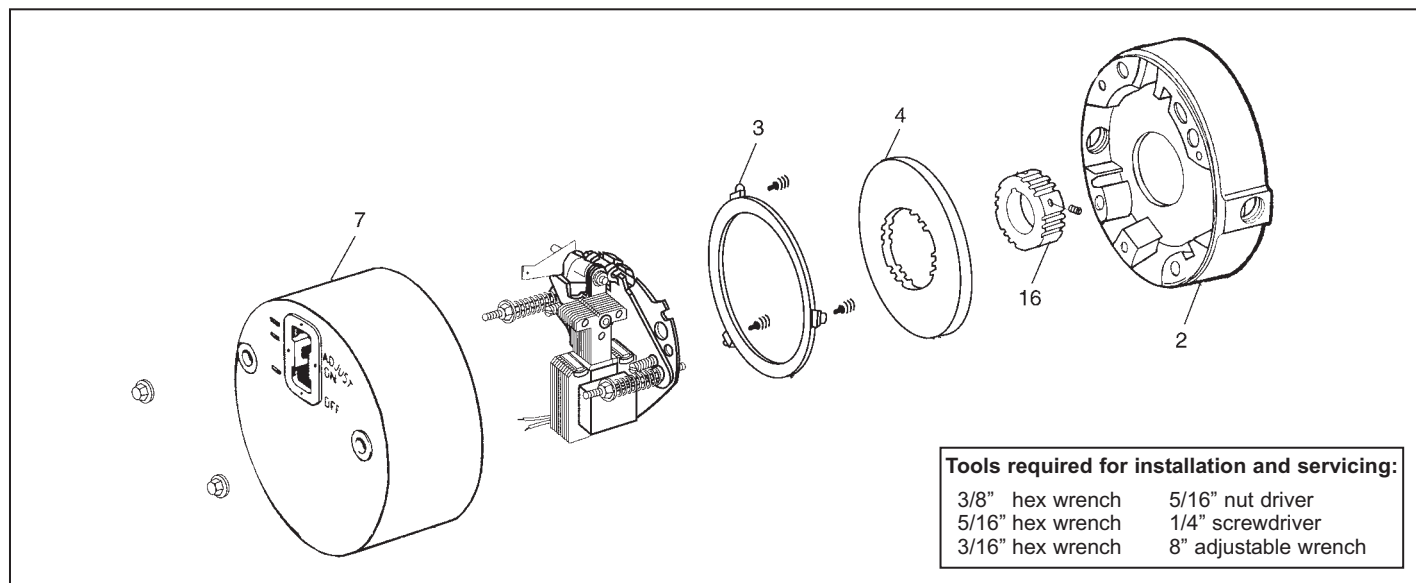

Typical Nameplate

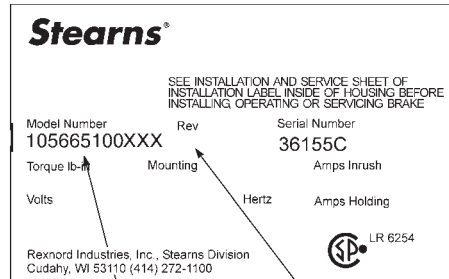

MODEL NUMBER
Refer to actual nameplate on
brake for additional information

REVISION CONTROL

IMPORTANT

Please read these instructions carefully before installing, operating, or servicing your Stearns Brake. Failure to comply with these instructions could cause injury to personnel and/or damage to property if the brake is installed or operated incorrectly. For definition of limited warranty/liability, contact Rexnord Industries, LLC., Stearns Division, 5150 S. International Dr., Cudahy, WI 53110, (414) 272-1100.

Caution

1. Installation and servicing must be made in compliance with all local safety codes including Occupational Safety and Health Act (OSHA). All wiring and electrical connections must comply with the National Electric Code (NEC) and local electric codes in effect.

2. Do not operate the brake in atmospheres containing explosive gases or dusts.
3. To prevent an electrical hazard, disconnect power source before working on the brake. If power disconnect point is out of sight, lock disconnect in the *off* position and tag to prevent accidental application of power.
4. Make certain power source conforms to the requirements specified on the brake nameplate.
5. Be careful when touching the exterior of an operating brake. Allow sufficient time for brake to cool before disassembly. Surfaces may be hot enough to be painful or cause injury.
6. Do not operate brake with housing removed. All moving parts should be guarded.
7. Installation and servicing should be performed only by qualified personnel familiar with the construction and operation of the brake.
8. For proper performance and operation, only genuine Stearns parts should be used for repairs and replacements.

9. After usage, the brake interior will contain burnt and degraded friction material dust. This dust must be removed before servicing or adjusting the brake.



DO NOT BLOW OFF DUST using an air hose. It is important to avoid dispersing dust into the air or inhaling it, as this may be dangerous to your health.

- a) Wear a filtered mask or a respirator while removing dust from the inside of a brake.
- b) Use a vacuum cleaner or a soft brush to remove dust from the brake. When brushing, avoid causing the dust to become airborne. Collect the dust in a container, such as a bag, which can be sealed off.

Information required when ordering replacement parts:

- Give part number of parts or kits needed, Brake Model Number, and Brake Serial Number. The Brake Model and Serial Number may identify special brakes not covered by this parts list.
- When ordering hubs, specify shaft diameter (hub bore) and keyway.
- Enclosure is specified as follows:
NEMA 2 (formerly referred to as standard)
NEMA 4 (formerly referred to as DTWP dust-tight waterproof)



Support Plate Assembly

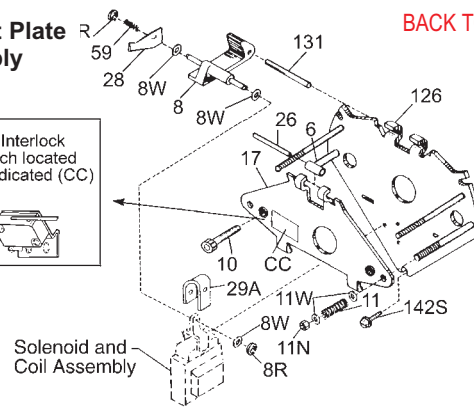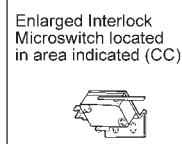

[BACK TO PRODUCT PAGE](#)

7 (NEMA 2)

A (NEMA 2)

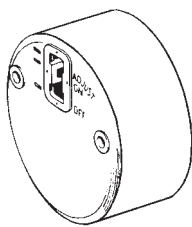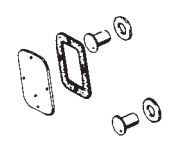

7 (NEMA 4 and 4X)

7 (NEMA 4 and 4X)

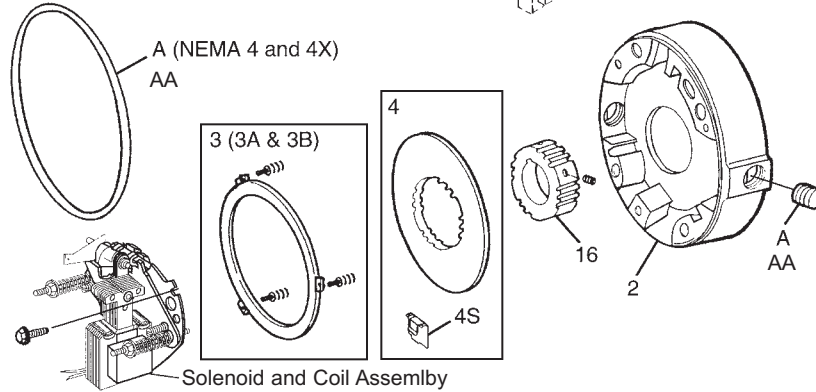
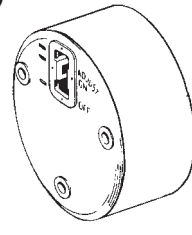
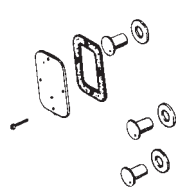


TABLE 1
Components of Standard AC or DC Brake

Item	Description	Part Number ↓	Torque (lb-ft)			1.5 and 3			6			10			15			20 and 25		
			NEMA Enclosure			2	4	4X	2	4	4X	2	4	4X	2	4	4X	2	4	4X
A	Hardware kit - NEMA 2	5-66-1011-00	1						1			1			1			1		
	Hardware kit - NEMA 4	5-66-1012-00		1					1			1			1			1		
	Hardware kit - NEMA 4X	5-66-1013-00			1				1			1			1			1		
AA	Plug/Gasket kit - NEMA 4	5-63-0532-00		1					1			1			1			1		
	** Close couple - NEMA 4X	5-63-0533-00			1				1			1			1			1		
	- NEMA 4 3 disc	5-63-0534-00																1		
	- NEMA 4X 3 disc	5-63-0535-00																	1	
7	Housing - NEMA 2	8-007-509-20	1						1			1			1			1		
	Housing - NEMA 4	8-007-509-21		1					1			1			1			1		
	Housing - NEMA 4X	8-007-509-23			1				1			1			1			1		
3	Stationary disc kit (1 disc universal 3 disc horizontal)	5-66-8354-00	1	1	1	1	1	1	1	1	1							3	3	3
3A	Stationary disc kit (2 disc universal)	5-66-8355-00										1	1	1	1	1	1			
3B	Stationary disc kit (3 disc horizontal)	5-66-8356-00																1	1	1
Not Shown	Vertical Spring Kit (3 disc)	5-63-0525-00																1	1	1
4	Friction disc kit	5-66-8462-00	1	1	1	1	1	1	1	1	1	2	2	2	2	2	2	3	3	3
4C	Stabilizing clip (part of 5-66-8462-00)		2	2	2	2	2	2	2	2	2	*	*	*	*	*	*	*	*	*
DP	Disc pack kit - 1 disc	5-66-8601-00	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1
	Disc pack kit - 2 disc	5-66-8602-00										1	1	1	1	1	1			
	Disc pack kit - 3 disc	5-66-8603-00																1	1	1
16	Hub and set screw assembly 1 & 2 disc (NEMA 2)	5-16-5150-00-01B	1						1			1			1					
		5-16-5150-00-01D	1						1			1			1					
		5-16-5150-00-01E	1						1			1			1					
	Hub and set screw assembly 1 disc (NEMA 4 and 4X)	5-16-5151-00-01B		1	1				1	1										
		5-16-5151-00-01D		1	1				1	1										
		5-16-5151-00-01E		1	1				1	1										
2	Hub and set screw assembly 3 disc (NEMA 2) and 2 and 3 disc (NEMA 4 and 4X)	5-16-5153-00-01B										1	1		1	1	1	1	1	1
		5-16-5153-00-01D										1	1		1	1	1	1	1	1
		5-16-5153-00-01E										1	1		1	1	1	1	1	1
	Endplate	8-002-580-01-30F	1						1			1			1					
	Endplate	8-002-582-01-30F																1		
	Endplate & seal assembly	5-02-5043-00		1					1			1			1					
2	Endplate & seal assembly	5-02-5044-00																1		
	Endplate & seal assembly	5-02-5045-00																		
	Endplate & seal assembly	5-02-5046-00																		
	Endplate & seal assembly	5-02-5046-00																		

* Certain multiple friction disc model numbers require a single stabilizer clip (D1) added to each friction disc. If your particular brake model has this clip on the discs, as received, it must be replaced whenever the friction disc is replaced. This clip is included as part of the friction disc kit 5-66-8462-00.

** Close coupled brakes identified by 8 in the 8th digit.
Example: 1-056-XXX-8X.

TABLE 2
Components of Support Plate
and Coil Assembly

			Torque (lb-ft)	1.5 & 3		6		10		15		20		25		
			NEMA Enclosure	2	4 4X	2	4 4X	2	4 4X	2	4 4X	2	4 4X	2	4 4X	
			Support Plate Assy. (Items 6 through 131 and Z) →	5-42-5601-00-21	5-42-5601-00-22	5-42-5605-00-21	5-42-5605-00-22	5-42-5607-00-21	5-42-5607-00-22	5-42-5609-00-21	5-42-5609-00-22	5-42-5611-00-21	5-42-5611-00-22	5-42-5611-00-21	5-42-5611-00-22	
TABLE 2 Components of Support Plate and Coil Assembly																
Item	Description		Part Number↓	5-42-5601-00-21	5-42-5601-00-22	5-42-5605-00-21	5-42-5605-00-22	5-42-5607-00-21	5-42-5607-00-22	5-42-5609-00-21	5-42-5609-00-22	5-42-5611-00-21	5-42-5611-00-22	5-42-5611-00-21	5-42-5611-00-22	
6	Bearing		8-006-501-00	1	1	1	1	1	1	1	1	1	1	1	1	
8	Solenoid lever		8-008-504-01	1	1	1	1	1	1	1	1	1	1	1	1	
8R	Retaining ring		9-03-0057-00	2	2	2	2	2	2	2	2	2	2	2	2	
8W	Spacer		9-45-0168-00	3	3	3	3	3	3	3	3	3	3	3	3	
11N	Torque adjustment nut		9-40-3928-00	2	2	2	2	2	2	2	2	2	2	2	2	
10	Wear adjustment screw		9-17-8420-00	2	2	2	2	2	2	2	2	2	2	2	2	
11	Pressure spring		9-70-1215-00	2	2											
	Pressure spring		9-70-1523-00			2	2	2	2							
	Pressure spring		9-70-1524-00							2	2	2	2	2	2	
11W	Spring washer		9-46-0010-00			4	4	4	4	4	4	4	4	4	4	
17	Lever arm and stop nut assy.		5-17-5011-00	1	1	1	1	1	1	1	1	1	1	1	1	
26	Bearing pin		9-29-4826-00	1	1	1	1	1	1	1	1	1	1	1	1	
29A	Plunger stop		8-094-503-00	1	1	1	1	1	1	1	1	1	1	1	1	
28	Release Indicator		8-028-502-00	1	1	1	1	1	1	1	1	1	1	1	1	
59	Release spring		9-70-0809-000	1	1	1	1	1	1	1	1	1	1	1	1	
126	Support plate and spring stud assembly (2 housing studs)		5-26-5019-00	1		1		1		1		1		1		
	Support plate and spring stud assembly (3 housing studs)		5-26-5020-00		1		1		1		1		1		1	
131	Pivot pin		9-29-4836-00	1	1	1	1	1	1	1	1	1	1	1	1	
142S	Mounting screws		9-25-9013-00	3	3	3	3	3	3	3	3	3	3	3	3	
AC Brakes																
Z	No. 4 solenoid kit (rev A & B) (rev B only)		5-66-5042-00	1		1		1		1		1		1		
			5-96-5042-01	1		1		1		1		1		1		
AC	No. 4 coil kit 60 Hz	115/230 Vac	5-66-6407-33	1												
		230/460 Vac	5-66-6409-33	1												
		115 Vac	5-66-6401-33	1												
		230 Vac	5-66-6402-33	1												
		460 Vac	5-66-6404-33	1												
		575 Vac	5-66-6405-33	1												
	No. K4 coil kit 60 Hz	115/230 Vac	5-66-6457-33			1		1								
		230/460 Vac	5-66-6459-33			1		1								
		115 Vac	5-66-6451-33			1		1								
		230 Vac	5-66-6452-33			1		1								
		460 Vac	5-66-6454-33			1		1								
		575 Vac	5-66-6455-33			1		1								
	No. K4+ coil kit 60 Hz	115/230 Vac	5-66-6407-23							1		1				
		230/460 Vac	5-66-6409-23							1		1				
		115 Vac	5-66-6401-23							1		1				
		230 Vac	5-66-6402-23							1		1				
		460 Vac	5-66-6404-23							1		1				
		575 Vac	5-66-6405-23							1		1				
	No. M4+ coil kit 60 Hz	115/230 Vac	5-66-6457-23												1	
		230/460 Vac	5-66-6459-23												1	
		115 Vac	5-66-6451-23												1	
		230 Vac	5-66-6452-23												1	
		460 Vac	5-66-6454-23												1	
		575 Vac	5-66-6455-23												1	
CC	Brake release interlock switch (optional)		5-57-5526-00		1		1		1		1		1		1	
DC Brakes																
AD	No. 4 + coil assembly	115 Vdc	5-96-6416-43		1											
		230 Vdc	5-96-6417-43		1											
	No. K4 + coil assembly	115 Vdc	5-96-6416-23				1		1							
		230 Vdc	5-96-6417-23				1		1							
BD	No. M4 + coil assembly	115 Vdc	5-96-6466-23							1		1				
		230 Vdc	5-96-6467-23							1		1				
	No. P4 + coil assembly	115 Vdc	5-96-6446-43											1		
		230 Vdc	5-96-6447-43											1		
BD	Electronic DC switch kit	24/28 Vdc	5-57-5712-15		1		1		1		1		1		1	
		115 Vdc	5-57-5716-15		1		1		1		1		1		1	
		230 Vdc	5-57-5717-15		1		1		1		1		1		1	

Solenoid and Coil Assembly

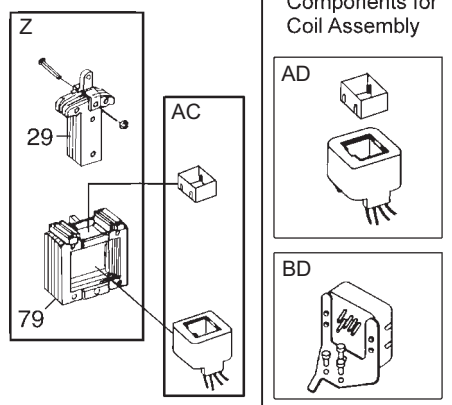


TABLE 3
Contents of Kits and Assemblies

Letter Designation	Kit Description
A	Hardware kit – NEMA 2 (5-66-1011-00) 2 – Housing nuts 2 – Housing nut flat washers 1 – Release cover with clip 1 – Release cover gasket
	Hardware kit – NEMA 4 (5-66-1012-00) Hardware kit – NEMA 4X (5-66-1013-00) 1 – Endplate oil seal 1 – Drain plug 3 – Housing nuts 3 – Housing nut 'O' rings 1 – Release cover 4 – Release cover screws 1 – Release cover gasket 1 – Housing-to-endplate-gasket
	3 – Stationary disc kit (5-66-8353-00) 1 – Stationary disc
3A	Stationary disc kit (5-66-8355-00) 2 – Stationary discs with springs
3B	Stationary disc kit (5-66-8356-00) 3 – Stationary discs with springs
4	Friction disc kit (5-66-8462-00) 1 – Friction disc 2 – Stabilizing clips
DP	Disc pack kit (5-66-860X-00) 1, 2 or 3 – Friction disc(s) 1, 2 or 3 – Stationary disc(s) 2 – Stabilizing clips (5-66-8601-00 only) 3, 6 or 9 – Stationary disc separator springs
16	Hub and set screw assembly – all types, all bores (5-16-515X-00) 1 – Brake hub 2 – Set screws
Z	No. 4 solenoid kit (5-66-5042-00) (5-96-5042-01) 1 – Plunger 1 – Solenoid link 1 – Frame (including mounting bracket) 1 – Solenoid link cap screw 1 – Solenoid link nut 3 – Solenoid mounting screws
AC AD	No. 4 AC coil kit (5-66-64XX-X3) and DC coil assembly (5-96-64XX-X3) Coil / Top Plunger guide / Wire nut
BD	DC switch kit (5-57-571X-15) 1 – Electronic switch 1 – Mounting bracket 3 – Bracket mounting screws 4 – Switch mounting screws 4 – Nuts 4 – Lock washers 5 – Crimp connectors
CC	Brake release interlock switch (5-57-5526-00) 1 – Microswitch 1 – Mounting bracket 2 – Bracket mounting screws 2 – Switch mounting screws 2 – Lock washers 2 – Nuts 2 – Lead wire assembly

Optional Modification Kits

[BACK TO PRODUCT PAGE](#)

TABLE 4

Catalog Mod Number	Description	Part Number ↓	Torque (lb-ft)	1.5, 3 & 6	10 & 15	20 & 25
M4	Brass Stationary Disc	8-003-513-02	1	2	3	
M13	Space Heater 115 Vac 230 Vac	5-27-2004-00 5-27-2005-00	1 1	1 1	1 1	
M17	Terminal Strip	5-63-0524-00	1	1	1	
M21	Vertical Spring Kit (2 disc) (3 disc)	5-63-0539-00 5-63-0525-00		1	1	

Catalog Mod Number	Description	Part Number ↓	Torque (lb-ft)	1.5 & 3	6 & 10	15 & 20	25
M6	No. 4 Class 'H' coil kit 60 Hz	115/230 Vac	5-96-6407-05	1			
		230/460 Vac	5-96-6409-05	1			
		115 Vac	5-96-6401-05	1			
		230 Vac	5-96-6402-05	1			
		460 Vac	5-96-6404-05	1			
		575 Vac	5-96-6405-05	1			
	No. K4 Class 'H' coil kit 60 Hz	115/230 Vac	5-96-6457-05		1		
		230/460 Vac	5-96-6459-05		1		
		115 Vac	5-96-6451-05		1		
		230 Vac	5-96-6452-05		1		
		460 Vac	5-96-6454-05		1		
		575 Vac	5-96-6455-05		1		
	No. K4+ Class 'H' coil kit 60 Hz	115/230 Vac	5-96-6407-25			1	
		230/460 Vac	5-96-6409-25			1	
		115 Vac	5-96-6401-25			1	
		230 Vac	5-96-6402-25			1	
		460 Vac	5-96-6404-25			1	
		575 Vac	5-96-6405-25			1	
	No. M4+ Class 'H' coil kit 60 Hz	115/230 Vac	5-96-6457-25				1
		230/460 Vac	5-96-6459-25				1
		115 Vac	5-96-6451-25				1
		230 Vac	5-96-6452-25				1
		460 Vac	5-96-6454-25				1
		575 Vac	5-96-6455-25				1




Rexnord Industries, LLC
Stearns Division
5150 S. International Drive
Cudahy, Wisconsin 53110
(414) 272-1100 Fax: (414) 277-4364
www.stearns_rexnord.com

Stearns® Spring-Set Disc Brakes

P/N 8-078-906-07
effective 01/31/08

For Installation and Service Instructions refer to sheet part number 8-078-905-67. Instructions and parts list also available at www.stearns.rexnord.com.


Parts List for 1-056-700 Series (rev. A & B) Double C-Face Coupler

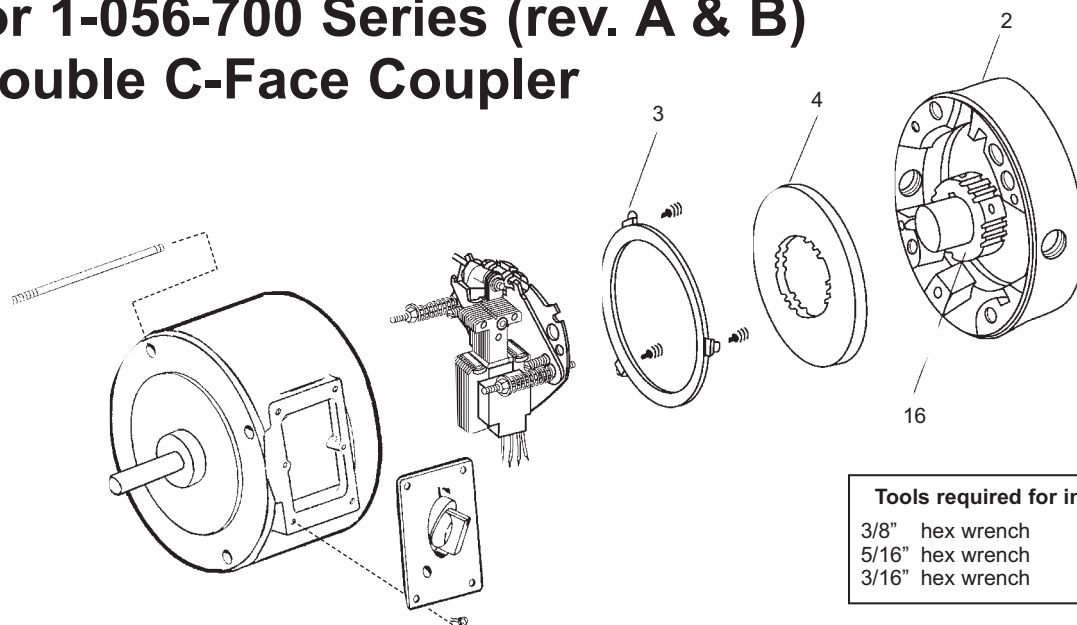

Tools required for installation and servicing:

3/8" hex wrench	5/16" nut driver
5/16" hex wrench	1/4" screwdriver
3/16" hex wrench	8" adjustable wrench

Typical Nameplate

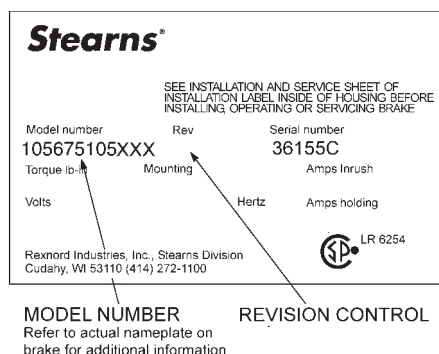

Important

Please read these instructions carefully before installing, operating, or servicing your Stearns Brake. Failure to comply with these instructions could cause injury to personnel and/or damage to property if the brake is installed or operated incorrectly. For definition of limited warranty/liability, contact Rexnord Industries, LLC, Stearns Division, 5150 S. International Dr., Cudahy, WI 53110, (414) 272-1100.

Caution

1. Installation and servicing must be made in compliance with all local safety codes including Occupational Safety and Health Act (OSHA). All wiring and electrical connections must comply with the National Electric Code (NEC) and local electric codes in effect.

2. Do not install the brake in atmospheres containing explosive gases or dusts.
3. To prevent an electrical hazard, disconnect power source before working on the brake. If power disconnect point is out of sight, lock disconnect in the *off* position and tag to prevent accidental application of power.
4. Make certain power source conforms to the requirements specified on the brake nameplate.
5. Be careful when touching the exterior of an operating brake. Allow sufficient time for brake to cool before disassembly. Surfaces may be hot enough to be painful or cause injury.
6. Do not operate brake with housing removed. All moving parts should be guarded.
7. Installation and servicing should be performed only by qualified personnel familiar with the construction and operation of the brake.
8. For proper performance and operation, only genuine Stearns parts should be used for repairs and replacements.
9. After usage, the brake interior will contain burnt and degraded friction material dust. This dust must be removed before servicing or adjusting the brake.

DO NOT BLOW OFF DUST using an air hose. It is important to avoid dispersing dust into the air or inhaling it, as this may be dangerous to your health.

- a) Wear a filtered mask or a respirator while removing dust from the inside of a brake.
- b) Use a vacuum cleaner or a soft brush to remove dust from the brake. When brushing, avoid causing the dust to become airborne. Collect the dust in a container, such as a bag, which can be sealed off.

Caution! While the brake is equipped with a manual release to allow manual shaft rotation, the motor should not be run with the manual release engaged, to avoid overheating the friction disc(s).

Information required when ordering replacement parts:

[BACK TO PRODUCT PAGE](#)

- Give part number of parts or kits needed, brake model number, and brake serial number. The brake model and serial number may identify special brakes not covered by this parts list.
- When ordering hubs, specify shaft diameter (hub bore) and keyway.
- Enclosure is specified as follows:

NEMA 1 (formerly referred to as standard)

NEMA 4 (formerly referred to as DTWP dust-tight waterproof)

NEMA 4X (formerly referred to as BISSC washdown)

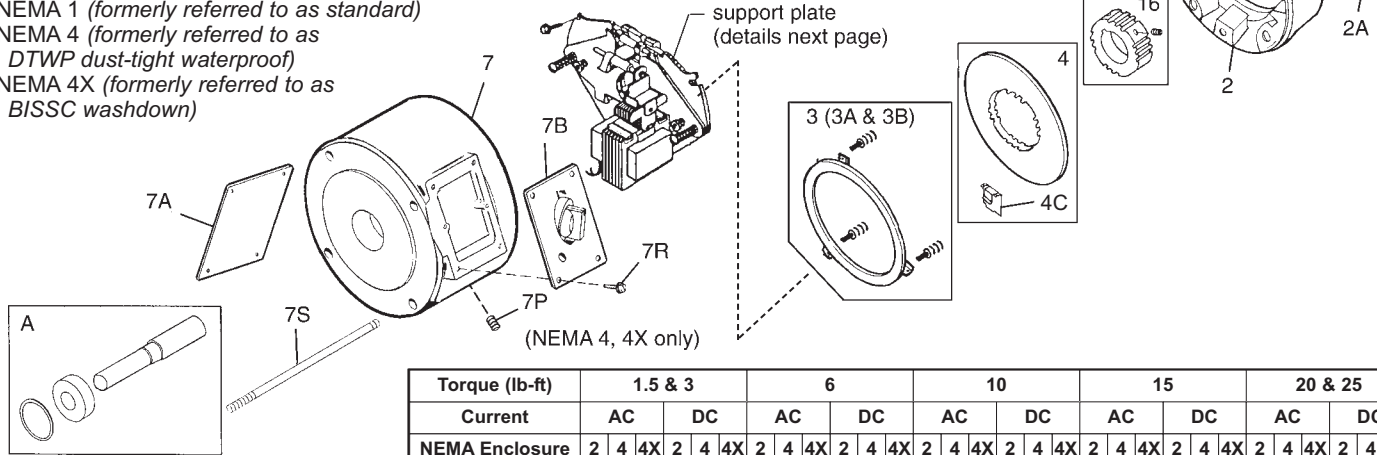


TABLE 1

Components of Standard AC or DC Brake

Item	Description		Part Number ↓	Torque (lb-ft)																																
				1.5 & 3			6			10			15			20 & 25			30 & 35			40 & 45			50 & 55			60 & 65			70 & 75					
			1-056-701-00 & 711-00	1-056-702-00 & 712-00	1-056-704-00 & 714-00	1-056-705-00 & 715-00	1-056-706-00 & 716-00	1-056-708-00 & 718-00	1-056-721-00	1-056-722-00	1-056-724-00	1-056-725-00	1-056-726-00	1-056-728-00	1-056-731-00	1-056-732-00	1-056-734-00	1-056-735-00	1-056-736-00	1-056-738-00	1-056-741-00	1-056-742-00	1-056-744-00	1-056-745-00	1-056-746-00	1-056-748-00	1-056-751-00 & 761-00	1-056-752-00 & 762-00	1-056-754-00 & 764-00	1-056-755-00 & 765-00	1-056-756-00 & 766-00	1-056-758-00 & 768-00				
A	Coupler brake shaft kit (5/8 diameter) Coupler brake shaft kit (7/8 diameter) Coupler brake shaft kit - 3 disc (7/8 dia.)		5-66-8865-00 5-66-8867-00 5-66-8869-00	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1									
7	Housing - standard (NEMA 2) Housing - DTWP (NEMA 4) Housing - BISSC (NEMA 4X)		8-007-527-09 8-007-527-11 8-007-527-12	1			1			1			1			1			1			1			1			1			1			1		
7S	Mounting stud kit (NEMA 2 & 4) Mounting stud kit (NEMA 4X)		5-96-0527-00 5-96-0528-00	1	1		1	1		1	1		1	1		1	1		1	1		1	1		1	1		1	1		1	1		1	1	
7A	Access cover (NEMA 2) Access cover (NEMA 4) Access cover (NEMA 4X)		8-104-505-00 8-104-506-00 8-104-506-01	1			1			1			1			1			1			1			1			1			1			1		
7B	Manual release assembly (NEMA 2) Manual release assembly (NEMA 4) Manual release assembly (NEMA 4X)		5-07-5033-00 5-07-5037-00 5-07-5038-00	1			1			1			1			1			1			1			1			1			1			1		
7R	Machine screw		9-25-7321-00	4	12	12	4	12	12	4	12	12	4	12	12	4	12	12	4	12	12	4	12	12	4	12	12	4	12	12	4	12	12	4	12	12
not shown	Release Knob Kit		5-63-5503-00		1	1				1	1				1	1				1	1				1	1				1	1				1	1
not shown	Gasket - access cover (NEMA 4 & 4X)		8-073-504-00		2	2				2	2				2	2				2	2				2	2				2	2				2	2
not shown	Gasket - housing to endplate (NEMA 4 & 4X)		8-069-506-00		1	1				1	1				1	1				1	1				1	1				1	1				1	1
not shown	Gasket - brake ends (NEMA 4 & 4X)		8-122-501-00		2	2				2	2				2	2				2	2				2	2				2	2				2	2
7P	Pipe plug (drain) Pipe plug (stainless drain)		9-33-0325-00 9-33-0325-01		1					1					1					1					1				1					1		
3	Stationary disc kit (1 disc universal 3 disc horizontal)		5-66-8354-00	1	1	1	1	1	1	1	1	1	1	1														3	3	3	3	3	3	3	3	
3A	Stationary disc kit (2 disc universal)		5-66-8355-00												1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	
3B	Stationary disc kit (3 disc vertical)		5-66-8356-00																																	
4	Friction disc kit		5-66-8462-00	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	
4C	Stabilizing clip (part of 5-66-8462-00)			2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	
4DP	Disc pack kit (1 disc) Disc pack kit (2 disc) Disc pack kit (3 disc)		5-66-8601-00 5-66-8602-00 5-66-8603-00	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	
16	Hub (5/8 bore) Hub (7/8 bore) 3 disc (7/8 bore)		5-16-5150-00-01-B 5-16-5150-00-01D 5-16-5153-01	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	
2	Endplate assembly	1 & 2 disc (NEMA 2 & 4) 1 & 2 disc (NEMA 4X) 3 disc (NEMA 2 & 4) 3 disc (NEMA 4X)	5-02-5035-00 5-02-5039-00 5-02-5036-00 5-02-5040-00	1	1				1	1				1	1				1	1				1	1			1	1				1	1		
2A	Pipe plug - external lead holes Pipe plug - stainless (ext. lead holes)		9-33-0914-00 9-33-0624-00	1	1				1	1				1	1				1	1				1	1			1	1				1	1		

* Certain multiple friction disc model numbers require a single stabilizer clip (D1) added to each friction disc. If your particular brake model has this clip on the discs, as received, it must be replaced whenever the friction disc is replaced. This clip is included as part of the friction disc kit 5-66-8462-00.

Support Plate Assembly

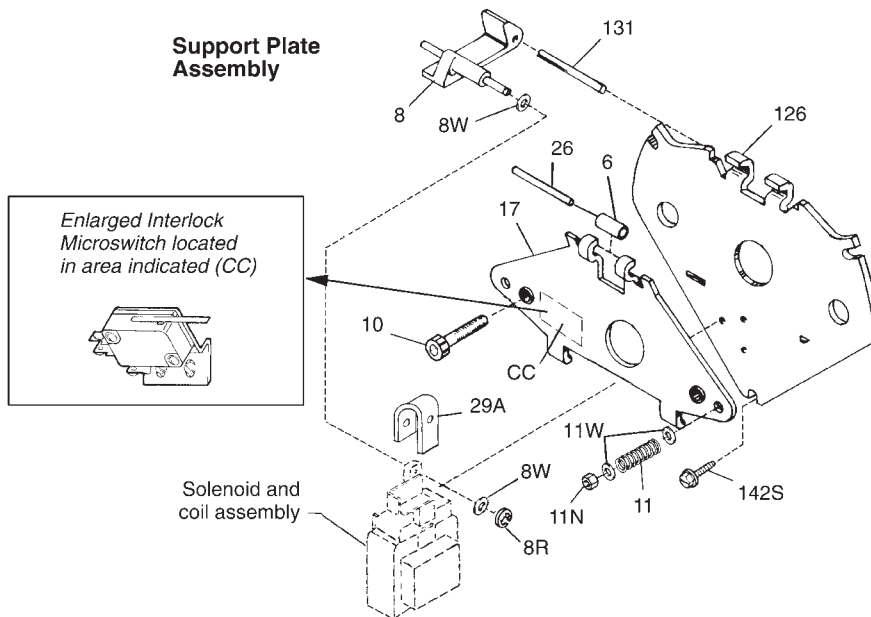


TABLE 2
Components of Support Plate
and Coil Assembly

			Torque (lb-ft)	1.5 & 3	6	10	15	20	25
			Support Plate Assy. (Items 6 through 131 and Z) →	5-42-5622-00-14 (AC) 5-42-5642-00-04 (DC)	5-42-5623-00-14 (AC) 5-42-5643-00-04 (DC)	5-42-5624-00-14 (AC) 5-42-5644-00-04 (DC)	5-42-5625-00-14 (AC) 5-42-5645-00-04 (DC)	5-42-5626-00-14 (AC) 5-42-5646-00-04 (DC)	5-42-5626-00-14 (AC) 5-42-5646-00-04 (DC)
Item	Description		Part Number ↓						
6	Bearing		8-006-501-00	1	1	1	1	1	1
8	Solenoid lever		8-008-504-01	1	1	1	1	1	1
8R	Retaining ring		9-03-0057-00	1	1	1	1	1	1
8W	Spacer		9-45-0168-00	2	2	2	2	2	2
11N	Torque adjustment nut		9-40-3928-00	2	2	2	2	2	2
10	Wear adjustment screw		9-17-8420-00	2	2	2	2	2	2
11	Pressure spring		9-70-1215-00	2					
	Pressure spring		9-70-1523-00		2	2			
	Pressure spring		9-70-1524-00						
11W	Spring washer		9-46-0010-00			4	4	4	4
17	Lever arm and stop nut assy.		5-17-5011-00	1	1	1	1	1	1
26	Bearing pin		9-29-4826-00	1	1	1	1	1	1
29A	Plunger stop		8-094-503-00	1	1	1	1	1	1
126	Support plate and spring stud assembly		5-26-5021-00	1	1	1	1	1	1
131	Pivot pin		9-29-4836-00	1	1	1	1	1	1
142S	Mounting screws		9-25-9013-00	3	3	3	3	3	3
AC Brakes									
Z	No. 4 solenoid kit (rev A & B) (rev B only)		5-66-5047-00 5-96-5047-01	1 1	1 1	1 1	1 1	1 1	1 1
12**	No. 4 coil kit 60 Hz	115/230 Vac	5-66-6407-33	1					
		230/460 Vac	5-66-6409-33	1					
		115 Vac	5-66-6401-33	1					
		230 Vac	5-66-6402-33	1					
		460 Vac	5-66-6404-33	1					
		575 Vac	5-66-6405-33	1					
	No. K4 coil kit 60 Hz	115/230 Vac	5-66-6457-33		1	1			
		230/460 Vac	5-66-6459-33		1	1			
		115 Vac	5-66-6451-33		1	1			
		230 Vac	5-66-6452-33		1	1			
		460 Vac	5-66-6454-33		1	1			
		575 Vac	5-66-6455-33		1	1			
	No. K4+ coil kit 60 Hz	115/230 Vac	5-66-6407-23				1	1	
		230/460 Vac	5-66-6409-23				1	1	
		115 Vac	5-66-6401-23				1	1	
		230 Vac	5-66-6402-23				1	1	
		460 Vac	5-66-6404-23				1	1	
		575 Vac	5-66-6405-23				1	1	
	No. M4+ coil kit 60 Hz	115/230 Vac	5-66-6457-23						1
		230/460 Vac	5-66-6459-23						1
		115 Vac	5-66-6451-23						1
		230 Vac	5-66-6452-23						1
		460 Vac	5-66-6454-23						1
		575 Vac	5-66-6455-23						1
CC	Brake release interlock switch (optional)		5-57-5526-00	1	1	1	1	1	1

For DC coil/Solenoid parts refer to Instruction Sheet 8-078-950-00

Solenoid and Coil Assembly

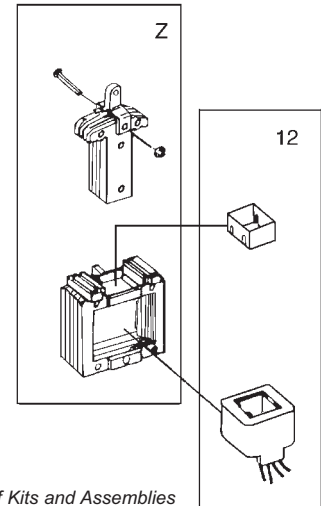


TABLE 3
Contents of Kits and Assemblies

Letter Designation	Kit Description
A	Coupler brake shaft kit 5/8" shaft (5-66-8865-00) 7/8" shaft (5-66-8867-00) 3 disc 7/8" shaft (5-66-8869-00) 1 – Hub and set screw assembly 1 – Ball bearing 1 – Housing retaining ring 1 – Brake shaft 1 – Brake shaft key
3	Stationary disc kit (5-66-8354-00) 1 – Stationary disc
3A	Stationary disc kit (5-66-8355-00) 2 – Stationary discs with springs
3B	Stationary disc kit (5-66-8356-00) 3 – Stationary discs with springs
4	Friction disc kit (5-66-8462-00) 1 – Friction disc 2 – Stabilizing springs (for 1-1/2-6 lb-ft brake use only)
4DP	Disc pack kit (5-66-860X-00) 1,2 or 3 – Friction disc(s) 1,2 or 3 – Stationary disc(s) 2 – Stabilizing springs (for 1-1/2-6 lb-ft brake use only) 3,6 or 9 – Stationary disc separator springs
7S	Mounting stud kit (5-96-052X-00) 4 – Mounting studs 4 – Lock washers 4 – Nuts
Z	No. 4 solenoid kit (5-66-5047-00) (5-96-5047-01) 1 – Plunger (5-63-5047-01) 1 – Solenoid link 1 – Frame (including mounting bracket) 1 – Solenoid link cap screw 1 – Solenoid link nut 3 – Solenoid mounting screws
12	No. 4 AC coil kit (5-66-64XX-X3) Coil Top Plunger guide Wire nut
CC	Brake release interlock switch (5-57-5526-00) 1 – Microswitch 1 – Mounting bracket 2 – Bracket mounting screws 2 – Switch mounting screws 2 – Lead wire assembly

TABLE 4

Catalog Mod Number	Description	Part Number ↓	Torque (lb-ft)	1.5, 3 & 6	10 & 15	20 & 25
			Brake Model Number→	1-056-70X 1-056-71X 1-056-72X	1-056-73X 1-056-74X	1-056-75X 1-056-76X
M4	Brass Stationary Disc	8-003-513-02		1	2	3
M13	Space Heater 115 Vac 230 Vac	5-27-2004-00 5-27-2005-00		1 1	1 1	1 1
M17	Terminal Strip	5-63-0524-00		1	1	1
M21	Vertical Spring Kit (2 disc) (3 disc)	5-63-0539-00 5-63-0525-00			1	1

Catalog Mod Number	Description	Part Number ↓	Torque (lb-ft)	1.5 & 3	6 & 10	15 & 20	25
			Brake Model Number→	1-056-701-00 1-056-711-00	1-056-721-00 1-056-731-00	1-056-741-00 1-056-751-00	1-056-761-00
M6	No. 4 Class 'H' coil kit 60 Hz	115/230 Vac	5-96-6407-05	1			
		230/460 Vac	5-96-6409-05	1			
		115 Vac	5-96-6401-05	1			
		230 Vac	5-96-6402-05	1			
		460 Vac	5-96-6404-05	1			
		575 Vac	5-96-6405-05	1			
	No. K4 Class 'H' coil kit 60 Hz	115/230 Vac	5-96-6457-05		1		
		230/460 Vac	5-96-6459-05		1		
		115 Vac	5-96-6451-05		1		
		230 Vac	5-96-6452-05		1		
		460 Vac	5-96-6454-05		1		
		575 Vac	5-96-6455-05		1		
	No. K4+ Class 'H' coil kit 60 Hz	115/230 Vac	5-96-6407-25			1	
		230/460 Vac	5-96-6409-25			1	
		115 Vac	5-96-6401-25			1	
		230 Vac	5-96-6402-25			1	
		460 Vac	5-96-6404-25			1	
		575 Vac	5-96-6405-25			1	
	No. M4+ Class 'H' coil kit 60 Hz	115/230 Vac	5-96-6457-25				1
		230/460 Vac	5-96-6459-25				1
		115 Vac	5-96-6451-25				1
		230 Vac	5-96-6452-25				1
		460 Vac	5-96-6454-25				1
		575 Vac	5-96-6455-25				1




Rexnord Industries, LLC
 Stearns Division
 5150 S. International Drive
 Cudahy, Wisconsin 53110
 (414) 272-1100 Fax: (414) 277-4364 www.stearns.rexnord.com


Stearns® Spring-Set Disc Brakes

Parts List for 1-056-900 Series (rev. A & B) Manual Adjust Brakes

For Installation and Service Instructions refer to sheet part number 8-078-905-60. Instructions and parts list also available at www.stearns.rexnord.com.

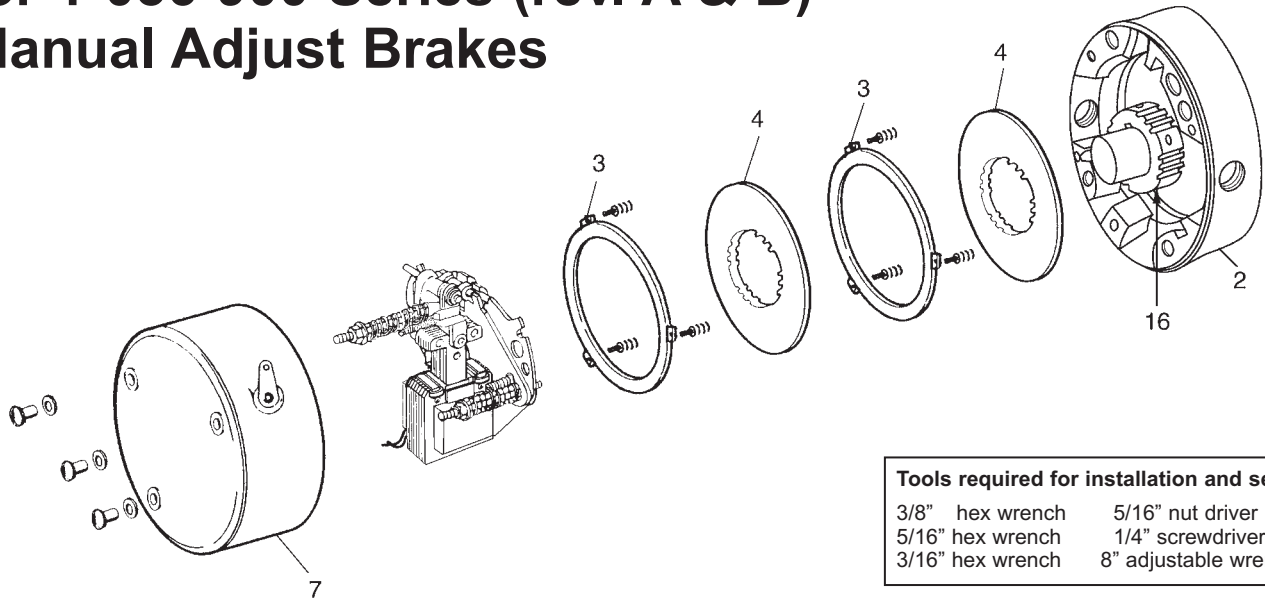**Tools required for installation and servicing:**

3/8" hex wrench	5/16" nut driver
5/16" hex wrench	1/4" screwdriver
3/16" hex wrench	8" adjustable wrench

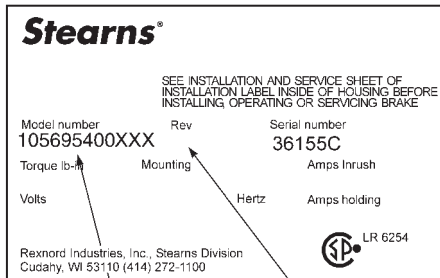Typical Nameplate

MODEL NUMBER
Refer to actual nameplate on
brake for additional information

REVISION CONTROL

IMPORTANT

Please read these instructions carefully before installing, operating, or servicing your Stearns Brake. Failure to comply with these instructions could cause injury to personnel and/or damage to property if the brake is installed or operated incorrectly. For definition of limited warranty/liability, contact Rexnord Industries, LLC., Stearns Division, 5150 S. International Dr., Cudahy, WI 53110, (414) 272-1100.

Caution

1. Installation and servicing must be made in compliance with all local safety codes including Occupational Safety and Health Act (OSHA). All wiring and electrical connections must comply with the National Electric Code (NEC) and local electric codes in effect.

2. Do not operate the brake in atmospheres containing explosive gases or dusts.
3. To prevent an electrical hazard, disconnect power source before working on the brake. If power disconnect point is out of sight, lock disconnect in the *off* position and tag to prevent accidental application of power.
4. Make certain power source conforms to the requirements specified on the brake nameplate.
5. Be careful when touching the exterior of an operating brake. Allow sufficient time for brake to cool before disassembly. Surfaces may be hot enough to be painful or cause injury.
6. Do not operate brake with housing removed. All moving parts should be guarded.
7. Installation and servicing should be performed only by qualified personnel familiar with the construction and operation of the brake.

8. For proper performance and operation, only genuine Stearns parts should be used for repairs and replacements.
9. After usage, the brake interior will contain burnt and degraded friction material dust. This dust must be removed before servicing or adjusting the brake.

DO NOT BLOW OFF DUST using an air hose. It is important to avoid dispersing dust into the air or inhaling it, as this may be dangerous to your health.

- a) Wear a filtered mask or a respirator while removing dust from the inside of a brake.
- b) Use a vacuum cleaner or a soft brush to remove dust from the brake. When brushing, avoid causing the dust to become airborne. Collect the dust in a container, such as a bag, which can be sealed off.

Caution! While the brake is equipped with a manual release to allow manual shaft rotation, the motor should not be run with the manual release engaged, to avoid overheating the friction disc(s).

Information required when ordering replacement parts:

- Give Part Number of parts or kits needed, Brake Model Number, and Brake Serial Number. The Brake Model and Serial Number may identify special brakes not covered by this parts list.
- When ordering hubs, specify shaft diameter (hub bore) and keyway.
- Enclosure is specified as follows:
NEMA 4X (formerly referred to as BISSC washdown)

[BACK TO PRODUCT PAGE](#)

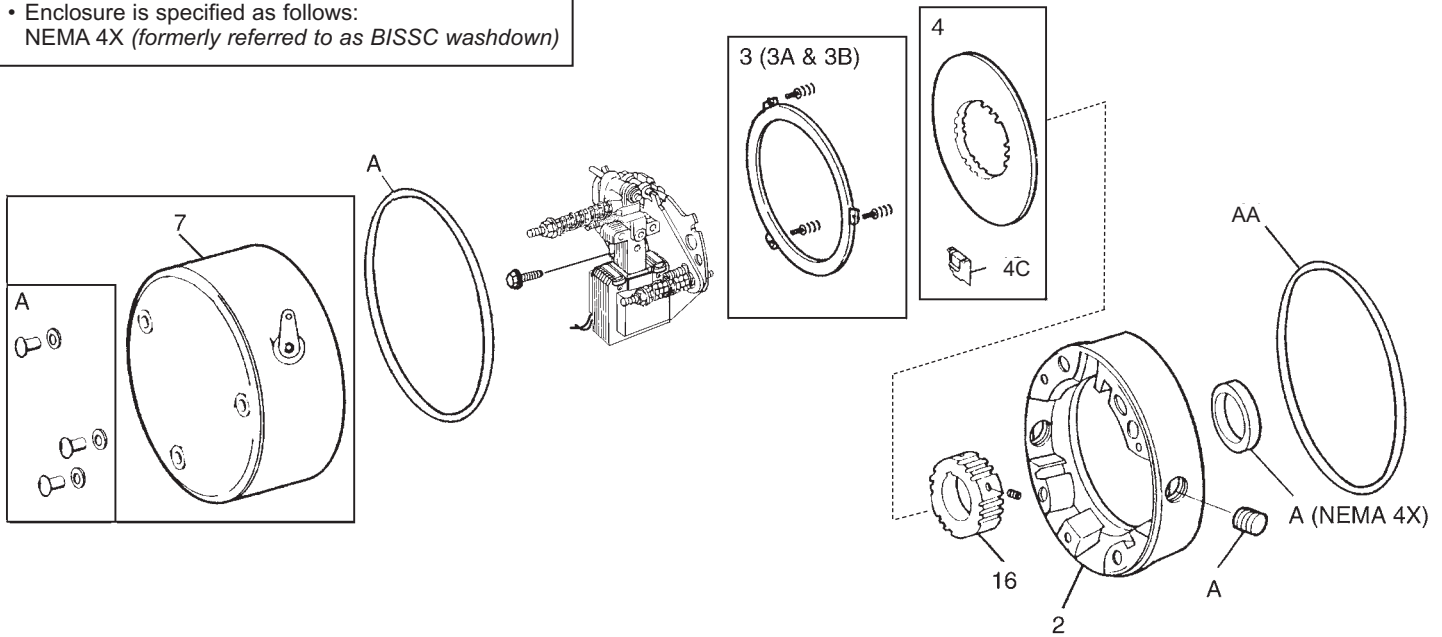


TABLE 1
Components of Standard AC or DC Brake

TABLE 1 Components of Standard AC or DC Brake			Torque (lb-ft)		1.5 and 3		6		10		15		20 and 25	
			Current		AC	DC	AC	DC	AC	DC	AC	DC	AC	DC
			NEMA Enclosure		4X	4X	4X	4X	4X	4X	4X	4X	4X	4X
			Brake Model Number →		1-056-904-00 & 914-00	1-056-908-00 & 918-00	1-056-924-00	1-056-928-00	1-056-934-00	1-056-938-00	1-056-944-00	1-056-948-00	1-056-954-00 & 964-00	1-056-958-00 & 968-00
Item	Description	Part Number ↓												
AA A	Gasket NEMA 4 (close coupled only) Hardware Kit - NEMA 4X (rev A & B)		8-122-503-00 5-66-1018-00	X 1	X 1	X 1	X 1	X 1	X 1	X 1	X 1	X 1	X 1	
7	Housing & Release Assembly - NEMA 4X		5-07-5045-00	1	1	1	1	1	1	1	1	1	1	
3	Stationary disc kit (1 disc universal; 3 disc horizontal)		5-66-8354-00	1	1	1	1					3	3	
3A 3B	Stationary disc kit (2 disc universal) Stationary disc kit (3 disc vertical)		5-66-8355-00 5-66-8356-00					1	1	1	1		1	
Not Shown	Vertical spring kit (3 disc)		5-63-0525-00								1	1	1	
4 4C	Friction disc kit Stabilizing clip		5-66-8462-00 5-66-8356-00	1 2	1 2	1 2	1 2	2 *	2 *	2 *	2 *	3 *	3 *	
DP	Disc pack kit - 1 disc Disc pack kit - 2 disc Disc pack kit - 3 disc		5-66-8601-00 5-66-8602-00 5-66-8603-00	1	1	1	1	1	1	1	1		1	
16	Hub and set screw assembly 1 disc	5/8 bore 7/8 bore 1-1/8 bore	5-16-5151-00-01B 5-16-5151-00-01D 5-16-5151-00-01E	1 1 1	1 1 1	1 1 1	1 1 1							
	Hub and set screw assembly 2 & 3 1 disc	5/8 bore 7/8 bore 1-1/8 bore	5-16-5153-00-01B 5-16-5153-00-01D 5-16-5153-00-01E					1 1 1	1 1 1	1 1 1	1 1 1	1 1 1	1 1 1	
2	Endplate Endplate Endplate & Seal Assembly	1 disc close coupled 2 & 3 disc 1 disc (NEMA 4X) 2 & 3 disc (NEMA 4X)	8-002-580-22-30F 8-002-582-22-30F 5-02-5047-00 5-02-5048-00	X 1	X 1	X 1	X 1	X 1	X 1	X 1	X 1	X 1	X 1	

* Certain multiple friction disc model numbers require a single stabilizer clip (4S) added to each friction disc. If your brake has these clips, they must be replaced when the friction disc is replaced. This clip is included as part of the friction disc kit 5-66-8462-00.
X - Model numbers with the number 8 in the 8th position indicate close coupled brakes.

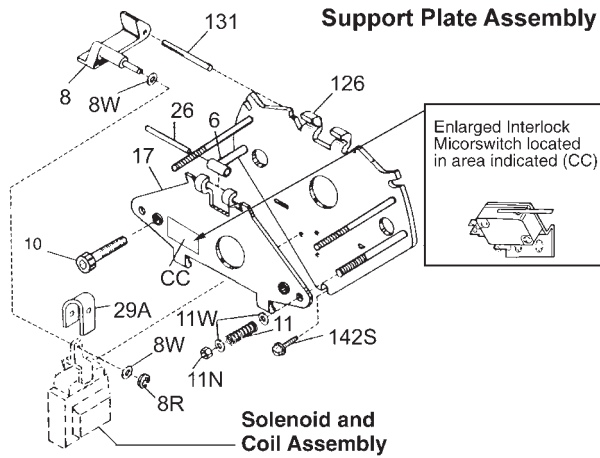


TABLE 2
Components of Support Plate and Coil Assembly

		Torque (lb-ft)					
		1.5 & 3	6	10	15	20	25
		NEMA Enclosure	4X	4X	4X	4X	4X
		Support Plate Assy. (Items 6 through 131 and Z) →	5-42-5601-00-34	5-42-5605-00-34	5-42-5607-00-34	5-42-5609-00-34	5-42-5611-00-34
Item	Description	Part Number ↓	5-42-5601-00-34	5-42-5605-00-34	5-42-5607-00-34	5-42-5609-00-34	5-42-5611-00-34
6	Bearing	8-006-501-00	1	1	1	1	1
8	Solenoid lever	8-008-504-05	1	1	1	1	1
8R	Retaining ring	9-03-0057-00	1	1	1	1	1
8W	Spacer	9-45-0168-00	2	2	2	2	2
11N	Torque adjustment nut	9-40-3928-00	2	2	2	2	2
10	Wear adjustment screw	9-17-8420-00	2	2	2	2	2
11	Pressure spring	9-70-1215-00	2				
	Pressure spring	9-70-1523-00		2	2		
	Pressure spring	9-70-1524-00				2	2
11W	Spring washer	9-46-0010-00		4	4	4	4
17	Lever arm and stop nut assy.	5-17-5011-00	1	1	1	1	1
26	Bearing pin	9-29-4826-00	1	1	1	1	1
29A	Plunger stop	8-094-503-00	1	1	1	1	1
126	Support plate and spring stud assembly (3 housing studs)	5-26-5020-00	1	1	1	1	1
131	Pivot pin	9-29-4836-00	1	1	1	1	1
142S	Mounting screws	9-25-9013-00	3	3	3	3	3
AC Brakes							
Z	No. 4 solenoid kit (rev A & B) (rev B only)	5-66-5047-00 5-96-5047-01	1 1	1 1	1 1	1 1	1 1
AC	No. 4 coil kit 60 Hz	115/230 Vac	5-66-6407-33	1			
		230/460 Vac	5-66-6409-33	1			
		115 Vac	5-66-6401-33	1			
		230 Vac	5-66-6402-33	1			
		460 Vac	5-66-6404-33	1			
		575 Vac	5-66-6405-33	1			
	No. K4 coil kit 60 Hz	115/230 Vac	5-66-6457-33		1	1	
		230/460 Vac	5-66-6459-33		1	1	
		115 Vac	5-66-6451-33		1	1	
		230 Vac	5-66-6452-33		1	1	
		460 Vac	5-66-6454-33		1	1	
		575 Vac	5-66-6455-33		1	1	
	No. K4+ coil kit 60 Hz	115/230 Vac	5-66-6407-23				1
		230/460 Vac	5-66-6409-23				1
		115 Vac	5-66-6401-23				1
		230 Vac	5-66-6402-23				1
		460 Vac	5-66-6404-23				1
		575 Vac	5-66-6405-23				1
	No. M4+ coil kit 60 Hz	115/230 Vac	5-66-6457-23				1
		230/460 Vac	5-66-6459-23				1
		115 Vac	5-66-6451-23				1
		230 Vac	5-66-6452-23				1
		460 Vac	5-66-6454-23				1
		575 Vac	5-66-6455-23				1
CC	Brake release interlock switch (optional)	5-57-5526-00	1	1	1	1	1
DC Brakes							
AD	No. 4 + coil assembly	115 Vdc	5-96-6416-43	1			
		230 Vdc	5-96-6417-43	1			
	No. K4 + coil assembly	115 Vdc	5-96-6416-23		1	1	
		230 Vdc	5-96-6417-23		1	1	
	No. M4 + coil assembly	115 Vdc	5-96-6466-23				1
		230 Vdc	5-96-6467-23				1
	No. P4 + coil assembly	115 Vdc	5-96-6446-43				1
		230 Vdc	5-96-6447-43				1
BD	Electronic DC switch kit	24/28 Vdc	5-57-5712-15	1	1	1	1
		115 Vdc	5-57-5716-15	1	1	1	1
		230 Vdc	5-57-5717-15	1	1	1	1

Solenoid and Coil Assembly

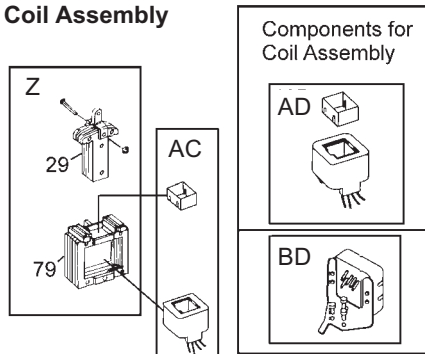


TABLE 3
Contents of Kits and Assemblies

Item	Kit Description
A	Hardware kit – NEMA 4X (5-66-1018-00) 1 – Endplate oil seal 1 – Drain plug 3 – Housing nuts 3 – Housing nut seal washers 2 – Endplate conduit pipe plugs 1 – Housing-to-endplate gasket
3	Stationary disc kit (5-66-8354-00) 1 – Stationary disc
3A	Stationary disc kit (5-66-8355-00) 2 – Stationary discs with springs
4	Friction disc kit (5-66-8462-00) 1 – Friction disc 2 – Stabilizing clips
DP	Disc pack kit (5-66-860X-00) 1, 2 or 3 – Friction disc(s) 1, 2 or 3 – Stationary disc(s) 2 – Stabilizing clips (5-66-8601-00 only) 3, 6 or 9 – Stationary disc separator springs
16	Hub and set screw assembly – all types, all bores (5-16-5153-00) 1 – Brake hub 2 – Set screws
Z	No. 4 solenoid kit (5-66-5047-00) (5-96-5047-01) 1 – Plunger 1 – Solenoid link 1 – Frame (including mounting bracket) 1 – Solenoid link cap screw 1 – Solenoid link nut 3 – Solenoid mounting screws
AC	No. 4 AC coil kit (5-66-64XX-X3 and DC coil assembly (5-96-64XX-X3)
AD	Coil / Top Plunger guide / Wire nut
BD	DC switch kit (5-57-571X-15) 1 – Electronic switch 1 – Mounting bracket 3 – Bracket mounting screws 4 – Switch mounting screws 4 – Nuts 4 – Lock washers 5 – Crimp connectors
CC	Brake release interlock switch (5-57-5526-00) 1 – Microswitch 1 – Mounting bracket 2 – Bracket mounting screws 2 – Switch mounting screws 2 – Lock washer 2 – Nuts 2 – Lead wire assembly

Optional Modification Kits

[BACK TO PRODUCT PAGE](#)

TABLE 4

Catalog Mod Number	Description	Part Number ↓	Torque (lb-ft)		
			1.5, 3 & 6	10 & 15	20 & 25
			Brake Model Number→		
			1-056-90X	1-056-91X	1-056-92X
			1-056-93X	1-056-94X	1-056-95X
			1-056-96X	1-056-97X	1-056-98X
M4	Brass Stationary Disc	8-003-513-02	1	2	3
M13	Space Heater 115 Vac 230 Vac	5-27-2004-00 5-27-2005-00	1 1	1 1	1 1
M17	Terminal Strip	5-63-0524-00	1	1	1
M21	Vertical Spring Kit (2 disc) (3 disc)	5-63-0539-00 5-63-0525-00		1	1

Catalog Mod Number	Description	Part Number ↓	Torque (lb-ft)				
			1.5 & 3	6 & 10	15 & 20	25	
			Brake Model Number→				
			1-056-904-00	1-056-914-00	1-056-924-00	1-056-934-00	1-056-944-00
			1-056-954-00	1-056-964-00	1-056-974-00	1-056-984-00	1-056-994-00
M6	No. 4 Class 'H' coil kit 60 Hz	115/230 Vac	5-96-6407-05	1			
		230/460 Vac	5-96-6409-05	1			
		115 Vac	5-96-6401-05	1			
		230 Vac	5-96-6402-05	1			
		460 Vac	5-96-6404-05	1			
		575 Vac	5-96-6405-05	1			
	No. K4 Class 'H' coil kit 60 Hz	115/230 Vac	5-96-6457-05		1		
		230/460 Vac	5-96-6459-05		1		
		115 Vac	5-96-6451-05		1		
		230 Vac	5-96-6452-05		1		
		460 Vac	5-96-6454-05		1		
		575 Vac	5-96-6455-05		1		
	No. K4+ Class 'H' coil kit 60 Hz	115/230 Vac	5-96-6407-25			1	
		230/460 Vac	5-96-6409-25			1	
		115 Vac	5-96-6401-25			1	
		230 Vac	5-96-6402-25			1	
		460 Vac	5-96-6404-25			1	
		575 Vac	5-96-6405-25			1	
	No. M4+ Class 'H' coil kit 60 Hz	115/230 Vac	5-96-6457-25				1
		230/460 Vac	5-96-6459-25				1
		115 Vac	5-96-6451-25				1
		230 Vac	5-96-6452-25				1
		460 Vac	5-96-6454-25				1
		575 Vac	5-96-6455-25				1


Rexnord Industries, LLC.
Stearns Division
5150 S. International Drive
Cudahy, Wisconsin 53110
(414) 272-1100 Fax: (414) 277-4364
www.stearns.rexnord.com




M1 Electrical Release Indicator Switch

This switch is used to indicate when the brake is in a released, non-holding position. This mechanism utilizes a mechanical limit switch.

Series	List Price Adder
56,X00 & 65,300	\$450.00
81,000; 82,000; 87,X00	450.00
86,X00	900.00

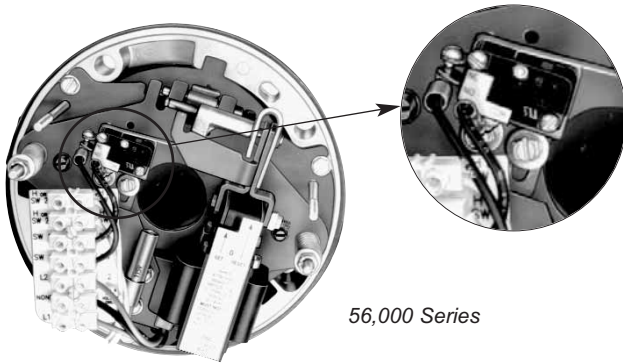

56,000 Series

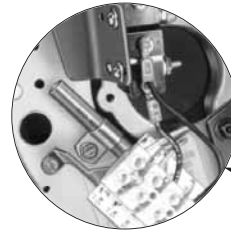

87,000 Series
(also representative of
81,000; 82,000
and 86,000 Series)




Not available on 56,800 or 87,800 Series Brakes.

M2 Electrical Release Indicator Proximity Switch

Same function as the switch in M1 above; except, M2 uses an electronic proximity sensor.

Series	List Price Adder
81,000 82,000 87,X00	\$1375.00
86,X00	2750.00

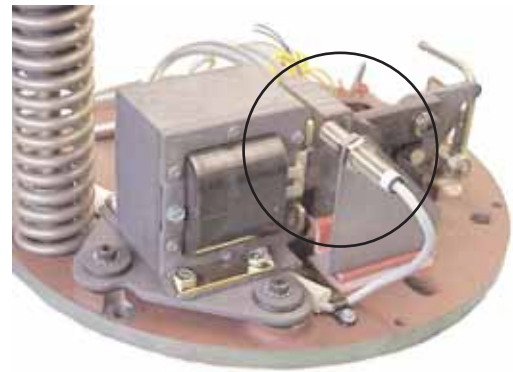

Not available on 56,800 or 87,800 Series Brakes.

M3 Brass Pressure Plate

Typically used in marine applications or in applications where the potential for sparks need to be eliminated. Brass can also be used to reduce torque.


Series	List Price Adder
56,X00	See M4
65,X00	\$250.00
81,000; 82,000	800.00
86,X00	1050.00
87,X00	600.00



M4 Brass Stationary Discs

Used with brass pressure plate (List per disc).

Series	List Price Adder
56,X00	\$250.00
65,X00	250.00
87,X00	450.00
81,000; 82,000	600.00
86,X00	750.00

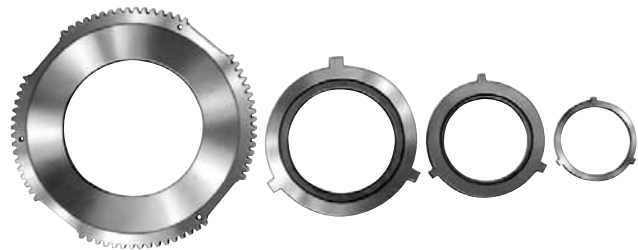

M5 Breather Drain

A drain plug is tapped into the bottom of the housing to let moisture escape. This option is only available on brakes with cast aluminum or cast iron housings.

Series	List Price Adder
56,X00	\$380.00
65,X00	500.00
81,000 82,000 86,X00 87,X00	380.00



M6 Class H Insulation

Brake is provided with an epoxy encapsulated coil, rated for NEMA Class H designation.

These Class H coils are standard on hazardous location brakes.

Series	List Price Adder
56,X00	\$145.00
87,X00	175.00
81,000 82,000	285.00
86,X00	570.00



M7 Housing Machining for Encoder/Tach Mounting

Series	Standard Machining ¹				Close Tolerance ²			Tether Mount ³	
	Bolt Circle & Register		Bolt Circle - but no Register		Bolt Circle & Register			A Single Bolt Hole	
	Open ⁴ Enclosure List Price Adder	Enclosed ⁵ List Price Adder	Open ⁴ Enclosure List Price Adder	Enclosed ⁵ List Price Adder	Open ⁴ Enclosure List Price Adder	Enclosed ⁵ List Price Adder	Maximum Thru-Shaft Dia. (inch)	Open ⁴ Enclosure List Price Adder	Enclosed ⁵ List Price Adder
56,X00 (except N/A for 56,800)	N/A	N/A	N/A	N/A	N/A	N/A		\$350	\$460
87,000 - 87,100	\$700	\$1,200	\$80	\$350	\$2,450	\$2,750	1.63	\$240	\$350
87,M00 - 87,500 - 87,600	N/A	\$1,200	N/A	\$350	N/A	\$2,750		N/A	\$350
81,000 - 82,000 ⁶	\$1,100	\$1,375	\$305	\$580	\$2,550	\$2,825	2.5	\$465	\$740
86,000	\$1,100	\$1,375	\$380	\$780	\$2,550	\$2,950		\$540	\$940

¹**Standard Machining:** The housing is machined for a thru shaft, and to allow for an encoder or tach to be mounted. This option is only available on brakes with cast aluminum or cast iron housings. Consult factory for availability.

²**Close tolerance:** The housing and endplate are assembled and dowel pinned together - then machined as a matched set for a through shaft and encoder mounting. This option is only available on brakes with cast aluminum or cast iron housings. This option is recommended for Series 81,000; 82,000; and 86,X00 due to the long distance between the motor and encoder.

³**Tether Mount:** The housing is machined for a through shaft, and a single tapped hole for a bolt to secure a tether arm. (56,X has a through hole and tach-welded nut on inside of housing, instead of a tapped hole).

⁴Referred to on the product pages in the catalog as IP23

⁵Referred to on the product pages as IP54/55 (these enclosure ratings no longer apply when the housing is machined for this modification - the customer is responsible for meeting any specific enclosure rating when assembling the encoder).

⁶M7 Modification for Series 81,000 and 82,000 will also require the M12 Modification; the side manual release.



M8 Conduit Box with Terminal Strip

A terminal strip is located inside the conduit box. It allows for easy connection and identification of lead wires.

Series	List Price Adder
All series except hazardous location (not available for the 48,100 series)	\$300.00 (IP 23) \$600.00 (IP 54)
All hazardous location brakes	\$600.00



M9 DC Coil Option

For DC voltage applications. Operates with an electronic DC switch module.

Series	List Price Adder	Additional Adder for Non-Standard Voltage
56,X00	\$ 300.00	\$ 250.00
87,X00	570.00	250.00
81,000	1050.00	250.00
82,000	1565.00	250.00
86,X00	2625.00	500.00

For standard voltage listing, see the ordering information section for the specific brake.

Not available on Hazardous Location Brakes.

M10 Nameplates

To order new brake nameplates, the serial number of the brake is required. A loose nameplate shipped from Stearns Division without being attached to a brake must have all agency markings removed (UL, CSA, etc.). In order to have a brake renameplated with the appropriate agency markings, it must be returned to Stearns Division for product verification.

List Price:	First Nameplate	\$150.00
Net Price:	Additional Mylar Nameplates	1.50
	Additional Metal Nameplates	4.00

M11 Nonstandard Hub or Keyway

For standard bore diameter and keyway specifications, see specific brake selection page. For taper bores, consult factory for pricing.

Description	List Price Adder					
	48,100	56,X00	65,X00	81,000 82,000 86,000	87,000 87,100 87,800	87,700
All Quantities and Enclosures	\$225.00	225.00	325.00	600.00	250.00	250.00

M12 Side Manual Release

Side release not available on the 1-086-000

Sheet Metal Housing (IP 23 Only)	List Price Adder
56,000; 56,400; 56,500	\$50.00
87,000; 87,100	\$50.00
Cast Iron Housing	List Price Adder
87,000 IP 23	\$385.00 includes cast iron housing adder of \$110
87,000 IP 54	\$275.00
81,000 82,000	\$350.00



M13 Space Heater (115 or 230 Volt Only)

A space heater cartridge is used to prevent moisture build-up inside the brake housing.

Series	Wattage	List Price Adder
56,X00*	15	\$210.00
81,000; 82,000; 86,X00	50 and 75	275.00
87,X00*	25 to 30	225.00
Hazardous Duty Brakes	25 to 50	750.00

*Not available on 56,800 or 87,800 Series Brakes



56,000 Series



87,000 Series (also representative of 81,000; 82,000 & 86,000 Series)

M14 Special Paint

Based on a zinc chromate finish, both inside and outside of brake. Consult factory for actual application.

Series	List Price Adder
56,X00	\$210.00
65,X00	300.00
81,000, 82,000, 86,X00	550.00
87,000	525.00



M15 Stainless Steel Self-Adjust Mechanism

For severe duty applications. This option includes a stainless steel pinion and plated wrap spring in the auto-adjust mechanism. It is only available on the 81,000; 82,000; 86,000 and 87,000 Series Brakes

Series	List Price Adder
81,000; 82,000; 87,000	\$350.00
86,X00	\$700.00



M16 Stainless Steel Hardware


All external hardware is provided in stainless steel.

Series	List Price Adder
48,100	\$125.00
56,X00, 87,X00	\$150.00
81,000, 82,000 86,000	\$275.00

M17 Terminal Strip

A terminal strip is located in the inside of the brake, on the support plate. It allows for easy connection and identification of lead wires.

Series	List Price Adder
ALL	\$150.00

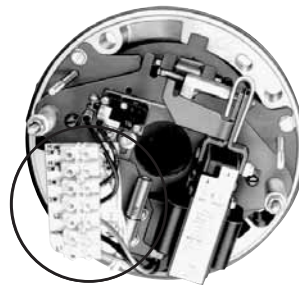

56,000 Series



87,000 Series (also representative of 81,000; 82,000 & 86,000 Series)

M18 Thermostat (thermal switch)

This switch is used to indicate when a brake is overheating. Thermostats are standard in 8X,300 and 65,X00 Series. This option is for NON-UL brakes only.

Series	Switch Operation Specifications	List Price Adder
87,X00	Normally Closed: Opens at 295°F, Closes at 255°F	\$400.00
81,000, 82,000 86,X00	Normally Closed: Opens at 210°F, Closes at 180°F	400.00
56,X00	Normally Closed: Opens at 195°F, Closes at 175°F	400.00



M19 Through-Shaft Enclosure

This configuration allows for the motor shaft to extend beyond the housing of the brake.

Series	List Price Adder
56,000, 56,400	N/C
56,100, 56,200	\$110.00
56,600	110.00
81,000, 82,000	225.00
86,000	300.00
87,000, 87,100 sheet metal	N/C*
87,000, 87,100 with cast iron housing	225.00 (adder for cast iron housing is \$210.00 additional)

*Up to 1-5/16".
Above 1-5/16", add \$80.00.



M20 Through-Shaft Cast Iron Enclosure with Lip Seal

This configuration allows the motor shaft to extend beyond the housing of the brake with a bushing to use with a housing lip seal.

Series	List Price Adder
56,100, 56,200 56,600	\$220.00
81,000, 82,000	500.00
86,000	700.00
87,000, 87,100	300.00




M21 Vertical Mounting for 56,000 Series & 65,300 Series

The 56,000 20 and 25 lb-ft Series Brakes are shipped with spring kits. Vertical modification at 15° from horizontal. Read installation and service instructions for details on its use.

Description	List Price Adder
Factory assembly for three disc configuration.	\$20.00

3 Friction Disc Brake

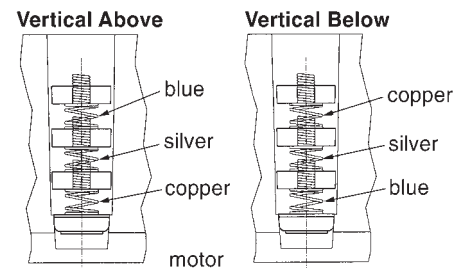

Example of 56,000 Series spring requirements for vertical above and below mounting.

M23 Vertical Mounting for 87,X00 Series

For factory modification to vertical above or below application.
Vertical modification at 15° from horizontal.

Series 87,000 & 87,100


Torque Value (lb-ft)	IP 23 & IP 54 steel hsg Above	IP 23 & IP 54 steel hsg Below	IP 54/55 cast iron Above	IP 54/55 cast iron Below
6, 10, 15, 25 & 35	\$95.00	no mod req'd	\$370.00*	no mod req'd
50 & 75	\$105.00	\$105.00	\$380.00*	\$105.00
105	\$135.00	\$135.00	\$410.00*	\$135.00

*Includes adder for side manual release

Series 87,300; 87,800; 87,700

Torque Value (lb-ft)	Vertical Above	Vertical Below
6, 10, 15, 25 & 35	\$95.00	no mod req'd
50 & 75	\$105.00	\$105.00
105	\$135.00	\$135.00

3 Friction Disc Brake

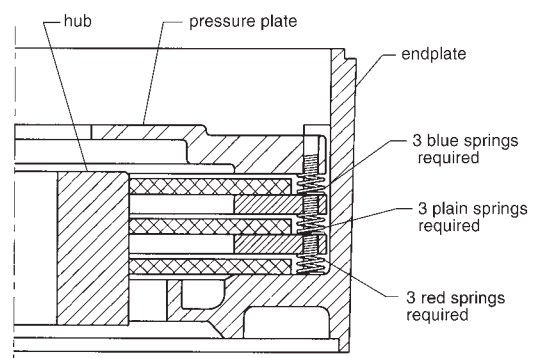


Example of 87,000 Series spring requirements for vertical above mounting.

M24 Vertical Mounting for 81,000; 82,000 and 86,000 Series

These brakes require factory modifications for vertical applications. Vertical modification at 15° from horizontal.

Series	Torque Value (lb-ft)	IP 23 Above & Below	IP 54 Above	IP 54 Below
81,000 & 82,X00	125 & 175	\$250.00	\$575.00*	\$250.00
81,000 & 82,X00	230	300.00	650.00*	300.00
82,X00	330	300.00	650.00*	300.00
82,X00	440	500.00	850.00*	500.00
86,000	500 & 750	750.00	750.00*	750.00

*Includes adder for side manual release

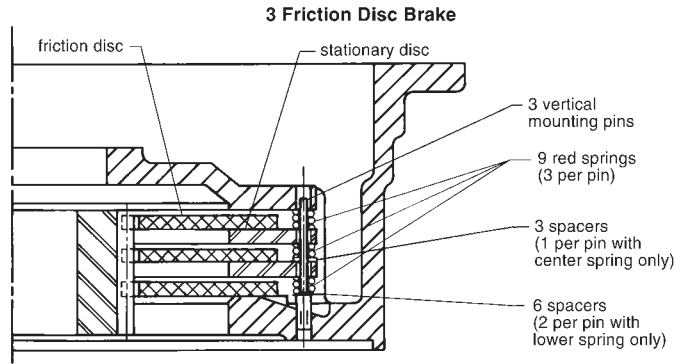


Example of 81,000 Series pin, spring and spacer requirements for vertical above mounting.

M25 Voltage Non-Standard (AC)

For standard voltage listing, see the ordering information section for the specific brake.

Series	List Price Adder
48,100	\$165.00
65,X00	165.00
56,000	165.00
81,000; 82,X00	200.00
86,X00	400.00
87,X00	175.00

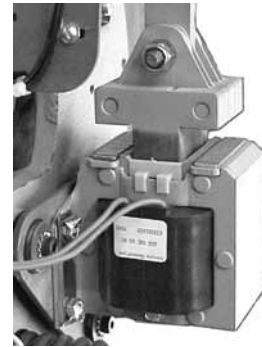

M27 Wear Indicator (Friction Disc) Switch with Leads


A mechanical switch is installed to indicate when the friction disc requires replacement.

Series	List Price Adder
81,000; 82,X00	\$225.00
86,000	225.00
87,X00*	225.00

*N/A on 87,800



87,000 Assembly

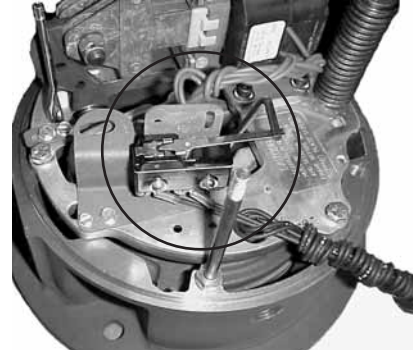

87,000 Assembly

M29 Special Shaft-Coupler Brake and Foot Mount Brake

Any non-standard input or output shaft on a 56,700, 87,200 or 87,700 Series Brake.

Series	List Price Adder
56,700	\$325.00
87,200; 87,700	325.00



M30 Taper-Lock Hubs

For use in severe duty applications and reversing application to secure the brake hub to the motor shaft.

Series	Series	List Price Adder
87,000; 87,100 IP 23 only	10 to 35 lb-ft	\$200.00
	50 to 75 lb-ft	225.00
	105 lb-ft	250.00
81,000	125 & 175 lb-ft	225.00
	230 lb-ft	325.00
82,000	125 & 175 lb-ft	375.00
	230 & 330 lb-ft	550.00
	440 lb-ft	675.00



M31 Special Length Lead Wires

Up to 5'	Series	List Price Adder
	All	\$65.00

Over 5'	Series	List Price Adder
	All	\$130.00

M32 Non-Maintained (Deadman) Manual Release

The brake is mechanically released while the release is pulled into a release position. Once released, the brake sets.

Series*	List Price Adder
56,200, 56,700, 56,800 & 56,900	\$110.00
56,000, 56,400 & 56,500	185.00
81,000; 82,000 & 87,000	125.00
86,000	250.00

*N/A on 56,300.
Standard on 56,100 and 56,600.



M33 Metric Machining Including Cast Iron Endplate

Stearns SAB's can be used with metric motor frames. The following table indicates standard frame capabilities for an IEC B14 Face mount.

Series	IEC Frame Sizes	List Price Adder
56,200; 56,400; 56,600 & 56,900	B14 flange in sizes 80; 90 & 100 B5 flange in sizes D63 & D71	\$340.00
56,500	B14 flange in sizes 112; 132 & 160 B5 flange in sizes D71; D80; D90; D100 & D112	\$340.00
87,000	B14 flange in sizes 112; 132 & 160 B5 flange in sizes D71; D80; D90; D100 & D112	\$340.00

M34 Derating of Torque

Stearns industrial SAB's can be custom built to meet your specific torque requirements.

Series	List Price Adder	Derate To
56,500	\$315.00	6 lb-ft
87,100	315.00	20 or 30 lb-ft
81,000 & 82,000	460.00	To be approved with application engineering

M35 Special Internal Lead Wire Hole with Bushing

Any non-standard, internal lead wire hole in the endplate.

Series	List Price Adder
All brakes except hazardous location brakes	\$175.00



M36 Housing Split

SAB's can be provided with a split housing.

Series	List Price Adder
81,000; 82,000 & 86,000	\$725.00
81,000; 82,000 & 86,000 gasketed	\$1,000.00
87,000; 87,100 sheet metal	\$200.00
87,000; 87,100 cast iron gasketed	\$250.00



M37 Internal Release

An internal manual release requires that the housing be removed before the brake can be released by hand.

**N/A for hazardous location brakes*

Series	List Price Adder
87,0XX; 81,0XX; 82,0XX; 86,0XX	N/C

M38 Motor Gasket

The brake is provided with an additional C-Face gasket to be placed between the brake and motor.

Series*	List Price Adder
81,000; 82,000; 86,000	\$100.00
56,X00 & 87,000	75.00

**N/A for hazardous location brakes*

M39 Corrosion-Resistant Endplate

Rust preventative treatment applied to brake endplate.

Series	List Price Adder
56,200, 56,400, 56,500, 56,800 & 65,300	\$425.00
81,000; 82,X00 & 86,000	575.00
87,X00	475.00



M40 Special Milling: Flat Bottom on Housing & Endplate

This modification is provided in the event the flange between the endplate and housing interfere with the mounting configuration.


Series	List Price Adder
81,000; 82,000 & 86,000	\$650.00



M41 Brass Nameplate with Special Engraving

Brass nameplates offer greater durability in outdoor applications.

Series	List Price Adder
81,000; 82,000 & 86,000	\$75.00

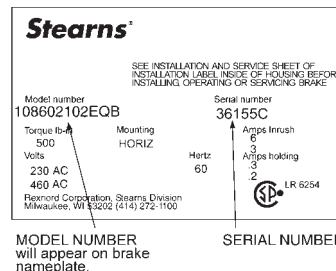

M42 Stainless Splined Hub

Stainless steel splined hubs are available for extreme outdoor applications, to prevent corrosion on the disc and hub interface.

Series	List Price Adder
81,000; 82,000 & 86,000	\$1060.00
87,000	800.00



M43 Viton® Gasket

Gaskets and o-rings in brakes can be provided in Viton® (fluorocarbon) material, in place of the standard neoprene. However, the V-wiper steel-backed seals that are used on pull rod manual releases are not available in Viton® and remain as neoprene.

Viton® is a registered trademark name of DuPont.

Series	List Price Adder
81,000; 82,000; 86,000	\$1,060.00
87,000*	\$1,125.00
56,000	\$950.00

*Viton® gaskets and o-rings are standard for 87,X00 series, except for hazardous location brakes where Viton® seals are N/A.


**Except series 56,200; 56,700; & 56,900 - where Viton gaskets are standard.

M44 Special Friction Disc (per Disc)

Any non-standard friction disc in a brake.
Cost is per disc.

Non-standard discs include: hi-inertia friction discs and heavy duty friction discs. Does not include carrier ring friction discs (see M46 and M47).

Series	List Price Adder
87,000	\$50.00
56,000	45.00

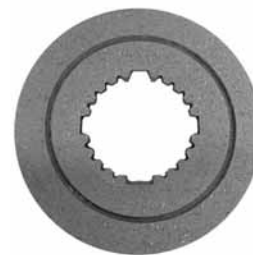

M45 Splined Hub and Friction Disc

Standard on most models. Used for severe duty and reversing applications.

Series	List Price Adder
87,300	No Charge

Series	Torque (lb-ft)	List Price Adder
87,X00*	6-35 lb-ft	190.00
	50 & 75 lb-ft	290.00
	105 lb-ft	390.00

* Spline is standard on this series.
Adder is for pre-revision 24-tooth spline.

M46 Carrier Ring Friction Disc

The friction material is bonded to a steel or zinc/aluminum alloy ring.
This is used for severe duty applications and applications where people are being moved.

Series	Carrier ring material	List Price Adder (per disc)
Horizontal Use Only		
56,X00* (not available on 56,800 series)	Aluminum	\$420.00
81,000	Steel	700.00
82,000	Steel	700.00
Horizontal or Vertical Use		
87,X00** (not available on 87,300 or 87,800 series)	Zinc aluminum alloy	550.00



M47 Carrier Ring Friction Disc (Bronze)

The friction material is bonded to a bronze ring.
This is used for severe duty applications and applications where people are being moved.

Horizontal applications only

** Only available with pre-revision design, 24-tooth splined hub, which is included in this price


Series	List Price Adder (per disc)
81,000	N/A
82,000	\$1050.00
86,000	1250.00
87,X00**	
6-35 lb-ft	925.00
50 & 75 lb-ft	1850.00
105 lb-ft	2775.00



M48 1,08X,000 Series Manual Adjust Mechanism

Excellent for holding applications when disc wear is not a concern. (Not available on hazardous location brakes.)


Series	List Price Adder
87,000	Subtract \$50 List
81,000 82,000 86,000	No Charge

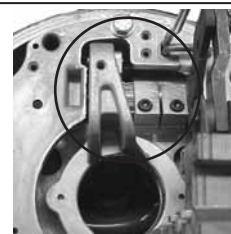

M60 Encoders

Internally mounted encoders are available in some series brakes, including some hazardous location brakes. See pages 49-50 for series availability and additional information.

Maximum Encoder Diameter (in.)	
1-056	N/A
1-087-E00	2.0"
1-081 & 1-082	2.5"
1-086	3.5"

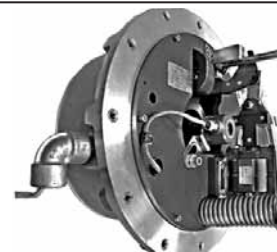

Technical Data


SAB Motor Frame Adapter Dimensions

Selection

To select an adapter for a specific brake, refer to the *Motor Frame Adapter Tables* as shown in the brake series sections of this Catalog. After selecting the adapter stock number, refer to the Tables below for dimensions.

All adapters are constructed with an opening for internal lead wire connection, corresponding to the NEMA standard location for the motor frame size.

Screws for mounting adapter to motor must be provided by customer. Socket head cap screws are supplied for mounting brake to adapter.

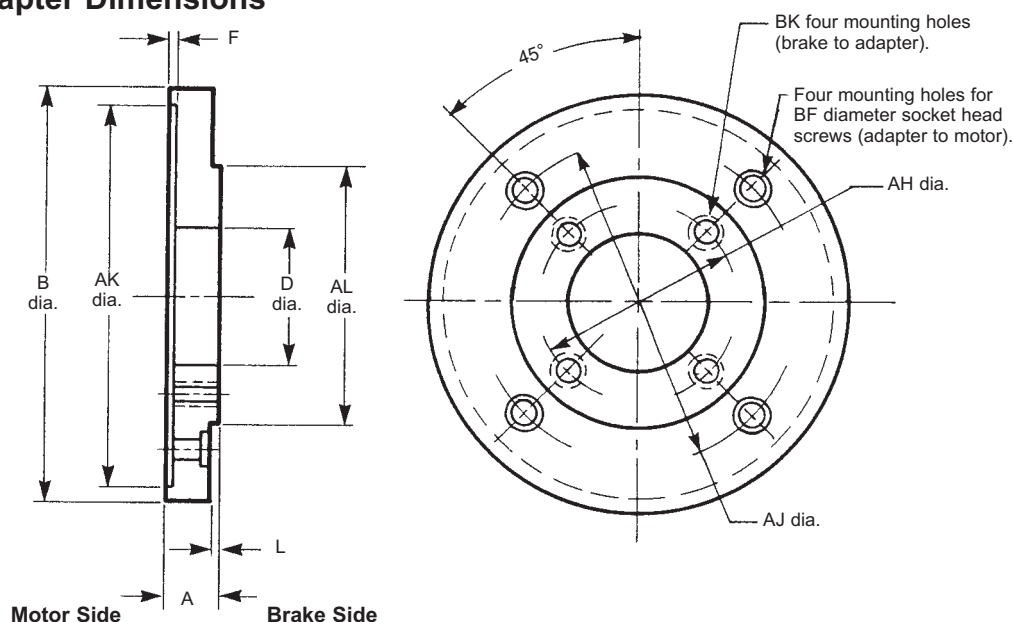


Dimensions for estimating only. For installation purposes, request certified prints.

Brake Series	Torque (lb-ft)	Adapter Stock Number	Dimensions in Inches (Dimensions in Millimeters)												Add'l Shaft Length Req'd	List Price	Discount Symbol
			A	AH	AJ	AK	AL	B	BF	BK Hole	D	F	L				
56,000	1.5 - 6	5-55-5041-00	1.25 (31.75)	5.88 (149.22)	7.25 (184.15)	8.500 (215.900)	4.497 (114.325)	9.00 (228.60)	.50 (12.70)	3/8 - 16 x 1/2 deep	4.00 (101.60)	.19 (4.76)	.12 (3.18)	.94 (23.88)	\$700	B4	
65,300*		5-55-5046-00															
56,000 and 56,800*	10 - 25	5-55-5043-00															
87,000 and 87,800*	6 - 105	5-55-7046-00	1.06 (26.99)	7.25 (184.15)	11.00 (279.40)	12.501 (317.525)	8.499 (215.875)	13.00 (330.20)	.62 (15.88)	1/2 - 13 through	4.12 (104.78)	.19 (4.76)	.38 (9.52)	.87 (22.10)	\$875	B2	
87,300		5-55-7054-00															
87,000 and 87,800*	6 - 105	5-55-7055-00	1.00 (25.40)			9.00 (228.60)	10.500 (266.700)	8.499 (215.875)	11.00 (279.40)		**				6.25 (158.75)	.25 (6.35)	.81 (20.57)
87,300*		5-55-7045-00															
87,000, 87,800* and 87,300*	6 - 105	5-55-7043-00	.75 (19.05)	7.25 (184.15)	5.88 (149.35)					4.502 (114.35)		8.499 (215.875)	8.75 (222.25)	.62 (15.75)			
81,000	125 - 130	5-55-2045-00	1.06 (26.99)	11.00 (279.40)	14.00 (355.60)	16.002 (406.451)	12.499 (317.475)	16.50 (419.10)	.62 (15.88)	5/8 - 11 through	9.75 (247.65)	.19 (4.76)	.25 (6.35)	.87 (22.10)	\$1,875	C1	
81,000	125 - 230	5-55-2041-00	1.12 (28.58)	11.00 (279.40)	7.25 (184.15)	8.500 (215.900)	12.499 (317.475)	12.496 (317.398)	.50 (12.70)	5/8 -11 through	6.00 (152.40)	.19 (4.76)	---	.93 (23.62)	\$1,325	C1	
81,000		5-55-2043-00				8.502 (215.951)	12.496 (317.398)							.93 (23.62)			
82,000 and 82,300*	125 - 550	5-55-2046-00	1.94 (49.21)			11.00 (279.40)	7.25 (184.15)	16.002 (406.451)	12.499 (317.398)		16.50 (419.10)			.62 (15.88)	5/8 - 11 x 1 deep	9.50 (241.30)	.19 (4.76)
82,000 and 82,300*		5-55-2042-00	1.38 (34.92)	8.500 (215.900)	12.496 (317.475)			13.25 (336.55)	.50 (12.70)	5/8 -11 through	6.00 (152.40)	1.19 (30.23)					
82,000 and 82,300*		5-55-2044	1.38 (34.92)	8.502 (215.951)	12.496 (317.398)			13.25 (336.55)			7.75 (196.85)	1.19 (30.23)	\$2,075	C1			
86,000	500 - 1000	5-55-6041-00	1.56 (39.69)	14.00 (355.60)	11.00 (279.40)	12.500 (317.500)	16.000 (406.400)	16.19 (411.16)	.62 (15.88)	5/8 - 11 x 3/4 deep	8.62 (219.08)	.19 (4.76)	.25 (6.35)	1.37 (34.80)	\$2,800	C1	

* 1/2-13 flat head screws are supplied with adapter.

** When adding an adapter to a hazardous location brake, refer to the "mounting requirements" on the product page for the recommended brake series for accommodating adapters.

Foot Mounting Kits

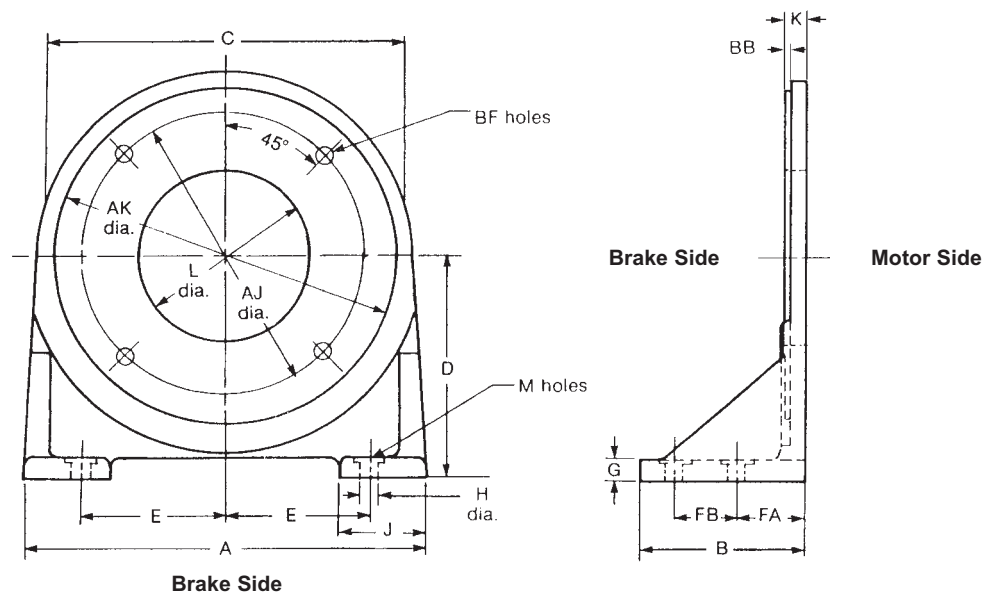

Kits include the foot mounting bracket and hardware to fit the BF mounting holes.

Dimensions for estimating only. For installation purposes, request certified prints.


Brake Series	Torque	Foot Mounting Kit Number	Dimensions in Inches (Dimensions in Millimeters)																		Wgt.	List Price	Discount Symbol
			A	AJ	AK	B	BB	BF		C	D	E	FA	FB	G	H	J	K	L	M			
								No.	Thd.											No.			
56,000	1.5-25	5-55-5023-00	7.00 (177.80)	5.88 (149.22)	$\frac{4.499}{4.498}$ (114.275) (114.249)	2.38 (60.32)	.12 (3.18)	2	3/8-16	6.50 (165.10)	3.50 (88.90)	2.88 (73.02)	1.50 (38.10)	—	.38 (9.52)	.41 (10.32)	1.50 (38.10)	.50 (12.70)	2.50 (63.50)	2	4.5	\$500.00	B4
87,000	6-105	5-55-7021-00	8.62 (219.08)	7.25 (184.15)	$\frac{8.499}{8.498}$ (215.875) (215.849)	3.00 (76.20)	.25 (6.35)	4	1/2-13	8.62 (218.95)	5.00 (127.00)	3.56 (90.49)	2.00 (50.80)	—	.38 (9.52)	.53 (13.49)	1.62 (41.28)	.56 (14.29)	5.75 (146.05)	2	7	575.00	B2
81,000	125-230	5-55-2022-00	15.50 (393.70)	11.00 (279.40)	$\frac{12.499}{12.498}$	7.00 (177.80)	.25 (6.35)	4	5/8-11	13.25 (336.55)	8.50 (215.90)	6.88 (174.62)	2.00 (50.80)	4.00 (101.60)	.62 (15.88)	.69 (17.46)	3.00 (76.20)	.88 (22.22)	9.00 (228.60)	4	40	1,325.00	C1
82,000	125-550				(317.475) (317.449)																		
86,000	500-1000	5-55-6021-00	18.25 (463.55)	14.00 (355.60)	$\frac{16.000}{15.995}$ (406.400) (406.273)	8.00 (203.20)	.22 (5.56)	4	5/8-11	17.00 (431.80)	10.88 (276.22)	6.38 (161.92)	3.38 (85.72)	3.00 (76.20)	1.00 (25.40)	.81 (20.64)	4.12 (104.78)	1.22 (30.96)	8.50 (215.90)	4	75	3,900.00	C1

Dimensions for C-Face Brake Motor Systems

Brakes Externally Wired to Motor

C-face motor with double shaft extension.

Stearns Disc Brakes are designed to mount on standard C-face motors having the same dimensions and tolerances on the accessory end as on the drive end. They also mount on foot mounting brackets and machine mounting faces having the same mounting dimensions and tolerances. Some motor accessory end C-face may differ from the drive end.

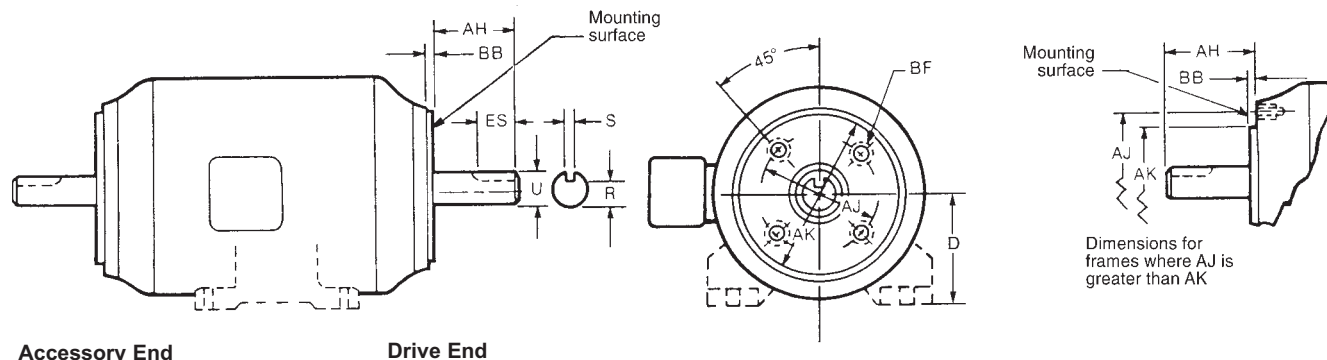

Accessory End

Drive End

Drive End Dimensions (Inches)

Frame Designation	AJ	AK	BB Min.	BF Hole			U	AH	Keyseat			Base to Centerline D
				Number	Tap Size	Bolt Penetration Allowance			R	ES Min.	S	
42C	3.750	3.000	0.16	4	1/4-20	...	0.375	1.312	0.328	...	flat	2.62
48C	3.750	3.000	0.16	4	1/4-20	...	0.500	1.69	0.453	...	flat	3.00
56C	5.875	4.500	0.16	4	3/8-16	...	0.625	2.06	0.517	1.41	0.188	3.50
143TC and 145TC	5.875	4.500	0.16	4	3/8-16	0.56	0.875	2.12	0.771	1.41	0.188	3.50
182TC and 184TC	7.250	8.500	0.25	4	1/2-13	0.75	1.125	2.62	0.986	1.78	0.250	4.50
182TCH and 184TCH	5.875	4.500	0.16	4	3/8-16	0.56	1.125	2.62	0.986	1.78	0.250	4.50
213TC and 215TC	7.250	8.500	0.25	4	1/2-13	0.75	1.375	3.12	1.201	2.41	0.312	5.25
254TC and 256TC	7.250	8.500	0.25	4	1/2-13	0.75	1.625	3.75	1.416	2.91	0.375	6.25
284TC and 286TC	9.000	10.500	0.25	4	1/2-13	0.75	1.875	4.38	1.591	3.28	0.500	7.00
284TSC and 286TSC	9.000	10.500	0.25	4	1/2-13	0.75	1.625	3.00	1.416	1.91	0.375	7.00
324TC and 326TC	11.000	12.500	0.25	4	5/8-11	0.94	2.125	5.00	1.845	3.91	0.500	8.00
324TSC and 326TSC	11.000	12.500	0.25	4	5/8-11	0.94	1.875	3.50	1.591	2.03	0.500	8.00
364TC and 365TC	11.000	12.500	0.25	8	5/8-11	0.94	2.375	5.62	2.021	4.28	0.625	9.00
364TSC and 365TSC	11.000	12.500	0.25	8	5/8-11	0.94	1.875	3.50	1.591	2.03	0.500	9.00
404TC and 405TC	11.000	12.500	0.25	8	5/8-11	0.94	2.875	7.00	2.450	5.65	0.750	10.00
404TSC and 405TSC	11.000	12.500	0.25	8	5/8-11	0.94	2.125	4.00	1.845	2.78	0.500	10.00
444TC and 445TC	14.000	16.000	0.25	8	5/8-11	0.94	3.375	8.25	2.880	6.91	0.875	11.00
444TSC and 445TSC	14.000	16.000	0.25	8	5/8-11	0.94	2.375	4.50	2.021	3.03	0.625	11.00
500 Frame Series	14.500	16.500	0.25	4	5/8-11	0.94	12.50

Tolerances (Inches)

AK Dimension, Face Runout, Permissible Eccentricity of Mounting Rabbet

AK Dimension	Tolerance on AK Dimension		Maximum Face Runout	Maximum Permissible Eccentricity of Mounting Rabbet
	Plus	Minus		
Less than 12	0.000	0.003	0.004	0.004
12 and Larger	0.000	0.005	0.007	0.007

Shaft Extension Diameters

Shaft Diameter	Tolerances	
	Plus	Minus
0.2500 to 1.5000, inclusive	0.000	0.0005
Over 1.5000 to 6.500, inclusive	0.000	0.001

Width of Shaft Extension Keyseats

Width of Keyseat	Tolerances	
	Plus	Minus
0.188 to 0.750, inclusive	0.002	0.000
Over 0.750 to 1.500, inclusive	0.003	0.000

Shaft Runout


Shaft Diameter	Maximum Permissible Shaft Runout
0.3750 to 1.625, inclusive	0.002
Over 1.625 to 6.500, inclusive	0.003

SOURCE: ANSI/NEMA Standards Publication No. MG 1-1987; Part 4 and Part 11.

Dimensions for C-Face AC Brake Motor System (cont.)

Accessory End

FC face mounting for accessories, including brakes, on the end opposite the drive end of motor. Some motor accessory end C-face may differ from the drive end. Confirm shaft diameter and bolt circle before ordering.

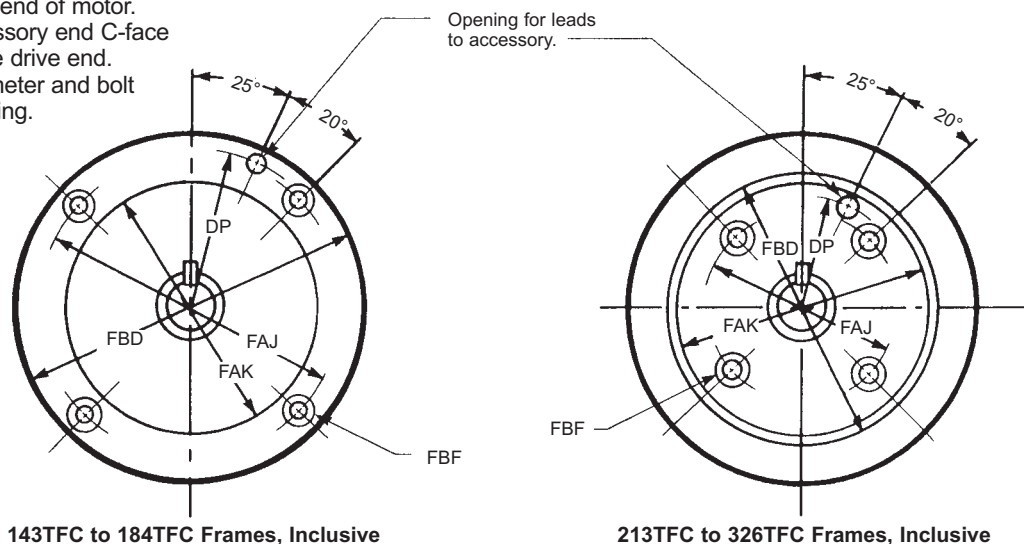

Dimensions (Inches)

Frame Designation	FAJ	FAK	FBD Max.	FBF Hole			Hole for Accessory Leads	
				Number	Tap Size	Bolt Penetration Allowance	DP	Diameter
143TFC and 145TFC	5.875	4.500	6.50	4	3/8-16	0.56	2.81	0.41
182TFC and 184TFC	5.875	4.500	6.50	4	3/8-16	0.56	2.81	0.41
213TFC and 215TFC	7.250	8.500	9.00	4	1/2-13	0.75	3.81	0.62
254TFC and 256TFC	7.250	8.500	10.00	4	1/2-13	0.75	3.81	0.62
284TFC and 286TFC	9.000	10.500	11.25	4	1/2-13	0.75	4.50	0.62
324TFC and 326TFC	11.000	12.500	14.00	4	5/8-11	0.94	5.25	0.62

NOTE: Standards have not been developed for the shaft extension diameter and length, and keyseat dimensions.

Tolerances* (Inches)

FAK Dimension, Face Runout, Permissible Eccentricity of Mounting Rabbet

FAK Dimension	Tolerance on FAK Dimension		Maximum Face Runout	Maximum Permissible Eccentricity of Mounting Rabbet
	Plus	Minus		
Less than 12	0.000	0.003	0.004	0.004
12 and Larger	0.000	0.005	0.007	0.007

* Tolerance requirement on 56,X00 and 87,000 Series Brake kits is .015 T.I.R. (total indicated runout shaft to motor register face).

Shaft Runout

Shaft Diameter	Maximum Permissible Shaft Runout
0.3750 to 1.625, inclusive	0.002
Over 1.625 to 6.500, inclusive	0.003

SOURCE: ANSI/NEMA Standards Publication No. MG 1-1987; Part 4 and Part 11.

Stearns Recommended Minimum Shaft Diameter by Torque

Minimum recommended shaft size considers a keyed C1045 steel shaft under dynamic use in a typical spring set brake application.

Torque ft-lb	Minimum Shaft (inches)
0.50	0.250
0.75	0.250
1.5	0.375
3	0.500
6	0.500
10	0.625
15	0.750
25	0.875
35	1.000
50	1.125

Torque ft-lb	Minimum Shaft (inches)
75	1.250
105	1.375
125	1.375
175	1.625
230	1.750
330	2.000
440	2.125
500	2.375
750	2.500
1000	2.750


Torque Nm	Minimum Shaft (mm)
4 Nm	ø10 mm
8 Nm	ø13 mm
16 Nm	ø16 mm
32 Nm	ø20 mm
60 Nm	ø25 mm
80 Nm	ø28 mm
150 Nm	ø34 mm
240 Nm	ø39 mm
400 Nm	ø47 mm

Set and Release Times

The models listed below were tested for typical set and release times. Times listed below are defined as follows:

T1 = Total set time to 80% of rated static torque T2 = Release time, measured as the time from when the power is applied to the brake to the time that the solenoid plunger or armature is fully seated.

NOTE: Times will vary with the motor used, and brakes tested with factory-set air gap. The times shown should be used as a guide only.

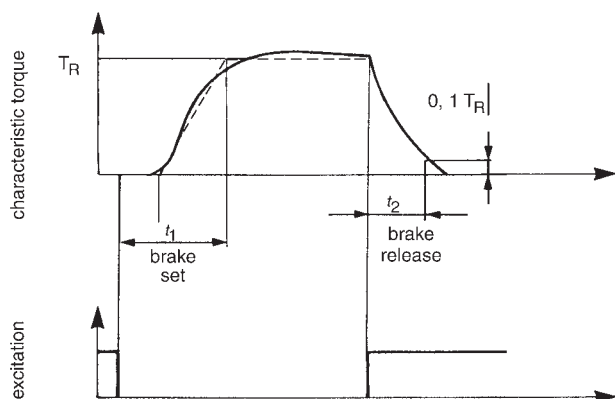

SAB T1/T2 Time in Milliseconds

Series	Static Torque lb-ft	Coil Size	T1 AC	T2 AC
56,000	1 1/2 – 25	K4, K4, K4+, M4+	25	14
87,000	10,15, 25,50	5 & 6	42	20
87,000	35,75,105	8	48	20
81,000 82,000	All	9	56	27

Brake and motor are switched separately.
All brakes tested in horizontal position.
Coil is energized for >24 hours before testing.
Ambient temperature 70°F at time of test.

AAB Series 310/311/320/321 Times in Milliseconds

Series	310 DC Side Switching					
Size	1.79	2.0	2.87	3.35	4.25	5.0
T1	3	6	9	14	13	22
T2	20	43	48	110	120	195
Series	311 DC Side Switching					
Size	3.38	4.75	5.0			
T1	43	48	96			
T2	12	74	35			
Series	320 DC Side Switching					
Size	1.2	1.8	2.0	2.8		
T1	14	43	16	27		
T2	24	26	35	34		
Series	320 Full wave rectifier/AC Side Switching					
Size	1.2	1.8	2.0	2.8		
T1	31	97	52	78		
T2	27	29	40	42		
Series	321 DC Side Switching			321 AC Side Switching		
Size	1.2	1.8	2.8	1.2	1.8	2.8
T1	13	16	20	45	77	131
T2	18	27	49	16	25	26

AAB Series 333 Times in Milliseconds

Size	Applied Voltage/Type of Switching	T1	T2
72	DC side switching	23	35
	230 Vac/ac side switching/full wave	103	39
	460 Vac/ac side switching/half wave	98	34
90	DC side switching	19	73
	230 Vac/ac side switching/full wave	113	72
	460 Vac/ac side switching/half wave	114	73
	230 Vac connected across motor full wave	357	72
112	230 Vac connected across motor /quickset	42	72
	DC side switching	155	39
	230 Vac/ac side switching/full wave	547	43
	460 Vac/ac side switching/half wave	501	54
132	DC side switching	119	100
	230 Vac/ac side switching/full wave	833	101
	460 Vac/ac side switching/half wave	803	106
145	DC side switching	185	186
	230 Vac/ac side switching/full wave	999	192
	460 Vac/ac side switching/half wave	1007	209
	230 Vac connected across motor full wave	1689	192
	230 Vac connected across motor /quickset	368	192
	460 Vac/ac side switching/half wave/With air gap shim	629	223
170	DC side switching	129	163
	230 Vac/ac side switching/full wave	1130	174
	460 Vac/ac side switching/half wave	1140	175
196	DC side switching	96	263
	230 Vac/ac side switching/full wave	920	264
	460 Vac/ac side switching/half wave	957	274
230	DC side switching	131	264
	230 Vac/ac side switching/full wave	1299	236
	460 Vac/ac side switching/half wave	1303	276
	Tor-Ac 230 Vac/ac side switching/full wave	169	295
	Tor-Ac 230 Vac/ac side switching/full wave/With air gap shim	122	327
	230 Vac connected across motor quickset/quickrelease/with air gap shim	122	145
278	DC side switching	182	388
	230 Vac/ac side switching/full wave	1807	389
	460 Vac/ac side switching/half wave	1689	366

Conversions

English-Metric Conversion Factors

Multiply the base unit by the factor shown to obtain the desired conversion.

Measurement	Base Unit	Factor	Conversion
Length	inch, in (millimeter, mm)	25.4 .03937	(millimeter, mm) inch, in
Torque	pound-feet, lb-ft (newton-meter, Nm) pound-inch, lb-in (newton-meter, Nm) ounce-inch, oz-in (newton-meter, Nm)	1.355818 .73756 .113 8.85 .007062 141.611	(newton-meter, Nm) pound-feet, lb-ft (newton-meter, Nm) pound-inch, lb-in (newton-meter, Nm) ounce-inch, oz-in
Moment of Inertia	pound-feet squared, lb-ft ² (kilogram-meter squared, kgm ²)	.042 23.81	(kilogram-meter squared, kgm ²) pound-feet squared, lb-ft ²
Kinetic Energy	foot-pound, ft-lb (joule, J)	1.355818 .73756	(joule, J) foot-pound, ft-lb
Weight	pound, lb (kilogram, kg)	.453592 2.20462	(kilogram, kg) pound, lb
Horsepower (English)	horsepower, hp (kilowatt, kW)	.7457 1.341	(kilowatt, Kw) horsepower, hp
Thermal Capacity	horsepower-seconds per minute, hp-sec/min (watts, W)	12.42854 .08046	(watts W) horsepower-seconds per minute, hp-sec/min
Temperature	degrees Fahrenheit, °F (degrees Celsius, °C)	(°F – 32) x ⁵ / ₉ (°C x ⁹ / ₅) + 32	(degrees Celsius, °C) degrees Fahrenheit, °F

English-English Conversion Factors for Thermal Capacity

Base Unit	Multiply by	To Obtain
horsepower	60.0	hp-sec/min
ft-lb/sec	.109	hp-sec/min
ft-lb/min	.0018	hp-sec/min
in-lb/sec	.009	hp-sec/min
in-lb/min	.00015	hp-sec/min

Decimal Equivalents of Fractions

Decimal Equivalent (Inches)		Fraction (Inches)
2-Place	3-Place	
.02	.016	1/64
.03	.031	1/32
.05	.047	3/64
.06	.062	1/16
.08	.078	5/64
.09	.094	3/32
.11	.109	7/64
.12	.125	1/8
.14	.141	9/64
.16	.156	5/32
.17	.172	11/64
.19	.188	3/16
.20	.203	13/64
.22	.219	7/32
.23	.234	15/64
.25	.250	1/4
.27	.266	17/64
.28	.281	9/32
.30	.297	19/64
.31	.312	5/16
.33	.328	21/64
.34	.344	11/32
.36	.359	23/64
.38	.375	3/8

Decimal Equivalent (Inches)		Fraction (Inches)
2-Place	3-Place	
.39	.391	25/64
.41	.406	13/32
.42	.422	27/64
.44	.438	7/16
.45	.453	29/64
.47	.469	15/32
.48	.484	31/64
.50	.500	1/2
.52	.516	33/64
.53	.531	17/32
.55	.547	35/64
.56	.562	9/16
.58	.578	37/64
.59	.594	19/32
.61	.609	39/64
.62	.625	5/8
.64	.641	41/64
.66	.656	21/32
.67	.672	43/64
.69	.688	11/16
.70	.703	45/64
.72	.719	23/32
.73	.734	47/64
.75	.750	3/4

Decimal Equivalent (Inches)		Fraction (Inches)
2-Place	3-Place	
.77	.766	49/64
.78	.781	25/32
.80	.797	51/64
.81	.812	13/16
.83	.828	53/64
.84	.844	27/32
.86	.859	55/64
.88	.875	7/8
.89	.891	57/64
.91	.906	29/32
.92	.922	59/64
.94	.938	15/16
.95	.958	61/64
.97	.969	31/32
.98	.984	63/64
1.00	1.000	1

Application Engineering

Introduction

Information and guidelines provided in the application section are intended for general selection and application of spring set brakes. Unusual operating environments, loading or other undefined factors may affect the proper application of the product. Stearns application services are available to assist in proper selection or to review applications where the specifier may have questions.

A spring set brake is used to stop and hold a rotating shaft. Generally the brake is mounted to an electric motor, but can also be mounted to gear reducers, hoists, machinery or utilize a foot mount kit.

The brake should be located on the high speed shaft of a power transmission system. This permits a brake with the lowest possible torque to be selected for the system.

Spring set disc brakes use friction to stop (dynamic torque) and hold (static torque) a load. Energy of the motor rotor and moving load is converted to thermal energy (heat) in the brake during deceleration. The brakes are power released, spring applied. No electrical current is required to maintain the spring set condition.

The system designer will need to consider the mount surface and match the brake to the load and application. Factors include: brake torque, stopping time, deceleration rate, load weight and speed, location and environment. Brake thermal ratings, electrical requirements and environmental factors are discussed in separate sections.

Electrical Considerations

Solenoid actuated brakes (SAB's) are available with standard motor voltages, frequencies and Class B or H coil insulation. Most models can be furnished with either single or dual voltage coils. Coils in most models are field replaceable.

Inrush and holding amperage information is published for the common coil voltages and factory available for other voltages or frequencies. Amperage information for specific coil sizes is provided for selection of wire size and circuit protection at brake installation. Fixed voltage - 50/60 Hz dual frequency coils are available in many models.

All SAB AC coils are single phase and can be wired to either single or three phase motors without modifications. All solenoid coils have a voltage range of +/- 10% of the rated nameplate voltage at the rated frequency. Instantaneous rated voltage must be supplied to the coil to insure proper solenoid pull in and maximum coil cycle rate. The plunger rapidly seats in the solenoid and the

amperage requirements drops to a holding amperage value.

Instantaneous voltage must be supplied to the coil to insure proper solenoid pull-in and maximum coil cycle rate.

Because Stearns Solenoid Actuated Brakes (SAB's) require low current to maintain the brake in the released position, the response time to set the brake *can* be affected by EMF voltages generated by the motor windings. It may be necessary to isolate the brake coil from the motor winding.

The solenoid coil cycle rate limits the engagements per minute of a static or holding duty brake. Brake thermal performance, discussed in another section, limits engagements per minute in dynamic applications.

Class B insulation is standard in most SAB models, class H coil insulation is optional and is recommended for environments above 104°F (40°C), or rapid cycling applications.

Armature actuated brakes (AAB's) are available in standard DC voltages. Available AC rectification is listed in the catalog section. Wattage information is provided in the catalog pages. Unlike solenoid actuated brakes, armature actuated brakes do not have inrush amperage. Coil and armature reaction time and resulting torque response time information is available. Like SAB, mechanical reaction time depends on typical application factors including load, speed and position.

Electrical response time and profiles are unique to the SAB and AAB. Reaction time requirements should be considered when selecting or interchanging brakes.

All Stearns brake coils are rated for continuous duty and can be energized continually without overheating. The coil heating effect is greatest at coil engagement due to engaging, pull in or inrush amperage.

Temperature limits as established by UL controls standards are:

Class A insulation	221°F (105°C)
Class B insulation	266°F (130°C)
Class H insulation	356°F (180°C).

Types of Applications

In order to simplify the selection of a disc brake, loads can be classified into two categories, non-overhauling and overhauling.

Loads are classified as non overhauling, if (1) no components of the connected equipment or external material undergo a change of height, such as would occur in hoisting, elevating or lowering a load, and (2) there is only rotary motion in a horizontal plane. For example, a loaded conveyor operating in a horizontal plane

would be typical of a non-overhauling load.

If the same conveyor were transporting material to a lower level, it would be classified as an overhauling load. The external material or load undergoes a change in height, with the weight of the load attempting to force the conveyor to run faster than its design speed or to overhaul.

Non-overhauling loads require braking torque only to stop the load and will remain at rest due to system friction. Overhauling loads, such as a crane hoist, have two torque requirements. The first requirement is the braking torque required to *stop* the load, and the second requirement is the torque required to *hold* the load at rest. The sum of these requirements is considered when selecting a brake for an overhauling load.

Alignment

Requirements per NEMA:

Permissible ECCENTRICITY of mounting rabbet (AK dimension):

42C to 286TC frames inclusive is 0.004" total indicator reading. 324TC to 505TC frames inclusive is 0.007" total indicator reading.

Face Runout:

42C to 286TC frames inclusive is 0.004" total indicator reading.

If a customer furnishes a face on the machine for brake mounting, the same tolerances apply. Floor mounted brakes must be carefully aligned within 0.005" for concentricity and angular alignment. Use of dowels to insure permanent alignment is recommended.

In offset brake mount locations such as fan covers, cowls or jack shafting, proper mount rigidity and bearing support must be provided. Spring set frictional brakes characteristically have a rapid stop during torque application which may affect the mount surface or contribute to shaft deflection.

Printed installation information is published and available on all Stearns spring set brakes.

Determining Brake Torque

Torque ratings

Brake torque ratings are normally expressed as nominal static torque. That is, the torque required to begin rotation of the brake from a static, engaged condition. This value is to be distinguished from dynamic torque, which is the retarding torque required to stop a linear, rotating or overhauling load.

As a general rule, a brake's dynamic torque is approximately 80% of the static torque rating of the brake for stopping time up to one second. Longer stopping time will produce additional brake heat and possible fading (reduction) of dynamic torque. The required dynamic torque must be converted to a static torque value before selecting a brake, using the relationship:

$$T_s = \frac{T_d}{0.8}$$

Where, T_s = Static torque, lb-ft

T_d = Dynamic torque, lb-ft

0.8 = Constant
(derating factor)

All Stearns brakes are factory burnished and adjusted to produce no less than rated nominal static torque. Burnishing is the initial wear-in and mating of the rotating friction discs with the stationary metallic friction surfaces of the brake.

Although brakes are factory burnished and adjusted, variations in torque may occur if components are mixed when disassembling and reassembling the brake during installation. Further burnishing may be necessary after installation. Friction material will burnish under normal load conditions. Brakes used as holding only duty require friction material burnishing at or before installation to insure adequate torque.

When friction discs are replaced, the brake must be burnished again in order to produce its rated holding torque.

System Friction

The friction and rolling resistance in a power transmission system is usually neglected when selecting a brake. With the use of anti-friction bearings in the system, friction and rolling resistance is usually low enough to neglect. Friction within the system will assist the brake in stopping the load. If it is desired to consider it, subtract the frictional torque from the braking torque necessary to decelerate and stop the load. Friction and rolling resistance are neglected in the examples presented in this guide.

Non-overhauling Loads

There are two methods for determining brake torque for non-overhauling loads. The first method is to size the brake to the torque of the motor. The second is to select a brake on the basis of the total system or load inertia to be stopped.

Selecting Brake Torque from the Motor Data

Motor full-load torque based on nameplate horsepower and speed can be used to select a brake. This is the most common method of selecting a brake torque rating due to its simplicity.

This method is normally used for simple rotary and linear inertial loads. Brake torque is usually expressed as a percent of the full load torque of the motor. Generally this figure is not less than 100% of the motor's full load torque. Often a larger service factor is considered. Refer to *Selection of Service Factor*.

The required brake torque may be calculated from the formula:

$$T_s = \frac{5,252 \times P}{N} \times SF$$

Where, T_s = Static brake torque, lb-ft

P = Motor horsepower, hp

N = Motor full load speed, rpm

SF = Service factor

5,252 = Constant

Match the brake torque to the hp used in the application. When an oversized motor hp has been selected, brake torque based on the motor hp may be excessive for the actual end use.

Nameplate torque represents a nominal static torque. Torque will vary based on combinations of factors including cycle rate, environment, wear, disc burnish and flatness. Spring set brakes provide a rapid stop and hold and are generally not used in repeat positioning applications.

Selection of Service Factor

A service factor is applied to the basic drive torque calculation. The SF compensates for any tolerance variation, data inaccuracy, unplanned transient torque and potential variations of the friction disc.

When using the basic equation:

$T = (\text{hp} \times 5252) / \text{rpm}$ with non-overhauling loads, a service factor of 1.2 to 1.4 is typical. Overhauling loads with unknown factors such as reductions may use a service factor of 1.4 to 1.8.

Spring set brakes combined with variable frequency drives use service factors ranging from 1.0 to 2.0 (2.0 for holding duty only) depending on the system design. These holding duty brakes must be wired to a separate dedicated power supply.

Occasionally, a brake with a torque rating less than the motor full load torque or with a service factor less than 1.0 is selected. These holding or soft stop applications must be evaluated by the end user or system designer to insure adequate sizing and thermal capacity.

Typically a brake rated 125% of the motor full load torque, or with a 1.25 service factor, provides a stop in approximately the same time as that required for the motor to accelerate the load to full load speed.

Occasionally a motor is oversized or undersized for the load or application. In these situations, the load inertia and desired stopping time calculations should be used rather than relying on the service factor method alone.

Service factor selection can be based on motor performance curves. Motor rotor and load inertia should be considered in this selection process. Depending on the motor design (NEMA A, B, C and D), rpm and horsepower, the maximum torque is either the starting or breakdown torque. A NEMA design B, 3 phase, squirrel cage design motor at breakdown torque produces a minimum of 250% the full load torque. A service factor of 2.5 would be selected. Typical service factors depending on NEMA motor design are: NEMA design A or B: 1.75 to 3.0, NEMA design C: 1.75 to 3.0 and NEMA design D: not less than 2.75.

A brake with an excessive service factor may result in system component damage, an unreasonably rapid stop or loss of load control. A SF above 2.0 is not recommended without evaluation by the end user or system designer.

Example 1: Select brake torque from motor horsepower and speed.

Given: Motor power (P) - 5 hp

Motor speed (N) - 1,750 rpm

Service factor (SF) - 1.4

$$T = \frac{5,252 \times P}{N} \times SF$$

$$= \frac{5,252 \times 5}{1,750} \times 1.4$$

$$T = 21 \text{ lb-ft}$$

A brake having a standard rating of 25 lb-ft nominal static torque would be selected.


Example 2 illustrates selection of a brake to provide proper static torque to hold a load if dynamic braking were used to stop the load.

Example 2: Select a brake to hold a load in position after some other method, such as dynamic braking of the motor, has stopped all rotation.

Given: Weight of load (W) - 5 lb

Drum radius (R) - 2 ft

Service factor (SF) - 1.4

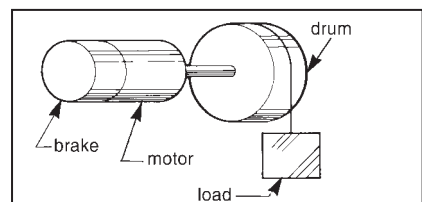

The static holding torque is determined by the weight of the load applied at the drum radius. A service factor is applied to ensure sufficient holding torque is available in the brake.

$$T_s = F \times R \times SF$$

$$= 5 \times 2 \times 1.4$$

$$T_s = 14 \text{ lb-ft}$$

Sizing the Brake to the Inertial Load

For applications where the load data is known, where high inertial loads exist, or where a stop in a specified time or distance is required, the brake should be selected on the basis of the total inertia to be retarded. The total system inertia, reflected to the brake shaft speed, would be:

$$Wk_T^2 = Wk_B^2 + Wk_M^2 + Wk_L^2$$

Where: Wk_T^2 = Total inertia reflected to the brake, lb-ft²

Wk_B^2 = Inertia of brake, lb-ft²

Wk_M^2 = Inertia of motor rotor, lb-ft²

Wk_L^2 = Equivalent inertia of load reflected to brake shaft, lb-ft²

Other significant system inertias, including speed reducers, shafting, pulleys and drums, should also be considered in determining the total inertia the brake would stop.

If any component in the system has a rotational speed different than the rotational speed of the brake, or any linear moving loads are present, such as a conveyor load, their equivalent inertia in terms of rotary inertia at the brake rotational speed must be determined. The following formulas are applicable:

Rotary motion:

$$\text{Equivalent } Wk_B^2 = Wk_L^2 \left(\frac{N_L}{N_B} \right)^2$$

Where,

Equivalent Wk_B^2 = Inertia of rotating load reflected to brake shaft, lb-ft²

Wk_L^2 = Inertia of rotating load, lb-ft²

N_L = Shaft speed at load, rpm

N_B = Shaft speed at brake, rpm

Horizontal Linear Motion

$$\text{Equivalent } Wk_W^2 = W \left(\frac{V}{2\pi N_B} \right)^2$$

Where,

Equivalent Wk_W^2 = Equivalent inertia of linear moving load reflected to brake shaft, lb-ft²

W = Weight of linear moving load, lb

V = Linear velocity of load, ft/min

N_B = Shaft speed at brake, rpm

Once the total system inertia is calculated, the required average dynamic braking torque can be calculated using the formula:

$$T_d = \frac{Wk_T^2 \times N_B}{308 \times t}$$

Where, T_d = Average dynamic braking torque, lb-ft

Wk_T^2 = Total inertia reflected to brake, lb-ft²

N_B = Shaft speed at brake, rpm

t = Desired stopping time, sec

308 = Constant

The calculated dynamic torque is converted to the static torque rating using the relationship:

$$T_s = \frac{T_d}{0.8}$$

Where, T_s = Brake static torque, lb-ft

T_d = System dynamic torque, lb-ft

Examples 3, 4, 5 and 6 illustrate how brake torque is determined for non-overhauling loads where rotary or horizontal linear motion is to be stopped.

Example 3: Select a brake to stop a rotating flywheel in a specified time.

Given, Motor speed (N_M) - 1,750 rpm

Motor inertia (Wk_M^2) - 0.075 lb-ft²

Flywheel inertia (Wk_{FW}^2) - 4 lb-ft²

Brake inertia (Wk_B^2) - 0.042 lb-ft²


Required stopping time (t) - 1 sec

First determine the total inertia to be stopped,

$$Wk_T^2 = Wk_M^2 + Wk_{FW}^2 + Wk_B^2$$

$$= 0.075 + 4 + 0.042$$

$$Wk_T^2 = 4.117 \text{ lb-ft}^2$$

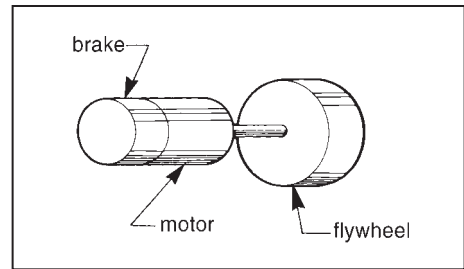

The dynamic braking torque required to stop the total inertia in 1 second is,

$$T_d = \frac{Wk_T^2 \times N_{BM}}{308 \times t}$$

$$= \frac{4.117 \times 1,750}{308 \times 1}$$

$$T_d = 23.4 \text{ lb-ft}$$

Converting T_d to static torque

$$T_s = \frac{T_d}{0.8}$$

$$= \frac{23.4}{0.8}$$

$$T_s = 29.3 \text{ lb-ft}$$

A brake having a standard static torque rating of 35 lb-ft would be selected. Since a brake with more torque than necessary to stop the flywheel in 1 second is selected, the stopping time would be,

$$t = \frac{Wk_T^2 \times N_{BM}}{308 \times T_d}$$

$$= \frac{Wk_T^2 \times N_{BM}}{308 \times (0.8 T_s)}$$

$$= \frac{4.117 \times 1,750}{308 \times (0.8 \times 35)}$$

$$t = 0.84 \text{ sec}$$

See section on *Stopping Time and Thermal Information*.

Example 4: Select a brake to stop a rotating flywheel, driven through a gear reducer, in a specified time.

Given: Motor speed (N_M) - 1,800 rpm


Motor inertia (Wk_M^2) - 0.075 lb-ft²

Gear reduction (GR) - 20:1

Gear reducer inertia at high speed shaft (Wk_{GR}^2) - 0.025 lb-ft²

Flywheel inertia (Wk_{FW}^2) - 20 lb-ft²

Required stopping time (t) - 0.25 sec

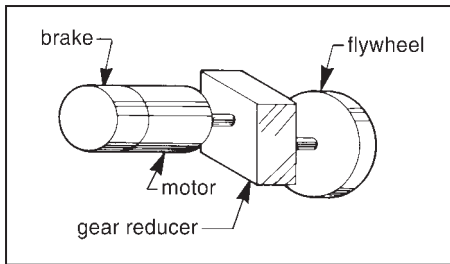

First, determine rotating speed of flywheel (N_{FW})

$$N_{FW} = \frac{N_{BM}}{GR}$$

$$= \frac{1,800}{20}$$

$$N_{FW} = 90 \text{ rpm}$$

Next, the inertia of the flywheel must be reflected back to the motor brake shaft.

$$Wk_B^2 = Wk_{FW}^2 \left(\frac{N_{FW}}{N_M} \right)^2$$

$$= 20 \left(\frac{90}{1,800} \right)^2$$

$$Wk_B^2 = 0.05 \text{ lb-ft}^2$$

Determining the total Wk^2 ,

$$Wk_T^2 = Wk_M^2 + Wk_{GR}^2 + Wk_B^2$$

$$= 0.075 + 0.025 + 0.05$$

$$Wk_T^2 = 0.15 \text{ lb-ft}^2$$

The required dynamic torque to stop the flywheel in 0.25 seconds can now be determined.

$$T_d = \frac{Wk_T^2 \times N_{BM}}{308 \times t}$$

$$T_d = \frac{0.15 \times 1,800}{308 \times 0.25}$$

$$T_d = 3.5 \text{ lb-ft}$$

Converting dynamic torque to static torque,

$$T_s = \frac{T_d}{0.8}$$

$$= \frac{3.5}{0.8}$$

$$T_s = 4.4 \text{ lb-ft}$$

A brake having a standard static torque rating of 6 lb-ft would be selected. Since a brake with more torque than necessary to stop the flywheel in 0.25 seconds is selected, the stopping time would be,

$$t = \frac{Wk_T^2 \times N_M}{308 \times T_d}$$

$$= \frac{Wk_T^2 \times N_M}{308 \times (0.8 \times T_s)}$$

$$= \frac{0.15 \times 1,800}{308 \times (0.8 \times 6)}$$

$$t = 0.18 \text{ sec}$$

See section on *Stopping Time and Thermal Information*.

Example 5: Select a brake to stop a load on a horizontal belt conveyor in a specified time.

Given:


Conveyor pulley speed (N_p) - 32 rpm

Weight of load (W) - 30 lb

Conveyor pulley and belt inertia (Wk_p^2) - 4.0 lb-ft²

Conveyor pulley diameter (d_p) - 1 ft

Required stopping time (t) - 0.25 sec

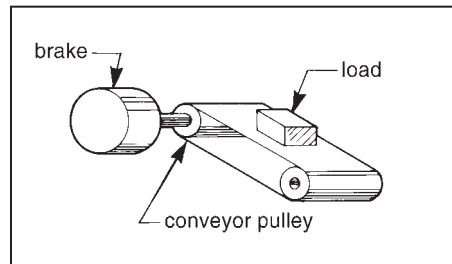

First, convert the rotational pulley speed to linear belt speed (V_B).

$$V_B = \pi d_p N_p$$

$$= \pi \times 1 \times 32$$

$$V_B = 100.5 \text{ ft/min}$$

Next, determine inertia of load.

$$Wk_W^2 = W \left(\frac{V_B}{2\pi \times N_p} \right)^2$$

$$= 30 \left(\frac{100.5}{2\pi \times 32} \right)^2$$

$$Wk_W^2 = 7.5 \text{ ft-lb}^2$$

Then, determine total inertial load

$$Wk_T^2 = Wk_W^2 + Wk_p^2$$

$$= 7.5 + 4.0$$

$$Wk_T^2 = 11.5 \text{ lb-ft}^2$$

The required dynamic torque to stop the conveyor load in 0.25 seconds can now be determined.

$$T_d = \frac{Wk_T^2 \times N_p}{308 \times t}$$

$$T_d = \frac{11.5 \times 32}{308 \times 0.25}$$

$$T_d = 4.8 \text{ lb-ft}$$

Converting dynamic torque to static torque,

$$T_s = \frac{T_d}{0.8}$$

$$= \frac{4.8}{0.8}$$

$$T_s = 6 \text{ lb-ft}$$

A brake having a standard static torque rating of 6 lb-ft would be selected. See *Thermal Information*.

Example 6: Select a brake to stop a trolley crane and its load in a specified time. Brake mounted on wheel axle.

Given:


Weight of crane (W_c) - 2,000 lb

Weight of load (W_L) - 100 lb

Trolley velocity (v) - 3 ft/sec or 180 ft/min

Radius of trolley wheel (r) - 0.75 ft

Required stopping time (t) - 2 sec

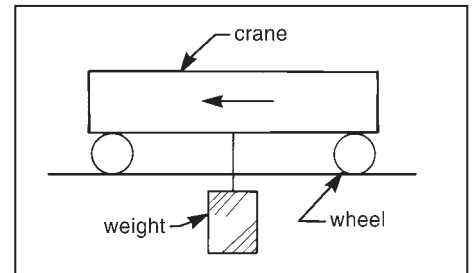

The dynamic braking torque required to stop the trolley crane and load can be determined by one of two methods. The first method is to determine the equivalent inertia of the linearly moving crane and load, then calculate the dynamic braking torque. The second method is to determine the dynamic braking torque directly.

Using the first method, the total weight to be stopped is determined first.

$$W_T = W_L + W_C$$

$$= 100 + 2,000$$

$$W_T = 2,100 \text{ lb}$$

Next, the rotational speed of the axle (N_B) is calculated.

$$N_B = \frac{V}{2\pi r}$$

$$= \frac{180}{2 \times \pi \times 0.75}$$

$$N_B = 38.2 \text{ rpm}$$

Then, the equivalent inertia of the linearly moving crane and load is determined.

$$Wk_f^2 = W_T \left(\frac{V}{2\pi N_B} \right)^2$$

$$= 2,100 \left(\frac{180}{2\pi \times 38.2} \right)^2$$

$$Wk_f^2 = 1,181 \text{ lb-ft}^2$$

Finally, the dynamic braking torque required to stop the total inertia in 2 seconds is,

$$T_d = \frac{Wk_f^2 \times N_B}{308 \times t}$$

$$= \frac{1,181 \times 38.2}{308 \times 2}$$

$$T_d = 73 \text{ lb-ft}$$

Using the second method, the dynamic braking torque required to stop the crane and load in 2 seconds can be calculated directly using the formula,

$$T_d = \frac{W_T \cdot V}{g \cdot t} \times r$$

Where, T_d = Average dynamic braking torque, lb-ft

W_T = Total weight of linear moving load, lb

v = Linear velocity of load, ft/sec

g = Gravitational acceleration constant, 32.2 ft/sec²

t = Desired stopping time, sec

r = Length of the moment arm (wheel radius), ft

or, for this example,

$$T_d = \frac{2,100 \times 3}{32.2 \times 2} \times 0.75$$

$$T_d = 73 \text{ lb-ft}$$

For both methods above, the required dynamic braking torque is converted to static torque,

$$T_s = \frac{T_d}{0.8}$$

$$= \frac{73}{0.8}$$

$$T_s = 91 \text{ lb-ft}$$

A smaller brake could be mounted on the high speed shaft in place of the higher torque on the low speed shaft.

A brake having a standard static torque rating of 105 lb-ft is selected. Since a brake with more torque than necessary to stop the load in 2 seconds is selected, the stopping time would be,

$$T = \frac{W_T \cdot V}{g \cdot T_d} \times r$$

$$= \frac{W_T \cdot V}{g \times (0.8 \times T_s)} \times r$$

$$= \frac{2,100 \times 3}{32.2 \times (0.8 \times 105)} \times 0.75$$

$$t = 1.8 \text{ sec}$$

See section on *Stopping Time* and cycle rates, *Thermal Selection*. Stops should be under 2 seconds. Longer stops require application test.

Overhauling Loads

Applications with a descending load, such as power lowered crane, hoist or elevator loads, require a brake with sufficient torque to both *stop* the load, and *hold* it at rest. Overhauling loads having been brought to rest still invite motion of the load due to the effect of gravity. Therefore, brake torque must be larger than the overhauling torque in order to stop and hold the load. If brake torque is equal to or less than the overhauling torque, there is no net torque available for stopping a descending load.

First, the total system inertia reflected to the brake shaft speed must be calculated.

Second, the average dynamic torque required to decelerate the descending load in the required time is calculated with the formula:

$$T_d = \frac{Wk_f^2 \times N_B}{308 \times t}$$

Where, T_d = Average dynamic braking torque, lb-ft

Wk_f^2 = Total inertia reflected to brake, lb-ft²

N_B = Shaft speed at brake, rpm.
Consider motor slip when descending.

t = Desired stopping time, sec

Third, the overhauling torque reflected to the brake shaft is determined by the formula:

$$T_o = W \times R \times \frac{N_L}{N_B}$$

Where, T_o = Overhauling dynamic torque of load reflected to brake shaft, lb-ft

W = Weight of overhauling load, lb

R = Radius of hoist or elevator drum, ft

N_L = Rotating speed of drum, rpm

N_B = Rotating speed at brake, rpm

Or alternately, the dynamic torque to overcome the overhauling load can be calculated with the formula:

$$T_o = \frac{0.158 \times W \times V}{N_B}$$

Where, T_o = Overhauling dynamic torque of load reflected to brake shaft, lb-ft

W = Weight of overhauling load, lb

V = Linear velocity of descending load, ft/min

N_B = Shaft speed at brake, rpm

0.158 = Constant

Next, the total dynamic torque required to stop and hold the overhauling load is the sum of the two calculated dynamic torques:

$$T_t = T_d + T_o$$

Finally, the dynamic torque must be converted to static brake torque to select a brake:

$$T_s = \frac{T_d}{0.8}$$

Where, T_s = Brake static torque, lb-ft

T_t = System dynamic torque, lb-ft

If the total inertia of the system and overhauling load cannot be accurately determined, a brake rated at 180% the motor full load torque should be selected. Refer to *Selection of Service Factor*. The motor starting torque may permit a heavier than rated load to be lifted; the brake must stop the load when descending.

Examples 7, 8 and 9 illustrate how brake torque would be determined for overhauling loads. In these examples brakes are selected using the system data rather than sizing them to the motor. Refer to the section on *Thermal Calculations* to determine cycle rate.

Consider motor slip in calculation. An 1800 rpm motor with 10% slip would operate at 1,620 rpm when the load is ascending and 1,980 rpm when descending. Motor rpm, armature inertia and load position will affect stop time. Brakes on overhauling loads should be wired through a dedicated relay.

Example 7: Select a brake to stop an overhauling load in a specified time.


Given: Cable speed (V) - 667 ft/min
Weight of load (W) - 100 lb
Drum diameter (D) - 0.25 ft
Drum inertia (Wk_d^2) - 5 lb-ft²
Required stopping time (t) - 1 sec

First, determine brakemotor shaft speed (N_B).

$$N_B = \frac{V}{\pi D}$$

$$= \frac{667}{\pi \times 0.25}$$

$$N_B = 849 \text{ rpm}$$

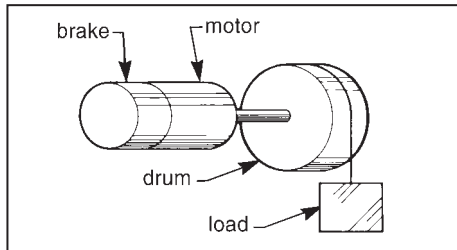

Then, determine the equivalent inertia of the overhauling load.

$$Wk_f^2 = W \left(\frac{V}{2\pi N_B} \right)^2$$

$$= 100 \left(\frac{667}{2\pi \times 849} \right)^2$$

$$Wk_f^2 = 1.56 \text{ lb-ft}^2$$

Therefore, the total inertia at the brake is,

$$Wk_f^2 = Wk_d^2 + Wk_f^2$$

$$= 5 + 1.56$$

$$Wk_f^2 = 6.56 \text{ lb-ft}^2$$

Now, the dynamic torque required to decelerate the load and drum in the required time is calculated.

$$T_d = Wk_f^2 \times N_B$$

$$= \frac{6.56 \times 850}{308 \times 1}$$

$$T_d = 18.1 \text{ lb-ft}$$

Next, calculate the dynamic torque required to overcome the overhauling load.

$$T_o = W \times R$$

$$= 100 \times \frac{0.25}{2}$$

$$T_o = 12.5 \text{ lb-ft}$$

The total dynamic torque to stop and hold the overhauling load is the sum of the two calculated dynamic torques.

$$T_t = T_d + T_o$$

$$= 18.1 + 12.5$$

$$T_t = 30.6 \text{ lb-ft}$$

Dynamic torque is then converted to static torque.

$$T_s = \frac{T_t}{0.8}$$

$$= \frac{30.6}{0.8}$$

$$T_s = 38.3 \text{ lb-ft}$$

A brake having a standard torque rating of 50 lb-ft is selected based on expected stop time. Since a brake with more torque than necessary to stop the load in 1 second is selected, the stopping time would be,

$$t = \frac{Wk_f^2 \times N}{308 \times T_d}$$

where,

$$T_s = \frac{T_t}{0.8}$$

$$= \frac{T_d + T_o}{0.8}$$

or,

$$T_d = 0.8T_s - T_o$$

$$= (0.8)(50) - 12.5$$

$$T_d = 27.5 \text{ lb-ft}$$

therefore,

$$t = \frac{6.56 \times 850}{308 \times 27.5}$$


$$t = 0.7 \text{ sec}$$

Wire the brake through a dedicated relay on overhauling loads where stop time or distance is critical. See section on *Stopping time*.

Example 8: Select a brake to stop an overhauling load driven through gear reducer in a specified time.

Given: Motor speed (N_M) - 1,150 rpm
Motor inertia (Wk_M^2) - 0.65 lb-ft²
Gear reduction (GR) - 300:1
Drum diameter (D) - 1.58 ft
Weight of load (W) - 4,940 lb
Drum inertia (Wk_d^2) - 600 lb-ft²
Required stopping time (t) - 0.5 sec

First, calculate all inertial loads reflected to the brakemotor shaft.

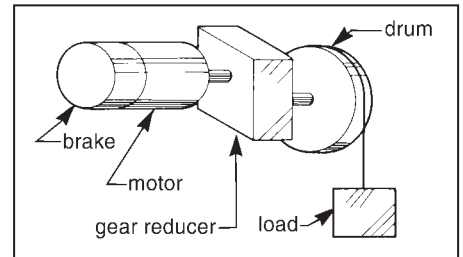

The rotational speed of the drum is,

$$N_D = \frac{N_M}{GR}$$

$$= \frac{1,150}{300}$$

$$N_D = 3.83 \text{ rpm}$$

From this, the cable speed can be determined.

$$V = N_D \times \pi D$$

$$= 3.83 \times \pi \times 1.58$$

$$V = 19.0 \text{ ft/min}$$

The equivalent inertia of the load reflected to the brakemotor shaft is,

$$Wk_f^2 = W \left(\frac{V}{2\pi N_{BM}} \right)^2$$

$$= 4,940 \left(\frac{19.0}{2\pi \times 1,150} \right)^2$$

$$Wk_f^2 = 0.034 \text{ lb-ft}^2$$

The equivalent inertia of the drum at the brakemotor shaft speed is,

$$Wk_d^2 = Wk_B^2 \left(\frac{N_D}{N_{BM}} \right)^2$$

$$= 600 \left(\frac{3.83}{1,150} \right)^2$$

Finally, the total inertia the brake will retard is,

$$Wk_T^2 = Wk_M^2 + Wk_I^2 + Wk_d^2$$

$$Wk_T^2 = 0.0067 \text{ lb-ft}^2$$

$$Wk_T^2 = 0.691 \text{ lb-ft}^2$$

The dynamic torque required to decelerate the total inertia is,

$$T_d = \frac{Wk_T^2 \times N_{BM}}{308 \times t}$$

$$= \frac{0.691 \times 1,150}{308 \times 0.5}$$

$$T_d = 5.16 \text{ lb-ft}^2$$

Now, calculate the dynamic torque to overcome the overhauling load.

$$T_o = W \times R = W \times \frac{1}{2}D$$

$$= 4,940 \times \frac{1.58}{2}$$

$$T_o = 3,903 \text{ lb-ft}$$

Which reflected to the brakemotor shaft becomes,

$$T_m = \frac{T_o}{GR}$$

$$= \frac{3,903}{300}$$

$$T_m = 13.0 \text{ lb-ft}$$

Then, the total dynamic torque to stop and hold the overhauling load is the sum of the two calculated dynamic torques.

$$T_t = T_d + T_m$$

$$= 5.16 + 13.0$$

$$T_t = 18.16 \text{ lb-ft}$$

Dynamic torque is then converted to static torque.

$$T_s = \frac{T_t}{0.8}$$

$$= \frac{18.16}{0.8}$$

$$T_s = 22.7 \text{ lb-ft}$$

A brake having a standard torque rating of 25 lb-ft is selected.

Example 9: Select a brake to stop and hold a load on an inclined plane (skip hoist).

Given: Motor data

Power (P) - 7½ hp
Speed (N_M) - 1,165 rpm
Rotor inertia (Wk_M²) - 1.4 lb-ft²

Gear reducer data:


Reduction (G_R) - 110:1
Inertia at input shaft (Wk_B²) - 0.2 lb-ft²

Drum data

Diameter (D_D) - 1.5 ft
Inertia (Wk_D²) - 75 lb-ft²

Pulley data

Diameter (D_P) - 1.5 ft
Inertia (Wk_P²) - 20 lb-ft²
Bucket weight (W_B) - 700 lb
Maximum weight of load (W_L) - 4,000 lb
Slope of track (B) - 52.7°

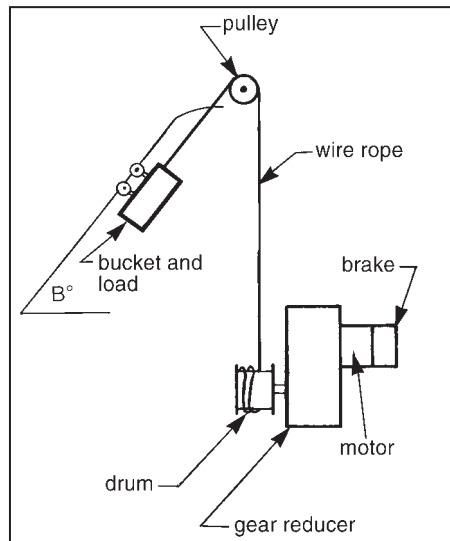

Required stopping time (t) - 1 sec

The bucket is full when ascending the track and is empty when descending. When selecting a brake the most severe condition would be a fully loaded bucket backed down the hoist track. In normal operation the descending bucket would be empty. In this example, the brake is selected for the most severe condition.

The total torque to stop and hold the bucket and load when descending is the sum of (a) the torque to decelerate the total inertia and (b) the torque required to hold the loaded bucket.

First, calculate all inertial loads reflected to the brakemotor shaft. The rotational speed of the drum is:

$$N_D = \frac{N_M}{GR}$$

$$= \frac{1,165}{110}$$

$$N_D = 10.6 \text{ rpm}$$

From this the cable speed can be determined

$$V = N_D \times \pi D_D$$

$$= 10.6 \times \pi \times 1.5$$

$$V = 50 \text{ ft/min}$$

The equivalent inertia of the loaded bucket reflected to the brakemotor shaft is,

$$Wk_I^2 = W \left(\frac{V}{2\pi N_M} \right)^2$$

$$= 4,700 \left(\frac{50}{2\pi \times 1,165} \right)^2$$

$$Wk_I^2 = 0.219 \text{ lb-ft}^2$$

Next, the inertia of the pulley and drum are reflected to the brake motor shaft speed so the total inertia at the brake can be determined.

Since the diameters of the pulley and drum are the same, 1.5 ft, their rotational speeds would be the same, 10.6 rpm.

The inertia of the pulley reflected to the brakemotor shaft is,

$$Wk_P^2 = Wk_B^2 \left(\frac{N_D}{N_M} \right)^2 = Wk_B^2 \left(\frac{1}{GR} \right)^2$$

$$= 20 \times \left(\frac{1}{110} \right)^2$$

$$Wk_P^2 = 0.0017 \text{ lb-ft}^2$$

The inertia of the drum reflected to the brakemotor shaft is,

$$Wk_d^2 = Wk_D^2 \left(\frac{N_D}{N_M} \right)^2 = Wk_D^2 \left(\frac{1}{GR} \right)^2$$

$$= 75 \times \left(\frac{1}{110} \right)^2$$

$$Wk_d^2 = 0.0062 \text{ lb-ft}^2$$

The total inertia to be stopped is,

$$Wk_T^2 = Wk_I^2 + Wk_P^2 + Wk_d^2 + Wk_B^2 + Wk_M^2$$

$$= 0.219 + 0.0017 + 0.0062 + 0.2 + 1.4$$

$$Wk_T^2 = 1.827 \text{ lb-ft}^2$$

Then, the dynamic torque required to bring the descending bucket and load to rest is,

$$T_d = \frac{Wk_T^2 \times N_M}{308 \times T_d}$$

$$T_d = \frac{1.827 \times 1,165}{308 \times 1}$$

The additional dynamic torque required to hold the overhauling load would be determined by the unbalanced component of the force acting along the plane of the hoist track, $W_T \sin B$, and the length of the moment arm which is the drum radius (R_D). $W_T \sin B$ is the force necessary to retard downward motion of the loaded hoist bucket.

$$\begin{aligned} T_O &= W_T \sin B \times R_D \\ &= W_T \sin B \times \frac{1}{2} D_D \\ &= 4,700 \times \sin 52.7^\circ \times \frac{1}{2} (1.5) \\ &= 4,700 \times 0.7955 \times 0.75 \\ T_O &= 2,804 \text{ lb-ft} \end{aligned}$$

Which reflected to the brakemotor shaft becomes,

$$\begin{aligned} T_m &= \frac{T_O}{GR} \\ &= \frac{2,804}{110} \\ T_m &= 25.5 \text{ lb-ft} \end{aligned}$$

Then, the total dynamic torque to stop and hold the descending bucket and load is the sum of the two calculated dynamic torques.

$$\begin{aligned} T_t &= T_d + T_m \\ &= 6.9 + 25.5 \\ T_t &= 32.4 \text{ lb-ft} \end{aligned}$$

Converting to static torque,

$$\begin{aligned} T_s &= \frac{T_t}{0.8} \\ &= \frac{32.4}{0.8} \\ T_s &= 40.5 \text{ lb-ft} \end{aligned}$$

A brake having a standard torque rating of 50 lb-ft is selected. Since a brake with more torque than necessary to stop the load in 1 second is selected, the stopping time would be,

$$\begin{aligned} t &= \frac{W_f^2 \times N_M}{308 \times T_d} \\ \text{Where, } T_s &= \frac{T_t}{0.8} \\ &= \frac{T_d + T_m}{0.8} \\ \text{or, } T_d &= 0.8 T_s - T_m \\ &= (0.8)(50) - 25.5 \\ T_d &= 14.5 \text{ lb-ft} \\ \text{therefore,} \\ t &= \frac{1.827 \times 1,165}{308 \times 14.5} \\ t &= 0.48 \text{ sec} \end{aligned}$$

See section on *Stopping time*.

Stopping Time and Deceleration Rate

In the formulas used to determine dynamic torque, stopping time or "t" in seconds is a desired or assumed value selected on the requirements of the application. For optimum brake performance, a stopping or braking time of 1 second or less is desirable. Stop times between 2 and 3 seconds require test. *A brake of insufficient torque rating will lengthen the stopping time. This may result in overheating of the brake to a point where torque falls appreciably. The friction material could carbonize, glaze, or fail.*

After determining the braking torque required by a system, it may be necessary to recalculate the stopping time based on the actual brake size selected to insure that stopping time falls within the 0 to 2 second range. Any formula, where the stopping time is a variable, may be rewritten to solve for the new stopping time. For instance, the dynamic torque equation may be transposed as follows:

$$\begin{aligned} T_d &= \frac{Wk_f^2 \times N_B}{308 \times t} \\ \text{or, } t &= \frac{Wk_f^2 \times N_B}{308 \times (0.8 \times T_s)} \end{aligned}$$

Where, t = Stopping time, sec

Wk_f^2 = Total inertia reflected to brake, lb-ft²

N_B = Shaft speed at brake, rpm

T_s = Nominal static torque rating of brake, lb-ft

T_d = Dynamic braking torque ($0.8 \times T_s$), lb-ft

0.8 = Constant (derating factor)

308 = Constant

Brakes are rated in static torque. This value is converted to dynamic torque, as done in the above equation, when stopping time is calculated. That is,

$$T_d = 0.8 \times T_s$$

Where, T_d = Dynamic braking torque, lb-ft

T_s = Nominal static torque rating of brake, lb-ft

The approximate number of revolutions the brake shaft makes when stopping is:

$$\text{Revolutions to stop} = \frac{t \times N_B}{120}$$

Where, t = Stopping time, sec

N_B = Shaft speed at brake, rpm

120 = Constant

The average rate of deceleration when braking a linearly moving load to rest can be calculated using the stopping time determined by the above formula and the initial linear velocity of the load.

$$a = \frac{V_i}{t}$$

Where, a = Deceleration, ft/sec²

V_i = Initial linear velocity of load, ft/sec

t = Stopping time, sec

RPM Considerations

The maximum allowable rotational speed of the brake should not be exceeded in braking. Maximum brake rpm as listed in the catalog is intended to limit stopping time to 2 seconds or less and insure friction disc stability. Brakes are not dynamically balanced because of the low brake inertia.

Determining Required Thermal Capacity

Thermal Ratings

When a brake stops a load, it converts mechanical energy to thermal energy or heat. The heat is absorbed by components of the brake. This heat is then dissipated by the brake. The ability of a given brake to absorb and dissipate heat without exceeding temperature limitations is known as thermal capacity.


There are two categories of thermal capacity for a brake. The first is the *maximum* energy the brake can absorb in one stop, generally referred to as a "crash" or "emergency" stop. The second is the heat dissipation capability of the brake when it is cycled frequently. *To achieve optimum brake performance, the thermal rating should not be exceeded. They are specified for a predetermined maximum temperature rise of the brake friction material.*

The ability of a brake to absorb and dissipate heat is determined by many factors, including the design of the brake, the ambient temperature, brake enclosure, position of the brake, the surface that the brake is mounted to, and the altitude.

The rating for a given brake is the maximum allowable. Longer brake life results when the brake has more thermal capacity than a power transmission requires. Much shorter life or brake failure will result when the thermal capacity rating is exceeded. Ratings are determined at an ambient temperature of 72°F (22°C), with the brake in a horizontal position, with a stopping time of 1 second or less, and with no external heat source such as a motor.

Ambient temperature will limit the thermal capacity of a brake. Temperatures above 72°F (22°C) require derating of the thermal capacity rating. For example, at 150°F, thermal capacity is reduced approximately 30% (see *Derating Thermal Capacity Chart*).

CHART: Derating Thermal Capacity

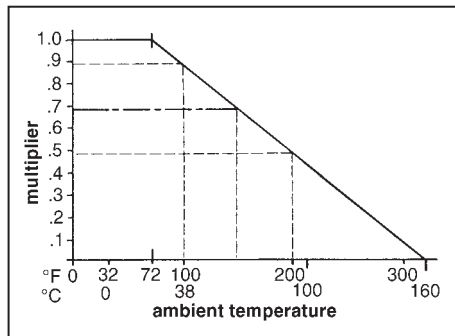

A temperature range of 20°F (0°C) to 104°F (40°C) is acceptable in most brake applications. Above 104°F also consider Class H coil insulation.

Thermal capacity ratings are determined with enclosures on the brake. Other customer furnished covers or cowls may affect a brake's thermal capacity. The effect on thermal capacity should be evaluated. In some cases, thermal capacity may be increased by use of air or liquid cooling. However, provisions must be made to prevent contaminating the brake internally.

Brakes with brass stationary discs are derated 25%.


The mounting position of a brake will also affect thermal capacity. The specified ratings are for brakes mounted in a horizontal position with the solenoid plunger above the solenoid. For brakes mounted in a vertical position, or 15° or more from horizontal, the thermal capacity decreases due to friction disc drag. Brakes are modified for vertical operation to minimize the drag. 2- and 3- disc brakes are derated 25%, 4-disc brakes are derated 33%. 4- and 5-disc brakes are not recommended for vertical use.

Thermal capacity ratings are established without external sources of heat increasing the brake temperature. The surface that a brake is mounted to, such as an electric

motor or gear reducer, will limit the heat dissipation capability or thermal capacity of a brake. These sources of heat should be evaluated when determining the thermal requirements of the system for which the brake is selected.

High altitudes may also affect a brake's thermal capacity. Stearns brakes will operate to 10,000 ft above sea level at 72°F (22°C) ambient temperature. At 104°F (40°C) ambient temperature, altitude and temperature adjustments occur. Refer to *NEMA MG1-1993 Section 14* for additional information.

CHART: Altitude & Thermal Capacity

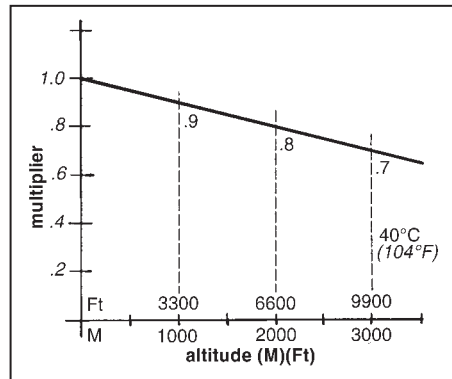

Maximum Energy Absorption

The thermal capacity of a brake is limited by the maximum energy it can absorb in one stop. This factor is important when stopping extremely high inertial loads at infrequent intervals. Such use of a brake requires extensive cooling time before it can be operated again.

The energy a brake is required to absorb in one stop by a given power transmission system is determined by the formulas below. *The calculated energy of the system should not exceed the maximum kinetic energy rating of the brake. System energy exceeding the brake's maximum rating may result in overheating of the brake to a point where torque falls appreciably. The friction material of the brake could glaze, carbonize or fail.*

In the case of linear loads, the energy that the brake must absorb is kinetic energy. It is determined by the formula:

$$KE_L = \frac{W_v^2}{2g}$$

KE_L = Kinetic energy of linear moving load, lb-ft

W = Weight of load, lb

v = Linear velocity of load, ft/sec

g = Gravitational acceleration constant, 32.2 ft/sec²

In the case of rotational loads, the energy that the brake must absorb is also kinetic energy. It is determined by the formula:

$$KE_r = \frac{Wk_r^2 \times N_b^2}{5875}$$

Where, KE_r = Kinetic energy of linear load, lb-ft

Wk_r^2 = Inertia of the rotating load reflected to brake shaft, lb-ft²

N_b = Shaft speed at brake, rpm

5875 = Constant

In the case of overhauling loads, both the kinetic energy of the linear and rotating loads and the potential energy transformed into kinetic energy by the change in height or position must be considered when determining the total energy that the brake must absorb. The potential energy transformed to kinetic energy is determined by the formula:

$$PE = W_s$$

Where, PE = Change in potential energy, ft-lb

W = Weight of overhauling load, lb

s = Distance load travels, ft

Thus, the total energy to be absorbed by a brake stopping an overhauling load is:

$$E_T = KE_L + KE_r + PE$$

Example 10 illustrates how energy absorption for Example 8 would be determined for one stop.

Example 10: Determine the total energy absorbed by a brake in one stop.

In Example 8, the calculation for total energy to be absorbed would be as follows.

First, calculate the kinetic energy of the linear load. The load weight was 4,940 lb and the velocity is 19 ft/min or 0.317 ft/sec. The kinetic energy is:

$$KE_L = \frac{W_v^2}{2g} = \frac{4,940 \times 0.317^2}{2 \times 32.2}$$

$$KE_L = 7.71 \text{ ft-lb}$$

Next, calculate the kinetic energy for the rotational load. The motor inertia is 0.65 lb-ft² and the drum inertia reflected to the brake shaft speed is 0.0067 lb-ft². The total rotational inertia at the brakemotor shaft is,

$$\begin{aligned} Wk_i^2 &= Wk_m^2 + Wk_d^2 \\ &= 0.65 + 0.0067 \\ Wk_i^2 &= 0.6567 \text{ lb-ft}^2 \end{aligned}$$

And the kinetic energy of the rotating components is,

$$\begin{aligned} KE_r &= \frac{Wk_i^2 \times N_B^2}{5,875} \\ &= \frac{0.6567 \times 1,150^2}{5,875} \\ KE_i &= 147.8 \text{ ft-lb} \end{aligned}$$

Now, calculate the potential energy converted to kinetic energy due to the change in position of the load while descending. A descending load is the most severe case since potential energy is transformed to kinetic energy that the brake must absorb. A 25 lb-ft brake was selected in Example 8. The 25 lb-ft static torque rating is converted to dynamic torque,

$$\begin{aligned} T_d &= T_s \times 0.8 \\ &= 25 \times 0.8 \\ T_d &= 20 \text{ lb-ft} \end{aligned}$$

Of this torque, 13.0 lb-ft is required to overcome the overhauling load as determined in Example 8. The dynamic torque available to decelerate the load is,

$$\begin{aligned} T_d &= T_t - T_m \\ &= 20 - 13 \\ T_d &= 7 \text{ lb-ft} \end{aligned}$$

The stopping time resulting from this dynamic torque is,

$$\begin{aligned} t &= \frac{Wk_i^2 \times N_M}{308 \times T_d} \\ &= \frac{0.691 \times 1,150}{308 \times 7} \\ t &= 0.369 \text{ sec} \end{aligned}$$

Where, $Wk_i^2 = 0.690 \text{ lb-ft}^2$ is the total inertia the brake is to retard as determined in Example 8. With the load traveling at 19.0 ft/min or 0.317 ft/sec, the distance it will travel is,

$$\begin{aligned} s &= \frac{1}{2} vt \\ &= \frac{1}{2} \times 0.317 \times 0.369 \\ s &= 0.059 \text{ lb-ft} \end{aligned}$$

Wire the brake through a dedicated relay on overhauling loads where stop time or distance is critical. The potential energy transformed to kinetic energy in this distance would be,

$$\begin{aligned} PE &= W_s \\ &= 4,940 \times 0.059 \\ PE &= 291 \text{ ft-lb} \end{aligned}$$

Thus, the total energy to be absorbed by the brake would be,

$$\begin{aligned} E_T &= KE_i + KE_r + PE \\ &= 7.71 + 147.8 + 291 \\ E_T &= 447 \text{ ft-lb} \end{aligned}$$

The 25 lb-ft brake selected in Example 8 should be capable of absorbing 447 ft-lb of energy. The brake's maximum kinetic energy absorption rating should exceed this value.

Motor slip and test loads (150% of load) should be considered both in sizing and thermal calculations.

Brakes overheated in testing will require inspection before using in the standard application.

Heat dissipation in cyclic applications

In general, a brake will repetitively stop a load at the duty cycle that a standard electric motor can repetitively start the load. A brake's thermal capacity is based upon the heat it can absorb and dissipate while cycling. The thermal capacity ratings for brakes are listed in the specification tables for specific brake models.

The energy that a brake is required to absorb and dissipate by a given power transmission system is determined from the total inertia of the load and system, the rotating or linear speed of the load, and the number of times the load is to be stopped in a given time period. The rate of energy dissipation is expressed in horsepower seconds per minute (hp-sec/min). Other common units for energy rates, such as foot pounds per second (ft-lb/sec), can be converted to hp-sec/min using the conversion factors given in the *Technical Data* section.

Refer to the Thermal Capacity Chart for use above 104°F (40°C) ambient temperature.

For applications demanding optimum brake performance, such as high inertial loads and frequent stops, the rate of energy dissipation required by the system is determined using the following formulas. *The calculated rate of energy dissipation should not exceed the thermal capacity of the brake. Thermal dissipation requirements exceeding the brake's rating*

may result in overheating of the brake to a point where torque falls appreciably. The friction material of the brake could glaze, carbonize or fail.

For rotating or linear loads, the rate at which a brake is required to absorb and dissipate heat when frequently cycled is determined by the relationship:

$$\begin{aligned} TC &= \frac{Wk_i^2 \times N_B^2 \times n}{3.2 \times 10^6} \\ \text{Where, } TC &= \text{Thermal capacity required for rotating or linear loads hp-sec/min} \\ Wk_i^2 &= \text{Total system inertia reflected to brake, lb-ft}^2 \\ N_B &= \text{Shaft speed at brake, rpm} \\ n &= \text{Number of stops per minute, not less than 1} \\ 3.2 \times 10^6 &= \text{Constant} \end{aligned}$$

The rotating speed enters the formula as a squared function. Therefore, thermal requirements are of particular significance in systems where the brake will be operated at high speeds.

$$\begin{aligned} TC &= \frac{E_T \times n}{550} \\ \text{Where, } TC &= \text{Thermal capacity required for overhauling loads hp-sec/min} \\ E_T &= \text{Total energy brake absorbs, ft-lb} \\ n &= \text{Number of stops per minute, not less than 1} \\ 550 &= \text{Constant} \end{aligned}$$

For overhauling loads, the rate at which a brake is required to absorb and dissipate heat when frequently cycled is determined by the relationship:

Example 11 illustrates how the required thermal capacity would be determined for Example 4.

Example 11: Determine the thermal capacity required to stop a rotating load frequently.

Referring back to Example 4, the flywheel will be stopped 20 times per minute. The required thermal capacity of the 6 lb-ft brake selected in this example is determined as follows.

The total inertial load the brake is to retard is 0.15 lb-ft². The shaft speed of the brake motor is 1,800 rpm. Therefore, the required thermal capacity is,

$$\begin{aligned} TC &= \frac{Wk_i^2 \times N_B^2 \times n}{3.2 \times 10^6} \\ &= \frac{0.15 \times 1,800^2 \times 20}{3.2 \times 10^6} \\ TC &= 3.0 \text{ hp-sec/min} \end{aligned}$$

The 6 lb-ft brake selected in Example 4 should have a thermal capacity rating equal to or greater than 3.0 hp-sec/min.

A brake with greater thermal capacity will result in greater wear life.

If productivity is to be improved in Example 4 by increasing the cycle rate, the maximum number of stops per minute is determined by the rated thermal capacity of the brake. If the 6 lb-ft brake selected in Example 4 has rated thermal capacity of 9 hp-sec/min, the maximum permissible stops per minute would be determined by transposing the above formula to,

$$n_{\max} = \frac{TC_{\text{rated}} \times (3.2 \times 10^6)}{Wk_f^2 \times N_{\text{st}}^2}$$

$$= \frac{9 \times (3.2 \times 10^6)}{0.15 \times 1,800^2}$$

$$n_{\max} = 59 \text{ stops/min}$$

So, the brake could be operated up to 36 times per minute without exceeding its ability to absorb and dissipate the heat generated by the frequent stops and meet the maximum solenoid cycle rating. *Cycle rate cannot exceed the solenoid cycle rate appearing in the catalog.*

Electrical Considerations

Please see page 118.

Environmental Considerations

Brakes with standard open enclosures when mounted on NEMA C-face motors are drip-proof, except where a manual release lever has a clearance opening in the housing. The standard enclosure is commonly used on open, drip-proof and enclosed motors operating indoors or in protected outdoor environments.

NEMA 4, IP 54 enclosures are available on most brake models and are commonly used for outdoor installations, or where there are moist, abrasive or dusty environments. Standard and severe duty NEMA 4 enclosures are available in some brake series.

Brakes of various styles and materials for above or below deck on ships and dockside installation are available. The materials are usually specified by the ship designers or Navy specification MIL-B-16392C. Brakes are also available to meet MIL-E-17807B for shipboard weapon and cargo elevators. Refer to *Marine, Maritime and Navy Catalog* pages.

Brakes Listed by Underwriters Laboratories, Inc. and certified by Canadian Standards Association are available for use in hazardous locations, including Class I, Groups C and D; and Class II, Groups E, F and G. *Motor-mounted*, hazardous-location electric disc brakes are listed only when mounted to a Listed hazardous-location motor of the same Class and Group at the motor manufacturer's facility, and where the combination has been accepted by UL or CSA. This procedure completes the hazardous duty assembly of the brake. However, foot-mounted hazardous-location disc brakes that are Listed are also available for coupling to a motor, and may be installed by anyone.

Hazardous-location brakes are *not* gasketed unless indicated in the brake description. The enclosure prevents flame propagation to the outside atmosphere through controlled clearances. Protection from weather and washdowns must be provided. If the brake is used in a high humidity or low temperature environment, internal electric heaters should be used.

Standard ambient temperature range for brake operation is from 20°F (0°C) to 104°F (40°C). Refer to *Thermal Ratings* section for brake operation at higher ambient temperatures. Heaters may be available for brake operation at low ambient temperatures and high humidity environments. Ductile iron construction and heaters are recommended for prolonged cold climate use.

Conclusion

The spring-set, electrically released disc brake is an important accessory to electric motors used in cycling and holding operations. It is available in a wide variety of enclosures. In most applications, a brake requires no additional wiring, controls or auxiliary electrical equipment. It is simple to maintain since the replaceable items, the friction discs, can be easily changed.

Many spring-set motor brakes are equipped with features such as simple wear adjustment to provide optimum friction disc life, visual wear indicator, torque adjustment and manual release. Featured on some types of brakes is automatic adjustment to compensate for friction disc wear. This feature eliminates the need for periodic adjustment and is advantageous in remote or inaccessible locations. Not all of the brakes on the market provide all of these features, but there are many Stearns motor brakes offering these features.

Care should be exercised in properly selecting a brake giving due consideration to torque as well as environment and thermal requirements.

On applications where all the pertinent information is not available, selection must be based on previous experience of the designer and user, as well as the brake manufacturer, and should be confirmed by tests under actual operating conditions. If the brake is selected with reasonable allowances made for extremes in operating conditions, it will perform its task with little attention or maintenance.

Formulas

The following formulas cover the basic calculations used in brake application engineering.

Required	Given	Formula
Full load motor torque (T_{flmt}), lb-ft	Horsepower (P), hp Shaft speed (N), rpm 5252 = Constant	$T_{flmt} = \frac{5252 \times P}{N}$
Average dynamic braking torque (T_d), lb-ft	Total inertia reflected to brake (Wk^2), lb-ft ² Shaft speed at brake (N), rpm Desired stopping time (t), seconds 308 = Constant	$T_d = \frac{Wk^2 \times N}{308 \times t}$
Static torque (T), lb-ft	Force (F), lb Pulley or drum radius, (R), ft	$T = F \times R$
Overhauling dynamic torque reflected to brake shaft (T_o), lb-ft	Weight of overhauling load (W), lb Linear velocity of descending load (V), ft/min Shaft speed at brake (N), rpm 0.158 = Constant	$T_o = \frac{0.158 \times W \times V}{N}$
Static torque of brake (T_s), lb-ft (General Guideline)	Dynamic braking torque required (T_d), lb-ft 0.8 = Constant (derating factor)	$T_s = \frac{T_d}{0.8}$
Inertia of rotating load reflected to brake shaft (Wk_b^2), lb-ft ²	Inertia of rotating load (Wk_L^2), lb-ft ² Shaft speed at load (N_L), rpm Shaft speed at brake (N_B), rpm	Equivalent $Wk_b^2 = Wk_L^2 \left(\frac{N_L}{N_B} \right)^2$
Equivalent inertia of linear moving load reflected to brake shaft (Wk_w^2), lb-ft ²	Weight of linear moving load (W), lb Linear velocity of load (V), ft/min Shaft speed at brake (N_B), rpm 2π = Constant	Equivalent $Wk_w^2 = W \left(\frac{V}{2\pi N_B} \right)^2$
Kinetic energy of rotating load, (KE _r), ft-lb	Inertia of rotating load reflected to brake shaft (Wk_b^2), lb-ft ² Shaft speed at brake (N_B), rpm 5875 = Constant	$KE_r = \frac{Wk_b^2 \times N_B^2}{5875}$
Kinetic energy of linear moving load (KE _l), ft-lb	Weight of load (W), lb Linear velocity of load (v), ft/sec g = Gravitational acceleration constant, 32.2 ft/sec ²	$KE_l = \frac{W v^2}{2g}$
Change in potential energy (PE), ft-lb	Weight of overhauling load (W), lb Distance load travels (s), ft	$PE = Ws$
Total energy absorbed by brake (E _T), ft-lb	Total linear kinetic energy, (KE _L), ft-lb Total rotary kinetic energy (KE _R), ft-lb Potential energy converted to kinetic energy (PE), ft-lb	$E_T = KE_L + KE_R + PE$
Thermal capacity required for rotational or linear moving loads (TC), hp-sec/min	Total system inertia reflected to brake shaft (Wk_T^2), lb-ft ² Shaft speed at brake (N_B), rpm Number of stops per minute (n), not less than one 3.2×10^6 = Constant	$TC = \frac{Wk_T^2 \times N_B^2 \times n}{3.2 \times 10^6}$
Thermal capacity required for overhauling loads (TC), hp-sec/min	Total energy brake absorbs (E _T), ft-lb Number of stops per minute (n), not less than one 550 = Constant	$TC = \frac{E_T \times n}{550}$
Linear velocity, ft/min	N = rpm Diameter (D), ft	$V = N\pi D$